


Shelly MOTION Battery Operated Motion Sensor (WiFi) User Guide

[Home](#) » [Shelly MOTION](#) » Shelly MOTION Battery Operated Motion Sensor (WiFi) User Guide 

Shelly MOTION Battery Operated Motion Sensor (WiFi) User Guide

Shelly MOTION

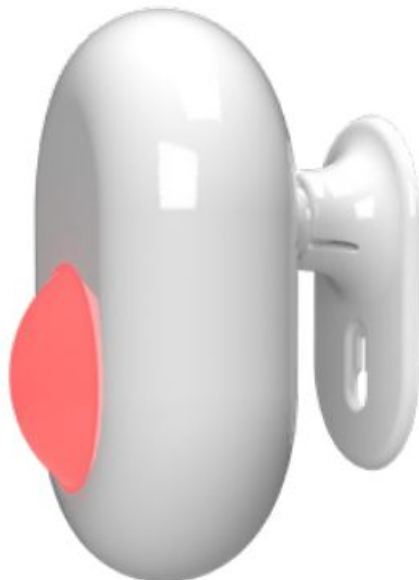

Contents

1 SHELLY MOTION WIFI SENSOR

2 Specification

3 Installation Instructions

4 HOW TO SETUP AND USE

5 BEFORE FIRST USE

6 Documents / Resources

6.1 References

7 Related Posts

SHELLY MOTION WIFI SENSOR

Introduction to Shelly

Shelly® is a family of innovative Devices, which allow remote control of electric appliances through mobile phone, PC or home automation system. Shelly® uses WiFi to connect to the devices controlling it. They can be in the same WiFi network or they can use remote access (through the Internet). Shelly® may work standalone, without being managed by a home automation controller, in the local WiFi network, as well as through a cloud service, from everywhere the User has Internet access. Shelly® has an integrated web server, through which the User may adjust, control and monitor the Device. Shelly® has two WiFi modes – access Point (AP) and Client mode (CM). To operate in Client Mode, a WiFi router must be located within the range of the Device. Shelly® devices can communicate directly with other WiFi devices through HTTP protocol. An API can be provided by the Manufacturer. Shelly® devices may be available for monitor and control even if the User is outside the range of the local WiFi network, as long as the WiFi router is connected to the Internet. The cloud function could be used, which is activated through the web server of the Device or through the settings in the Shelly Cloud mobile application. The User can register and access Shelly Cloud, using either Android or iOS mobile applications, or any internet browser and the web site: <https://my.shelly.cloud/>

What is Shelly Motion

Shelly Motion is high sensitive ultra-low power WiFi Motion sensor which is connected to internet 24/7 and do not need additional HUB to be used. Shelly Motion can detect and send a notification if it detects movement or turns on your lights instantly. The built-in accelerometer serves as a protection when someone tries to remove or move the device, and the built-in light sensor gives additional opportunities for automation of your home or office. Shelly Motion has a built-in 6500mAh battery that allows it to be connected to the Internet for up to 3 years without recharging, and in active transmission between 12 and 18 months.

Specification

- Working temperature -10 ÷ 50°C
- Radio protocol WiFi 802.11 b/g/n
- Frequency 2400 2500 MHz
- Operational range (depending on local construction) up to 50 m outdoors or up to 30 m indoors
- Battery – 6500mAh 3,7V

Visual indications

The Motion Sensor is equipped with a LED diode, signaling sensor's operating modes and alarms.

Blue light non blinking	Inclusion mode
Red light blink	Motion detected and reported
Green light blink	Motion detected, reporting disabled
Blue/Green/Red sequence	Reboot or Vibration detected
Blue light blink	Firmware update
Blue light single blink	Settings change

Button user interaction

- Short press (AP mode) – wake-up from AP sleep mode (AP is only for 3 minute and device power OFF, battery save transportation mode)
- Short press (STA MODE) – send status
- Long press 5 sec (STA mode) – AP mode
- Long press 10 sec (STA mode) – Factory reset Use pin to press the button as shown.



Installation Instructions



CAUTION! Before beginning the installation please read the accompanying documentation carefully and completely. Failure to follow recommended procedures could lead to malfunction, danger to your life or violation of the law. Alterio Robotics is not responsible for any loss or damage in case of incorrect installation or operation of this device.




CAUTION! Do not allow children to play with the device, especially with the Power Button. Keep the devices for remote control of Shelly (mobile phones, tablets, PCs) away from children.

How to assemble and mount the Shelly Motion


1. In your package as seen in **fig. 1** you will find the body of the Shelly Motion, ball arm plate and wall plate.

fig. 1

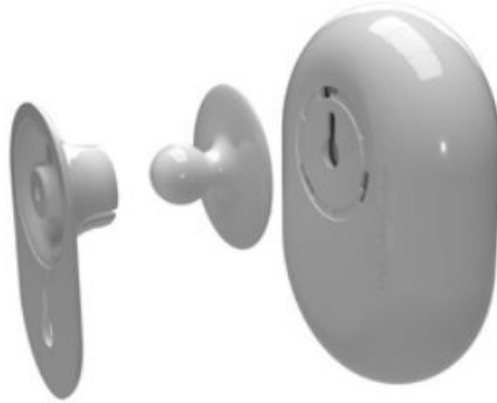

2. Place the ball arm plate onto the body of Shelly Motion as seen in **fig. 2**

fig. 2

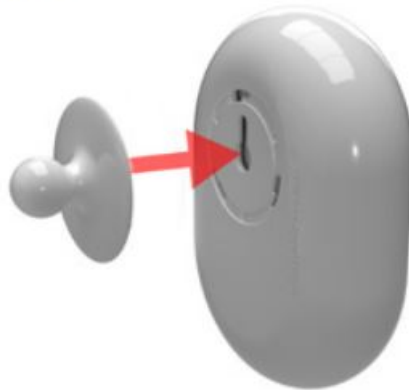


3. Twist the ball arm plate in counter clock-wise direction as seen in **fig. 3**

fig. 3



4. Place the wall plate into the ball arm plate – **fig 4**

fig. 4

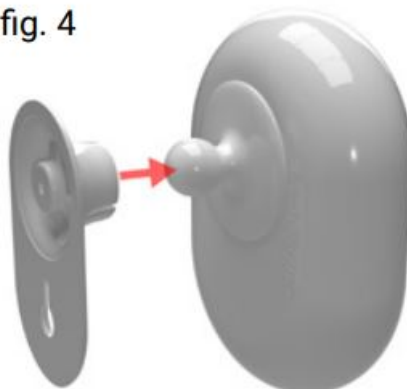

5. The assembled Shelly Motion sensor should look like **fig. 5**

fig. 5



6. Use the locking dowel provided in this package to mount your


Shelly Motion on to the wall.

Shelly Motion area of detection Shelly Motion has an range of 8m or 25ft. Optimal height for mounting is between 2,2m/7,2ft and 2,5m/8,2ft.



CAUTION! Shelly Motion has “No detection” area one meter in front of the sensor – **fig. 6**

fig. 6

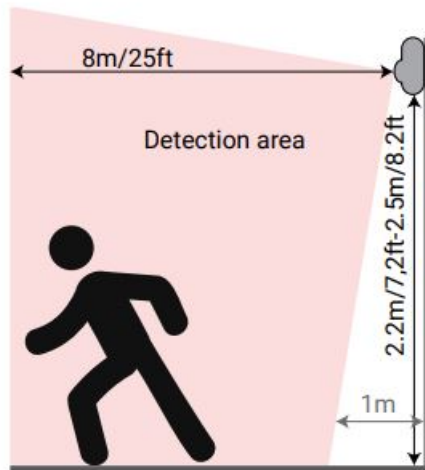

CAUTION! Shelly Motion has “No detection” area one meter behind solid objects(sofa, closet, etc.) – **fig. 7** and **fig. 8**

fig. 7


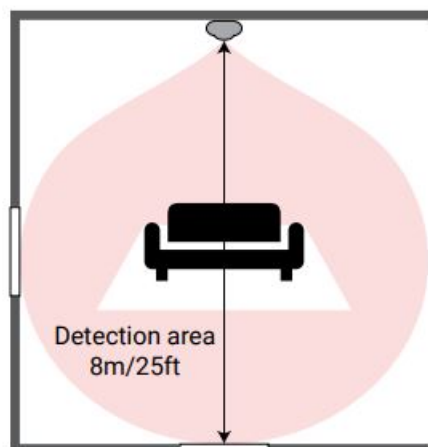


fig. 8



CAUTION! Shelly Motion cannot detect movement through transparent objects.

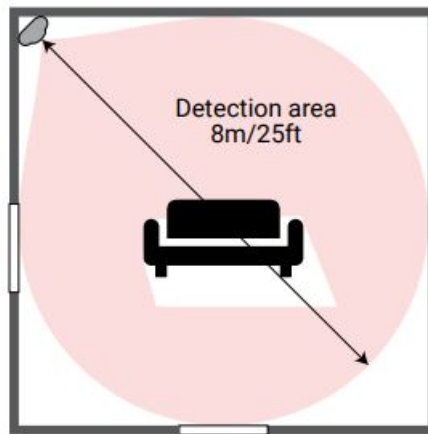

CAUTION! Direct sun light or close heating sources can trigger false motion detection.

Declaration of conformity

Hereby, Allterco Robotics EOOD declares that the radio equipment type Shelly Motion is in compliance with Directive 2014/53/EU, 2014/35/EU, 2004/108/WE, 2011/65/UE. The full text of the EU declaration of conformity is available at the following internet address: <https://shelly.cloud/declaration-of-conformity/>

Manufacturer: Allterco Robotics EOOD Address: Sofia, 1407, 103 Cherni vrah Blvd.

Tel.: +359 2 988 7435

E-mail: support@shelly.cloud

Web: <http://www.shelly.cloud>

Changes in the contact data are published by the Manufacturer at the official website of the Device

<http://www.shelly.cloud>

The User is obliged to stay informed for any amendments of these warranty terms before exercising his/her rights against the Manufacturer. All rights to trademarks She® and Shelly®, and other intellectual rights associated with this Device belong to Allterco Robotics EOOD.

HOW TO SETUP AND USE



IMPORTANT! Before beginning the installation, please read the accompanying documentation carefully and completely. Failure to follow recommended procedures could lead to malfunction, danger to your life or violation of the law. Allterco Robotics is not responsible for any loss or damage in case of incorrect installation or operation of this device!



WARNING! Do not allow children to play with the device, especially with the Power Button. Keep the devices for remote control of Shelly (mobile phones, tablets, PCs) away from children.

CONTROL YOUR HOME WITH YOUR VOICE

All Shelly devices are compatible with Amazon Echo and Google Home. Please see our step-by-step guide on:

<https://shelly.cloud/compatibility>

BEFORE FIRST USE

Charge the device

Shelly Motion supports fast charging. Use a USB charger with a minimum capacity of 1A/5 to take advantage of this feature. It is advisable to fully charge the Shelly motion before using it. During charging you will see a red light next to the USB port which is located at the bottom of the device. When it is fully charged, it will go out.

Power on

To turn on the Shelly Motion, use a stick or pin to press the button next to the USB connector as shown below.



Prepare device for inclusion

To be successfully added to your Wi-Fi network, Shelly Motion must glow BLUE. If this is not the case, please use a pin and press the button next to the USB port for 10 seconds. This will put the device in INCLUSION mode and turn its Wi-Fi mode on an Access Point named shellymotion-xxxxxxx



INSTALL SHELLY APPLICATION

Shelly Cloud gives you opportunity to control and adjust all Shelly® Devices from anywhere in the world. You only need an internet connection and our mobile application, installed on your smartphone or tablet.





https://shelly.cloud/app_download/?i=shelly_generic

Registration

The first time you load the Shelly Cloud mobile app, you have to create an account which can manage all your Shelly® devices.

Forgotten Password

In case you forget or lose your password, just enter the e-mail address you have used in your registration. You will then receive instructions to change your password.




IMPORTANT! Be careful when you type your e-mail address during the registration, as it will be used in case you forget your password. Include it to your WiFi with Shelly CLOUD APP




IMPORTANT! Before adding a new device, your phone MUST be connected to the same WiFi network where you want to add devices. DO NOT connect your phone to WiFi network created from Shelly devices.

You need to have at least one room created room in the Shelly Cloud App before adding Shelly Motion to it. Otherwise create a room. Click on the hamburger menu icon in the upper right corner Choose ADD DEVICE from the menu, click on it and follow instructions.

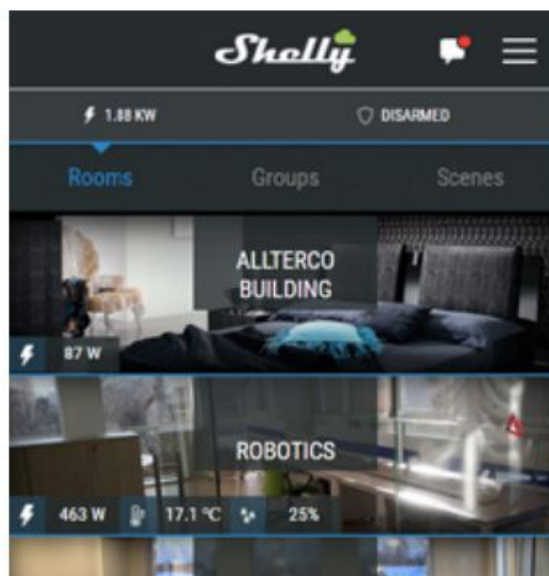

Include it to your WiFi manually


Shelly motion can be added to your WiFi network without using the Shelly Cloud APP. To do this, search on your PC or phone for a Wi-Fi network named shellymotion-xxxxxxx. Connect to it and open <http://192.168.33.1> with the browser on your phone or computer. Choose Internet and Security menu, enable WiFi mode CLIENT and enter your WiFi network credentials.

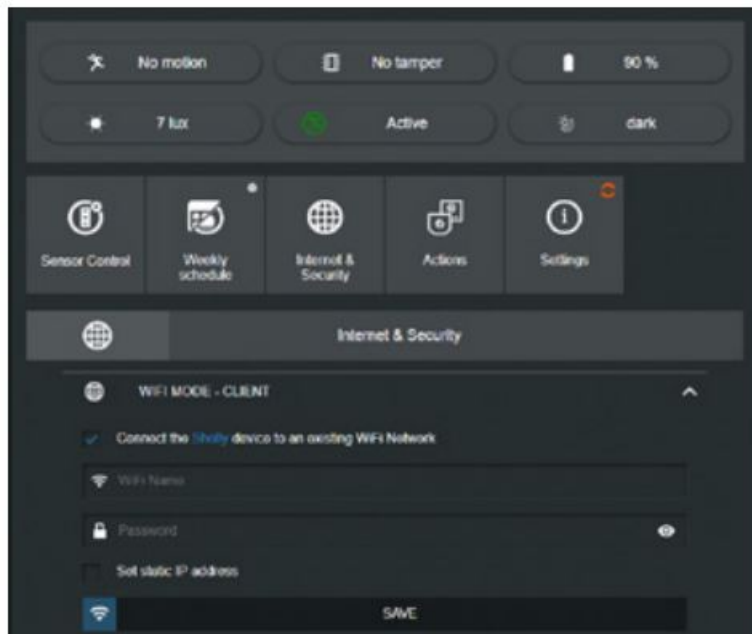

When Shelly Motion connects to your WiFi network, the blue light will go out.

Add device to your account

When the device is added successfully to your WiFi network you will see a new room called “Discovered devices”.

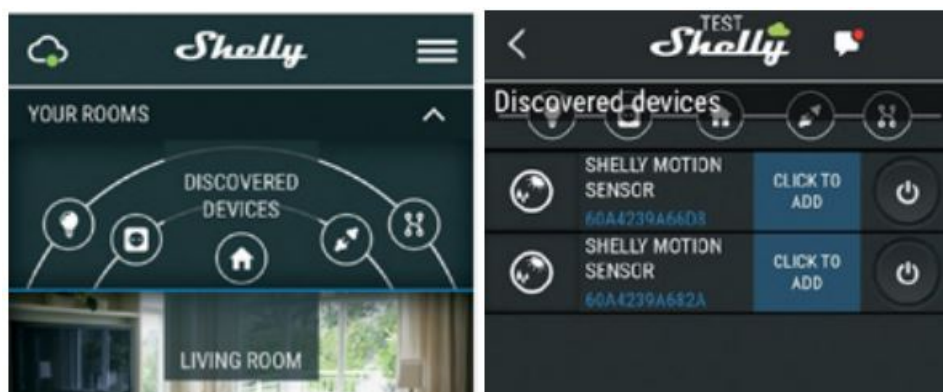

IMPORTANT! The device you added may require a firmware update before it can be used. In this case, you must wait for this to be done before proceeding. Do not reboot the sensor until the firmware update is finished. Flashing Blue light followed by 1 minute no light and final Blue/Red/Green sequence is indication of successful firmware update. Select the found devices and add them to the room you have selected.



MOTION SENSOR FEATURES AND SETTINGS

After adding the sensor to your account, you can change its settings according to your needs. Settings can be changed both through Shelly Cloud app and through the local web page of the device, which you can open through a browser.

SHELLY CLOUD APP Motion status

In the Shelly Cloud App movement can be detected both on room and sensor level.



No motion



Motion detected




Motion detection deactivated



Vibration or movement is detected.

DEVICE WEB PAGE MOTION STATUS

Opening device page by IP manually, the following statuses are available: motion status, vibration detection, battery level, light intensity, sensor activity status and lightning mode.

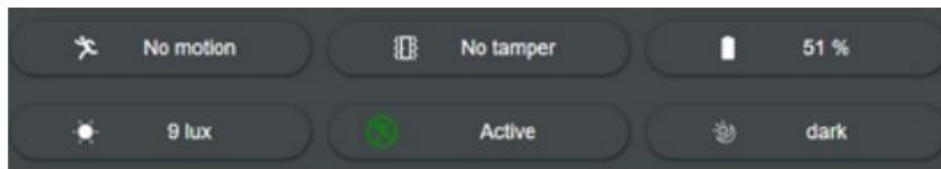

Sensor control

In this menu you can set the basic parameters for the operation of the sensor.

Illumination definitions

Shelly Motion has a built-in light sensor. It measures light intensity in Lux, which can differ from the values measured by other devices, depending on the measurement specifics and location of the device. You can assign three different light modes: Dark, Twilight and Bright. Each light mode can have custom predefined sensitivity values. By default Dark is under 100, Twilight is between 100 and 500 and Bright is above 500.

Motion sensitivity

Allows you to adjust the sensor's level of sensitivity. By default, the value is 50, which allows the detection of objects over 15 kg at a distance of 5 meters. If you have a pet, setting this value will allow the sensor not to detect it while moving. Importantly, large pets can be detected, especially if they stand on their hind legs. You can adjust sensor sensitivity level based on your needs.

Motion blind time

Can be set in the range of 1 to 5 minutes. Within the Blind time period, motion detections will not be reported. Only motions detected after Blind time, will be reported and information will be send.

Motion pulse count

Allows the sensor to send alerts only if motion is repeated. It is usually used to avoid false positives. The default value is 1, if you have false positives you can increase it up to 4. Motion detection operating mode Lights control based on certain lighting conditions, The options are "In any light", only when it is dark, "Dusk" or "Light". If the sensor is not in the specified range of illumination, it will not detect movement and will not perform any action.

Tamper alarm sensitivity

Shelly Motion has a built-in accelerometer to detect vibration and temper. If someone is trying to divert or move it from where you placed it you will be notified. You can adjust sensitivity level based on your convenience and location. This may be needed if you use the sensor in a place where there may be vibrations from vehicles or other causes.

Motion sensor

From here you can enable or disable device motion detection. When disabled, the sensor will not send information in case of motion until you Enable it again.

Sleep time

This feature allows you to temporarily disable the sensor to detect and send movement information for certain period of time. After the specified time has expired, the sensor will be reactivated. The sleep time can be terminated manually by enabling it from the Sensor Motion menu.

Weekly scheduling Schedule timer

Shelly motion supports modes of operations based on day, time, sunrise and sunset parameters. To select the operating mode, select the time or position of the sun and one of the two possible options: Activate / Deactivate motion detection. This allows you to define you to be notified in case of unauthorized movement detection.

Internet & Security

WiFi mode – client

WiFi network settings and information, including the option to set up a fixed IP address.

WiFi client backup

Backup network settings in case the sensor is lost or cannot be connected to the primary WiFi network.



ATTENTION! After connecting the backup WiFi network, the sensor will remain connected to it until disconnected or restart it.

WiFi mode – access point

By default, during first use, Shelly Motion creates a network named shellymotion-xxxxxxx without a password. You can change the network name and set a password.

Restrict login

Shelly motion can be set up by opening the IP address on the Wi-Fi network. To restrict access to its built-in Web interface, you can specify a name and password. This is often necessary if the sensor is located in public networks with access by many users.

SNTP server

Server from where the device synchronize time and date. MQTT and COAP settings

MQTT and COAP settings

allowing the sensor to connect directly to 3-party automation systems. Can be enabled/disabled separately.

Cloud

Ability to deactivate or activate the connection to Shelly Cloud. This option works independently of MQTT and CoAP

Actions – Control your other devices directly

This feature allows Shelly motion to control other devices on the local network or the Internet (IFTTT and others) without a cloud or other automation system. If you have a Shelly relay or a light bulb or other device that can be controlled via the Internet, then Shelly Motion can send the command directly. For more information about the commands you can send to control other Shelly devices directly: [ddd_communication](#) [PDF] and <https://shelly-api-docs.shelly.cloud/> The following options for performing URL action are possible:

- Motion detected
- Motion detected in dark
- Motion detected in twilight
- Motion detected in bright
- End of motion detected
- Tamper alarm detected
- End of tamper alarm

Each of them supports up to 5 URLs that will be executed when motion is detected, end of motion or vibration. In addition, each of the 5 action URLs can be limited in time. This allows you to set the sensor to control the light intensity (if you use a Shelly Dimmer or other device with similar capabilities) to be specific to different times of the day. You can also control any other device according to the time of day.

Settings

Led light control o turn off the light indication when motion or vibration is detected.

Firmware update

Check for a new firmware version and update it.



ATTENTION! Do not reboot the sensor until Firmware update is finished. Flashing Blue light followed by 1 minute no light and final Blue/Red/Green sequence is indication of successful firmware update. **Time zone and**

geo-location

Change your Time zone and set a new location.

Device name

Use a friendly device name, if you use Shelly Cloud APP the name can be automatically populated.

Factory reset

Restore factory settings

Device reboot

Reboots the Shelly Motion.

Device info

Connectivity settings and ID of the device.

Battery lifetime and optimization


Shelly Motion sensor is a battery-powered device that is permanently connected to the Wi-Fi network and the Internet. In standby mode it can reach up to 3 years of operation without recharging and in cases of active movement between 12 – 18 months. However, in order to be able to achieve the specified operating times in it is extremely important to comply with the following requirements:

1. Mount the sensor in place with a strong enough WiFi signal. It is desirable that the RSSI be better than -70 db.
2. Do not open the local page of the device unnecessarily. It is not designed to continuously exchange data to read its settings and status. In case of an event, device will immediately send the necessary information to Cloud, Local Server or execute Actions. If you have opened the local page, close it as soon as you make changes to the settings you want.
3. If the device is set in a place where there is frequent movement, consider whether it is necessary to report it 24/7 or only at certain time intervals, if so, create a Weekly Schedule when to send the information about that.
4. Do not place the device outdoor in direct sunlight, high humidity or the risk of water droplets falling on it. Shelly motion sensor is made for Indoor usage or in well covered places.

Shelly MOTION



Documents / Resources

 <table><tr><td>1. Shelly Motion (Wi-Fi)</td><td>3</td></tr><tr><td>1.1. Features</td><td>3</td></tr><tr><td>1.2. Installation</td><td>4</td></tr><tr><td>1.3. Settings</td><td>9</td></tr><tr><td>1.4. Actions</td><td>10</td></tr><tr><td>1.5. Settings</td><td>17</td></tr><tr><td>1.6. FAQ</td><td>18</td></tr><tr><td>1.7. Troubleshooting</td><td>19</td></tr><tr><td>2. Shelly Application</td><td>20</td></tr></table>	1. Shelly Motion (Wi-Fi)	3	1.1. Features	3	1.2. Installation	4	1.3. Settings	9	1.4. Actions	10	1.5. Settings	17	1.6. FAQ	18	1.7. Troubleshooting	19	2. Shelly Application	20	Shelly MOTION Battery Operated Motion Sensor (WiFi) [pdf] User Guide Battery Operated Motion Sensor, WiFi Sensor
1. Shelly Motion (Wi-Fi)	3																		
1.1. Features	3																		
1.2. Installation	4																		
1.3. Settings	9																		
1.4. Actions	10																		
1.5. Settings	17																		
1.6. FAQ	18																		
1.7. Troubleshooting	19																		
2. Shelly Application	20																		

References

- [Shelly - Shelly](#)
- [Shelly Cloud](#)

- [Welcome to Shelly Technical Documentation | Shelly Technical Documentation](#)

Manuals+.