



sonbus SM1972C Temperature and humidity smoke sensor User Manual

[Home](#) » [SONBUS](#) » sonbus SM1972C Temperature and humidity smoke sensor User Manual 



SM1972C Temperature and humidity smoke sensor User Manual



SM1972C using the standard CAN Bus, easy access to PLC, DCS, and other instruments or systems for monitoring conductivity2000, temperature, humidity state quantities. The internal use of high-precision sensing

core and related devices to ensure high reliability and excellent long-term stability can be customized RS232, RS485, CAN,4-20mA, DC0~5V\10V, ZIGBEE, Lora, WIFI, GPRS and other output methods.

Contents

[1 Technical Parameters](#)

[2 Product Size](#)

[3 Application solution](#)

[4 Communication](#)

[Protocol](#)

[5 Disclaimer](#)

[6 Documents / Resources](#)


[6.1 References](#)

[7 Related Posts](#)





Technical Parameters

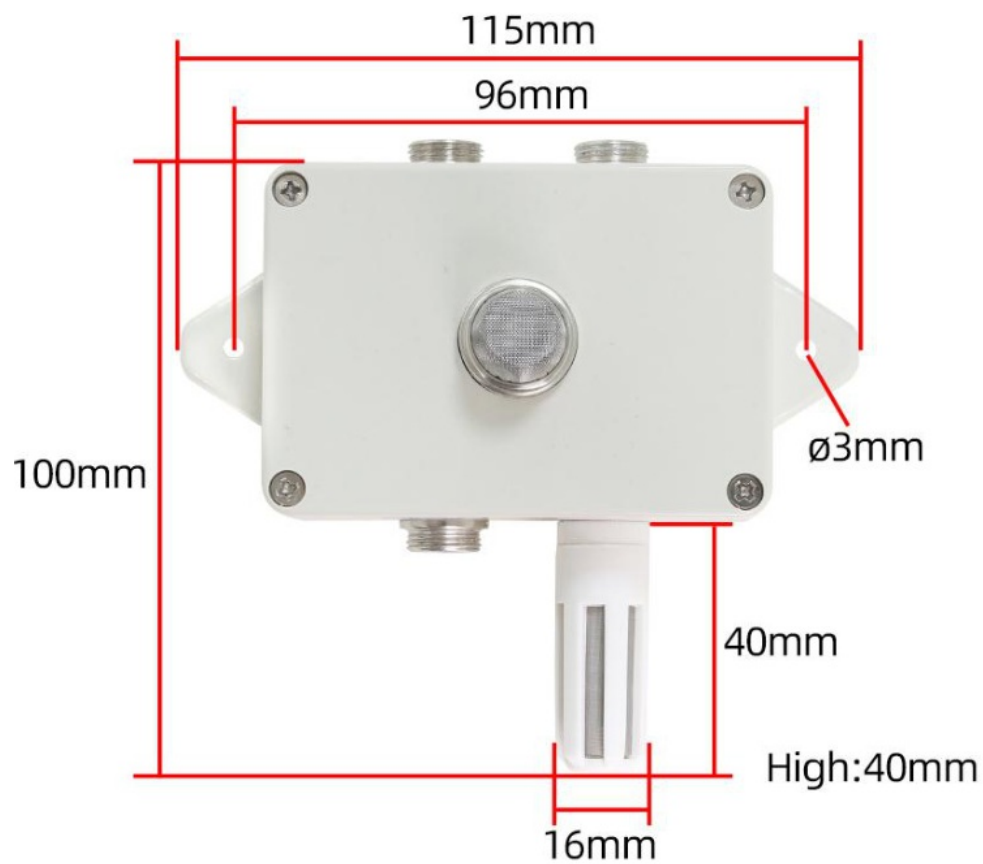Technical parameter	Parameter value
Brand	SONBEST
Smoke measuring range	0~2000ppm
Smoke allows deviation	±7%
Smoke Repeatability test	±5%
Smoke detection chip	Import digital
Temperature characteristics	±0.5%/°C
Temperature measuring range	-30°C~80°C
Temperature measuring accuracy	±0.5°C @25°C
Humidity measuring range	0~100%RH
Humidity accuracy	±3%RH @25°C
Communication Interface	CAN
Default rate	50kbps
Power	DC9~24V 1A
Running temperature	-40~80°C
Working humidity	5%RH~90%RH

Product Size




How to wiring?

CAN Wiring		
	RD	PWR+
	GN	PWR-
	YE	H CAN Dominant
	BU	L CAN Recessive

✖ **Note:** When wiring, connect the positive and negative poles of the power supply first and then connect the signal wire

Application solution

■ CAN Wiring

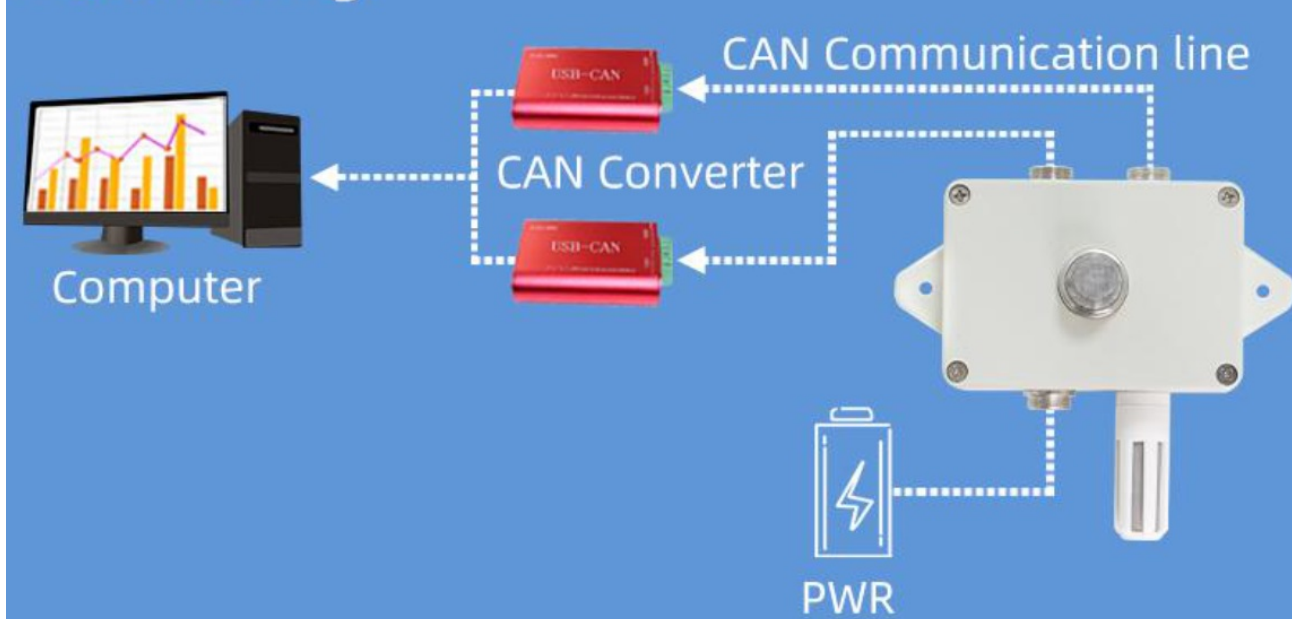

How to use it?



Communication Protocol

The product uses the CAN2.0B standard frame format. The standard frame information is 11 bytes including two parts of information and the first 3 bytes of the data part is the information part. The default node number of the device is 1, the report The text identification code is ID.10-ID.3 in the CAN standard frame, and the default rate is 50k. If other rates are required, they can be modified according to the communication protocol.

The device can work directly with various CAN converters or USB acquisition modules. Users can also choose our industrial-grade USB-CAN converter (as shown above). The basic frame format and composition are as follows: The table shows.

Bit	7	6	5	4	3	2	1	0
Byte 1	FF	FTR	X	X	DLC.3	DLC.2	DLC.1	DLC.0
Byte 2	ID.10	ID.9	ID.8	ID.7	ID.6	ID.5	ID.4	ID.3
Byte 3	ID.2	ID.1	ID.0	x	x	x	x	x
Byte 4	d1.7	d1.6	d1.5	d1.4	d1.3	d1.2	d1.1	d1.0
Byte 5	d2.7	d2.6	d2.5	d2.4	d2.3	d2.2	d2.1	d2.0
Byte 6	d3.7	d3.6	d3.5	d3.4	d3.3	d3.2	d3.1	d3.0
Byte 7	d4.7	d4.6	d4.5	d4.4	d4.3	d4.2	d4.1	d4.0
Byte 11	d8.7	d8.6	d8.5	d8.4	d8.3	d8.2	d8.1	d8.0

Byte 1 is frame information. The 7th bit (FF) indicates the frame format. In the extended frame, FF=1; the 6th bit (RTR) indicates the type of the frame, and the RTR=0 indicates the data frame. RTR=1 indicates the remote frame; DLC indicates the actual data length at the data frame. Bytes 2~3 are valid for the message identification code 11 bits. Bytes 4~11 are the actual data of the data frame, and the remote frame is invalid. For example, if the hardware address is 1, as shown in the figure below, the frame ID is 00 00 01, and the data can be replied to by sending the correct command.

1. Query data

Example: Query 1# device channel 1 all 2 data, the host computer sends the command: 01 03 00 00 00 02.

Frame type	Frame ID	Set address	Function ID	Start Address	Data length
00 01	01	01	03	00 00	02

Response frame: 01 03 04 07 3A 0F 7D.

Frame type	Frame ID	Set address	Function ID	Data length	Data
Response	00 00	01	03	04	08 AD 0F 7D

In the above example query reply: 0x03 table is the command number, 0x4 table has 4 data, the first data is 08 AD folded into decimal is 2221, because the module resolution is 0.01, The value needs to be divided by 100, that is, the actual temperature value is 22.21 degrees. Each temperature value occupies two bytes, that is, an integer variable. The actual value needs to be divided by 100 based on this value. Similarly, 0F 7D is the second. The data has a value of 3965, which means the real value is 39.65% RH.

2. Change Frame ID

You can use the master station to reset the node number by command. The node number ranges from 1 to 200. After resetting the node number, you must reset the system. Because the communication is in hexadecimal format, the data in the table Both are in hexadecimal format.

For example, if the host ID is 00 00 and the sensor address is 00 01, the current node 1 is changed to the 2nd. The communication message for changing the device ID is as follows: 01 06 0B 00 00 02.

Frame type	Frame ID	Set Address	Function id	fixed value	target frame ID
Command	00 01	01	06	0B 00	00 02

Return frame after correct setting: 01 06 01 02 61 88. The format is as shown in the table below.

Frame ID	Set Address	Function id	source frame I D	current frame I D	CRC16
00 00	01	06	01	02	61 88

The command will not respond correctly. The following is the command and reply message to change the Set Address to 2.

3. Change device rate

You can use the master station to reset the device rate by command. The rate number range is from 1 to 11. After resetting the node number, the rate takes effect immediately. Because the communication is in hexadecimal format, the rate is in the table. The numbers are all in hexadecimal format.

rate number	rate	rate number	rate
1	10kbps	2	20kbps
3	25kbps	4	40kbps
5	50kbps	6	100kbps
7	125kbps	8	200kbps
9	250kbps	A	400kbps
B	500kbps	C	1M (unused)
Byte 7	d4.7	d4.6	d4.5

The rate not in the above range is not supported at the moment. If there is special demand, it can be customized. For example, the device rate is 50k. According to the above table, the number is 05. To change the rate to 40k, the 40k number is 04, the communication message of the operation is as follows: 01 06 0A 05 00 04, as shown below.

After the execution rate is modified, the rate will change immediately and the device will not return any value. At this time, the CAN acquisition device also needs to switch the corresponding rate to communicate normally.

4. Return frame ID and rate after power-on

After the device is powered on again, the device will return the corresponding Set Address and rate information. For example, after the device is powered on, the reported message is as follows: 01 25 01 05 D1 80.

frame ID	Set Address	Function id	current frame I D	current rate	CRC16
00 00	01	25	00 01	05	D1 80

In the response frame, 01 indicates that the current frame ID is 00 01, and speed value 05 indicates that the current rate is 50 kbps, which can be obtained by looking up the table.

Disclaimer

This document provides all information about the product, does not grant any license to intellectual property, does not express or imply, and prohibits any other means of granting any intellectual property rights, such as the statement of sales terms and conditions of this product, other issues. No liability is assumed. Furthermore, our company makes no warranties, express or implied, regarding the sale and use of this product, including the suitability for the specific use of the product, the marketability, or the infringement liability for any patent, copyright, or other intellectual property rights, etc. Product specifications and product descriptions may be modified at any time without notice.

Contact Us

Company: Shanghai Sonbest Industrial Co., Ltd

Address: Building 8, No.215 Northeast road, Baoshan District, Shanghai, China

Web: <http://www.sonbest.com>

Web: <http://www.sonbus.com>

SKYPE: soobuu


Email: sale@sonbest.com

Tel: 86-021-51083595 / 66862055 / 66862075 / 66861077



Shanghai Sonbest Industrial Co., Ltd

Documents / Resources

	<p>sonbus SM1972C Temperature and humidity smoke sensor [pdf] User Manual SM1972C Temperature and humidity smoke sensor, Temperature and humidity smoke sensor, humidity smoke sensor, smoke sensor</p>
---	---

References

- [Home-ä Šæµ.æœåšâ@žă šæœ%œé™ă...-ă](#)
- [Home-SONBEST -SONBUS.COM| THE SENSOR COMPANY](#)
- [Home-SONBEST -SONBUS.COM| THE SENSOR COMPANY](#)