



Spektrum DXS Transmitter Preset Model Instructions

[Home](#) » [SPECTRUM](#) » Spektrum DXS Transmitter Preset Model Instructions



Spektrum DXS Transmitter Preset Model Profiles

The Spektrum DXS transmitter has the ability to change between 4 different Airplane Profiles and a Heli Profile using trim inputs. See the profile options, compatible models, and notes for each listed below.

– **Preset Profiles Description** – See DXS Profile Switch and Channel Designations Chart for more info

STANDARD AIRPLANE PROFILE – For models with up to 4 control surfaces, such as trainer, sport, and gliders models. Use with models with Retracts, Flaps, and other auxiliary functions may be limited in this profile.

EXTRA FUNCTIONS PROFILE – For models with Flaps and Retracts, and auxiliary functions like Throttle Reverse. SAFE select flight modes can be limited in this profile when CH5 and CH6 are already in use. Also please note when using this profile with models with Flaps, there is no Elevator Compensation. Dropping flaps on most high wing models will cause “ballooning” and the nose will pitch up.

ELEVON A/B PROFILES – This preset is intended for Delta wing and Flying wing models that require Elevon Mixing. This mode mixes the Aileron and Elevator channels to produce pitch and roll movements with 2 control surfaces. When using an Elevon Profile, it is likely you will need to Reverse either Aileron/Elevator or both. (see DXS manual for channel reversing instructions)

Possible Elevon Reversing Options



Aileron	Elevator
Normal	Reverse
Normal	Normal
Reverse	Reverse
Reverse	Normal

Tip: If you test all servo reversing options and the control surfaces do not move in the correct direction, change the Elevon wing from Elevon-A to Elevon-B.

STANDARD HELI PROFILE – The Standard Heli profile has preset throttle and pitch curves that are specifically chosen to fly many popular Blade Heli Models. These curves are set to the B switch for Normal, Stunt 1, and Stunt 2. Please see the compatibility chart for a list of compatible Blade Helis

DXS Profiles Switch and Channel Designations					
	Button A	Switch B	Switch D	Switch F	Switch H
Standard Airplane Profile 1	Panic / CH6	Flight Modes / CH5	Aux / CH 7	High/Low Rate	Throttle Hold
Extra Functions Profile 2	Reverse / SAFE / CH 7	Gear / Aux / CH5	Flap / CH6	High/Low Rate	Throttle Hold
Elevon A Profile 3	Panic / CH6	Flight Modes / CH5	3 -Pos / CH 7	High/Low Rate	Throttle Hold
Elevon B Profile 4	Panic / CH6	Flight Modes / CH5	3 -Pos / CH 7	High/Low Rate	Throttle Hold
Standard Heli Profile 1	Panic / CH5	Flight Modes / CH5	3 -Pos / CH 7	High/Low Rate	Throttle Hold

Please note that your DXS transmitter may need an update to perform this function. Make sure that it is on version 1.30 or higher. Some DXS Transmitters will already come with this function, to confirm, check the PID number located in the battery compartment. If the PID starts with "SHTK" then an update is required to access the Preset Model Profiles.

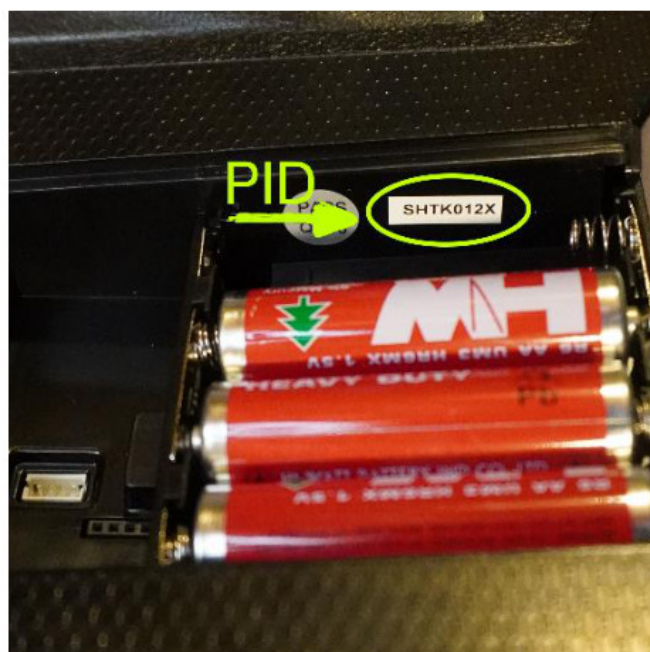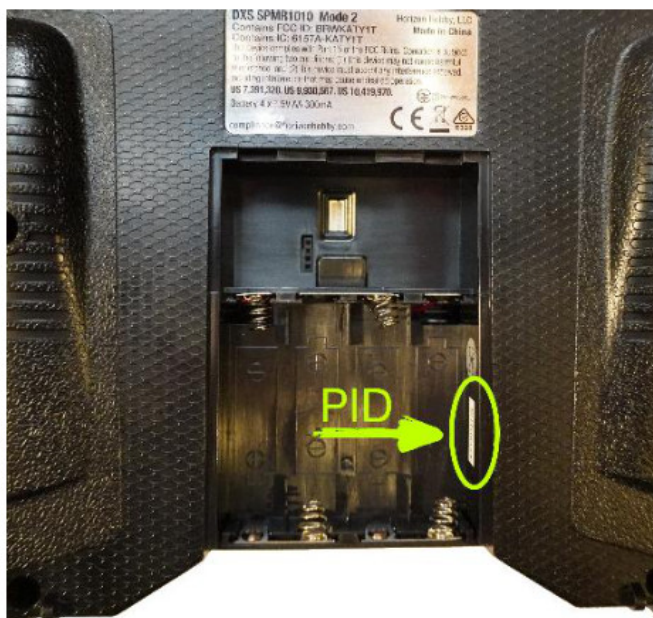

Contents [[hide](#)

- [1 Update Instructions](#)
- [2 Model Preset Mode Change Instructions via Trim Programming](#)
- [3 MODEL PROFILES BNF COMPATIBILITY LIST](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Update Instructions

Required Equipment



- Windows-based PC or Laptop with USB Port
- Spektrum USB Programmer (SPMA3065)
- SPMA3068 Adapter (not included with models that came equipped with DXS)

1. Download the Spektrum PC programmer Application and Install – [Link here](#)
2. Plug in Spektrum USB programmer cable into open USB Port.
3. Open Spektrum PC Programmer Application on your PC.
4. In the top left corner of the App there is a Login button, use this to log in to your Spektrum Account or to create a new account.
5. Plug the servo lead end of the USB programmer into the adapter and then plug the adapter into the port on your DXS and power on.
6. At this time, you should be presented with the Software Update Screen Menu a. Here you are presented with the Serial Number and you can register the device to your account by clicking Check for Update.
7. Click Check for Update and choose the most recent update at the top of the list. a. Click Update and the transmitter will update. Please wait until the process is complete before powering down and unplugging cables.


Need help? Go to these links for a hands-on video walkthrough to update transmitters via USB Cable – [Click here](#)

Model Preset Mode Change Instructions via Trim Programming

1. To enter preset change mode, push and hold the Inner Left Trimmer UP and Inner Right Trimmer Down while you power ON the DXS transmitter.

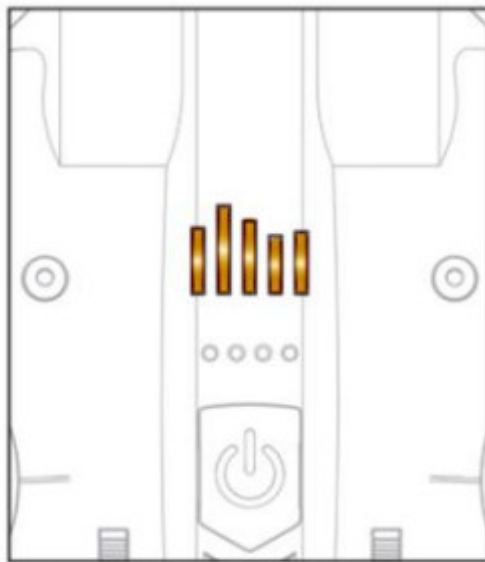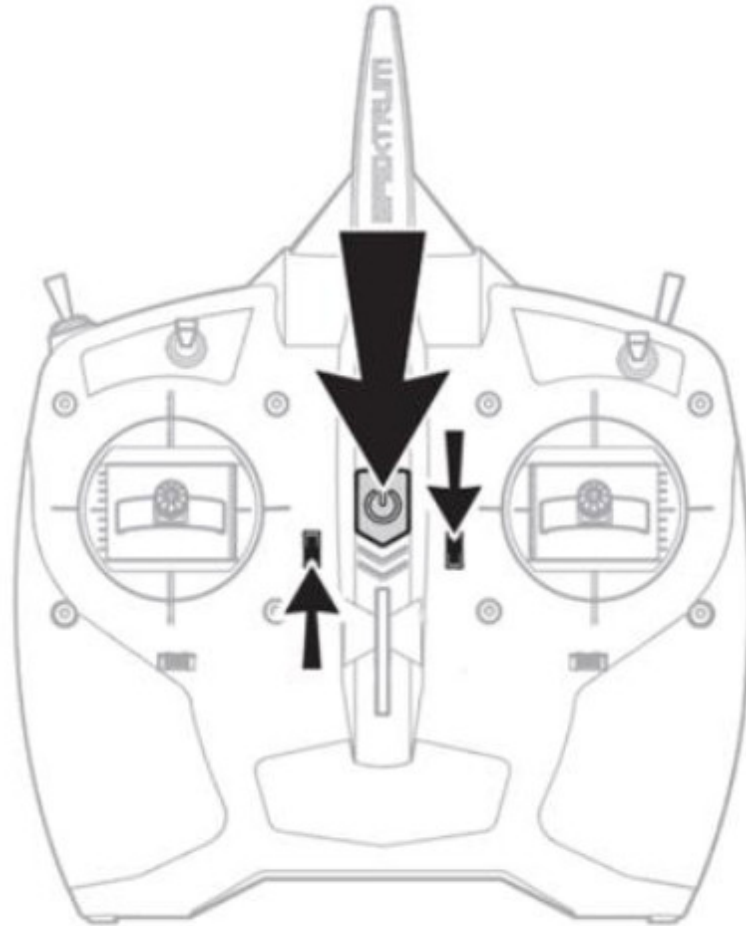


Helicopter Mode

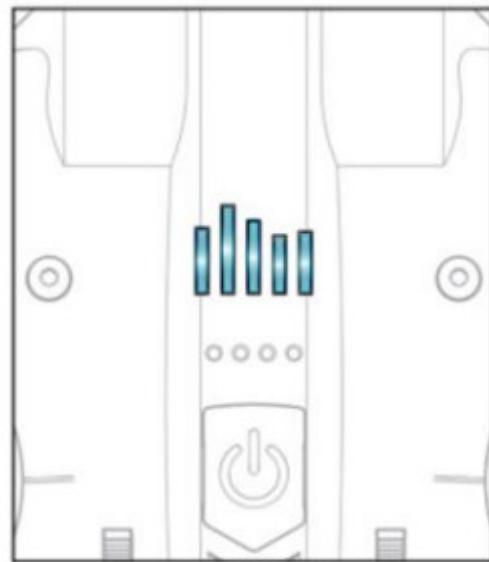

Airplane Mode


2. 1 of the 4 Battery level indicator LEDs will light up Green. This indicates the current selected Preset Mode

Profile 1
Standard Air/Heli

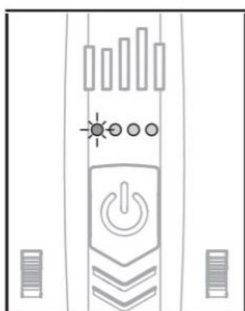


Use the LEFT (up or down) Trimmer to select between Heli or Airplane model type

Profile 2
Extra Functions

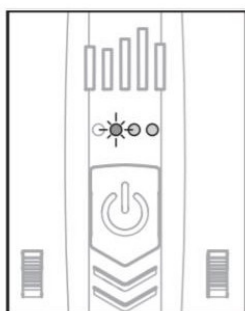


Use the RIGHT (up or down) Trimmer to select between Available Profiles




Profile 3
Elevon A

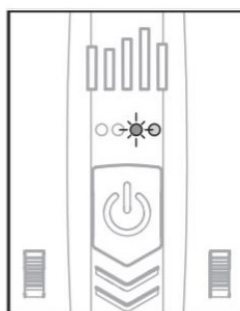

Profile 4
Elevon B

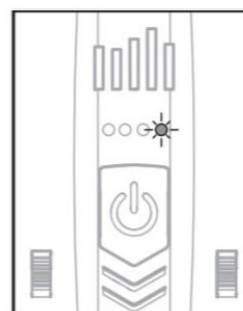

Press the A button to save your selection. The transmitter will power down automatically

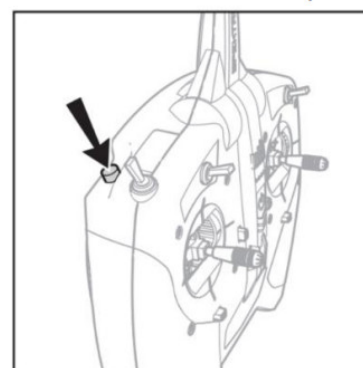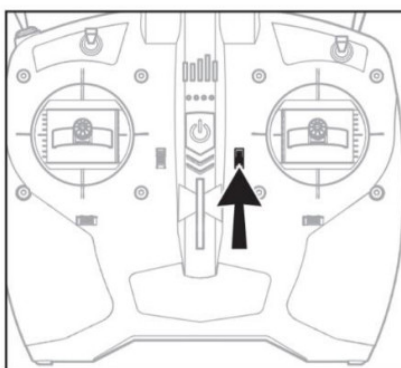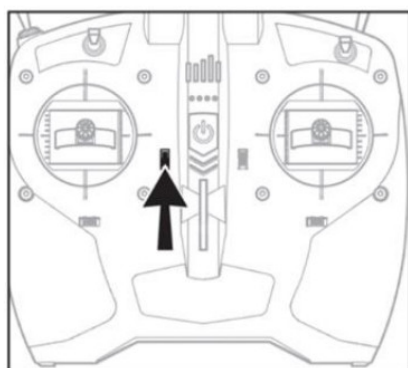

3. Whenever a mode change is performed, RE-BIND the Transmitter and Receiver to reset Failsafe

MODEL PROFILES BNF COMPATIBILITY LIST

Please reference this chart for switch layouts and important notes when using your DXS with these popular E-flite, Hobbyzone, and Blade Heli Bind-n-Fly Models

Model	DXS Profile	Button A	Switch B	Switch D	Switch F	Switch H
E-Flite EC-1500 (E FL5750)	Airplane Profile 2	SAFE Select	Cargo Door	3 Pos Flaps	High/Low Rate	Throttle Hold

NOTES

The DXS does not support Flap to Elevator compensation – Be prepared to apply down elevator when deploying flaps to level out the model – SAFE Select is only available as a momentary button with this model using this profile, hold the button for SAFE on and release for AS3X mode. For the best experience, we recommend flying with a NX6 transmitter (or higher) with this model

Apprentice STS (EFL3750)	Airplane Profile 1	Panic Recovery	Flight Modes	N/A	High/Low Rate	Throttle Hold
Night Timber X (E FL13850)	Airplane Profile 2	Throttle Reverse	SAFE Select	3 Pos Flaps	High/Low Rate	Throttle Hold

NOTES

The DXS does not support Flap to Elevator compensation – Be prepared to apply down elevator when deploying flaps to level out the model – Throttle Reverse is only available as a momentary button with this model using this profile, hold the button for SAFE on and release for AS3X mode. For the best experience, we recommend at least flying with a NX6 transmitter with this model

F-16 70mm EDF (EFL7850/EFL78500)	Airplane Profile 1	N/A	Retract Gear	SAFE Select	High/Low Rate	Throttle Hold
Maule 1.5M (EFL5350 /EFL53500)	Airplane Profile 2	Throttle Reverse	SAFE Select	3 Pos Flaps	High/Low Rate	Throttle Hold
Ultimate 3D 950mm S MART (EFL16550)	Airplane Profile 2	Throttle Reverse	SAFE Select	N/A	High/Low Rate	Throttle Hold

Throttle Reverse is only available as a Momentary button in this Mode, hold the button for Reverse on and release for Forward Flight

Extra 300 1.3M (EFL11550/EFL115500)	Airplane Profile 1	N/A	SAFE Select	N/A	High/Low Rate	Th
-------------------------------------	--------------------	-----	-------------	-----	---------------	----

NOTES

The pre-programmed High and Low Rate on the DXS, when flying 3D models, even at a low rate, is very reactive. It is highly recommended to use a programmable Transmitter to program the recommended rates and expo for this model. For the best experience, we recommend at least flying with a DX6e transmitter with this model

P-39 1.2m (EFL9150)	Airplane Profile 2	SAFE Select	Retract Gear	3 Pos Flaps	High/Low Rate	Throttle Hold
---------------------	--------------------	-------------	--------------	-------------	---------------	---------------

NOTES

The DXS does not support Flap to Elevator compensation – Be prepared to apply down elevator when deploying flaps to level out the model – SAFE Select is only available as a momentary button with this model using this profile, hold the button for SAFE on and release for AS3X mode. For the best experience, we recommend flying with an NX6 transmitter (or higher) with this model

P-51D 1.2M (EFL8950/EFL89500)	Airplane Profile 2	SAFE Select	Retract Gear	3 Pos Flaps	High/Low Rate	Throttle Hold
-------------------------------	--------------------	-------------	--------------	-------------	---------------	---------------

NOTES

The DXS does not support Flap to Elevator compensation – Be prepared to apply down elevator when deploying flaps to level out the model – SAFE Select is only available as a momentary button with this model using this profile, hold the button for SAFE on and release for AS3X mode. For the best experience, we recommend flying with a NX6 transmitter (or higher) with this model

Viper 70mm EDF (EFL7750/EFL77500)	Airplane Profile 2	SAFE Select	Retract Gear	3 Pos Flaps	High/Low Rate	Throttle Hold
-----------------------------------	--------------------	-------------	--------------	-------------	---------------	---------------

NOTES

The DXS does not support Flap to Elevator compensation – Be prepared to apply down elevator when deploying flaps to level out the model – SAFE Select is only available as a momentary button with this model using this profile, hold the button for SAFE on and release for AS3X mode. For the best experience, we recommend flying with an NX6 transmitter (or higher) with this model

Air Tractor 1.5 m (EFL16450)	Airplane Profile 2	SAFE Select	N/A	3 Pos Flaps	High/Low Rate	Throttle Hold
------------------------------	--------------------	-------------	-----	-------------	---------------	---------------

NOTES

The DXS does not support Flap to Elevator compensation – Be prepared to apply down elevator when deploying flaps to level out the model – SAFE Select is only available as a momentary button with this model using this profile, hold the button for SAFE on and release for AS3X mode. For the best experience, we recommend flying with a DX6e transmitter (or higher) with this model

Turbo Timber 1.5m (EFL15250)	Airplane Profile 2	SAFE Select	N/A	3 Pos Flaps	High/Low Rate	Throttle Hold
------------------------------	--------------------	-------------	-----	-------------	---------------	---------------

NOTES

The DXS does not support Flap to Elevator compensation – Be prepared to apply down elevator when deploying flaps to level out the model – SAFE Select is only available as a momentary button with this model using this profile, hold the button for SAFE on and release for AS3X mode. For the best experience, we recommend flying with a DX6e transmitter (or higher) with this model

Timber X 1.2 M (EFL3850/EFL38500)	Airplane Profile 2	SAFE Select	N/A	3 Pos Flaps	High/Low Rate	Throttle Hold
-----------------------------------	--------------------	-------------	-----	-------------	---------------	---------------

NOTES

The DXS does not support Flap to Elevator compensation – Be prepared to apply down elevator when deploying flaps to level out the model – SAFE Select is only available as a momentary button with this model using this profile, hold the button for SAFE on and release for AS3X mode. For the best experience, we recommend flying with a DX6e transmitter (or higher) with this model

Twin Otter 1.2 m (EFL300500/EFL30050)	Airplane Profile 2	SAFE Select	N/A	3 Pos Flaps	High/Low Rate	Throttle Hold
---------------------------------------	--------------------	-------------	-----	-------------	---------------	---------------

NOTES

The DXS does not support Flap to Elevator compensation – Be prepared to apply down elevator when deploying flaps to level out the model – SAFE Select is only available as a momentary button with this model using this profile, hold the button for SAFE on and release for AS3X mode. For the best experience, we recommend flying with a DX6e transmitter (or higher) with this model

Carbon Cub S2 1.3M (HBZ3250/HBZ32500)	Airplane Profile 1	Panic Recovery	Flight Modes	N/A	High/Low Rate	Throttle Hold
Cherokee 1.3M (EFL54500/EFL5450)	Airplane Profile 2	SAFE Select	N/A	3 Pos Flaps	High/Low Rate	Throttle Hold

NOTES

The DXS does not support Flap to Elevator compensation – Be prepared to apply down elevator when deploying flaps to level out the model – SAFE Select is only available as a momentary button with this model using this profile, hold the button for SAFE on and release for AS3X mode. For the best experience, we recommend flying with a DX6e transmitter (or higher) with this model

Opterra 2M Wing (EFL11150/EFL111500)	Airplane Profile 1	N/A	SAFE Select	N/A	High/Low Rate	Throttle Hold
Conscendo Evolution 1.5m (EFL01650)	Airplane Profile 1	N/A	SAFE Select	N/A	High/Low Rate	Throttle Hold
T-28 Trojan 1.1m (EFL08250)	Airplane Profile 1	N/A	SAFE Select	N/A	High/Low Rate	Throttle Hold
F-15 64mm (EFL9750/EFL97500)	Airplane Profile 1	N/A	SAFE Select	N/A	High/Low Rate	Throttle Hold
V-900 (EFL74500/EFL7450)	Airplane Profile 1	N/A	SAFE Select	N/A	High/Low Rate	Throttle Hold
Valiant 1.3M (EFL4950/EFL49500)	Airplane Profile 2	SAFE Select	N/A	3 Pos Flaps	High/Low Rate	Throttle Hold

NOTES

The DXS does not support Flap to Elevator compensation – Be prepared to apply down elevator when deploying flaps to level out the model – SAFE Select is only available as a momentary button with this model using this profile, hold the button for SAFE on and release for AS3X mode. For the best experience, we recommend flying with a DX6e transmitter (or higher) with this model


Pitts 850mm (EFL3550/EFL35500)	Airplane Profile 1	N/A	SAFE Select	N/A	High/Low Rate	Throttle Hold
UMX A-10 Thunderbolt II 30mm EDF (EFLU6550)	Airplane Profile 1	N/A	SAFE Select	N/A	High/Low Rate	Throttle Hold
Citation Longitude (EFLU6350)	Airplane Profile 1	N/A	SAFE Select	N/A	High/Low Rate	Throttle Hold
AeroScout S 1.1m (HBZ3850/HBZ38500)	Airplane Profile 1	Panic Recovery	SAFE Select	N/A	High/Low Rate	Throttle Hold
UMX Turbo Timber (EFLU6950)	Airplane Profile 2	SAFE Select	N/A	3 Pos Flaps	High/Low Rate	Throttle Hold

NOTES

The DXS does not support Flap to Elevator compensation – Be prepared to apply down elevator when deploying flaps to level out the model – SAFE Select is only available as a momentary button with this model using this profile, hold the button for SAFE on and release for AS3X mode. For the best experience, we recommend flying with a DX6e transmitter (or higher) with this model

UMX Ultrix (EFLU6450)	Airplane Profile 1	N/A	SAFE Select	N/A	High/Low R
Sport Cub S v2 (HBZ4450/HBZ44500)	Airplane Profile 1	N/A	SAFE Select	N/A	High/Low R
UMX PT-17 (EFLU3080)	Airplane Profile 1	N/A	SAFE Select	N/A	High/Low R
UMX Radian (EFLU2980)	Airplane Profile 1	N/A	SAFE Select	N/A	High/Low R
UMX Night Vapor (EFLU1350)	Airplane Profile 1	N/A	SAFE Select	N/A	High/Low R
UMX Yak 54 3D (EFLU3550)	Airplane Profile 1	N/A	Flight Modes	N/A	High/Low R
Blade Fusion 360 SMART 3S (BLH6150)	Heli Profile 1	Panic Recovery	Flight Modes	N/A	High/Low R
Blade 330 S (BLH59550/BLH595500)	Heli Profile 1	Panic Recovery	Flight Modes	N/A	High/Low R
Blade 230 S Smart (BLH1250)	Heli Profile 1	Panic Recovery	Flight Modes	N/A	High/Low R
Blade 150 S (BLH5450)	Heli Profile 1	Panic Recovery	Flight Modes	N/A	High/Low R
Blade 120 S2 (BLH1180)	Airplane Profile 1	Panic Recovery	Flight Modes	N/A	High/Low R

Documents / Resources

	Spectrum DXS Transmitter Preset Model [pdf] Instructions DXS Transmitter Preset Model
---	--

References

- spektrumrc.cachefly.net/apps/spektrum_programmer.html

