



# STMicroelectronics STEVAL-IFP044V1 Industrial Digital Output Expansion Board User Manual


[Home](#) » [STMicroelectronics](#) » STM32F405-based STEVAL-IFP044V1 Industrial Digital Output Expansion Board User Manual 

## Contents

- 1 STM32F405-based STEVAL-IFP044V1 Industrial Digital Output Expansion Board
- 2 Introduction
- 3 Getting started
  - 3.1 Board setup
- 4 Multiple board configuration
- 5 Schematic diagrams
- 6 Bill of materials
- 7 Board versions
- 8 Regulatory compliance information
- 9 Revision history
- 10 Documents / Resources
  - 10.1 References
- 11 Related Posts



**STMicroelectronics STEVAL-IFP044V1 Industrial Digital Output Expansion Board**

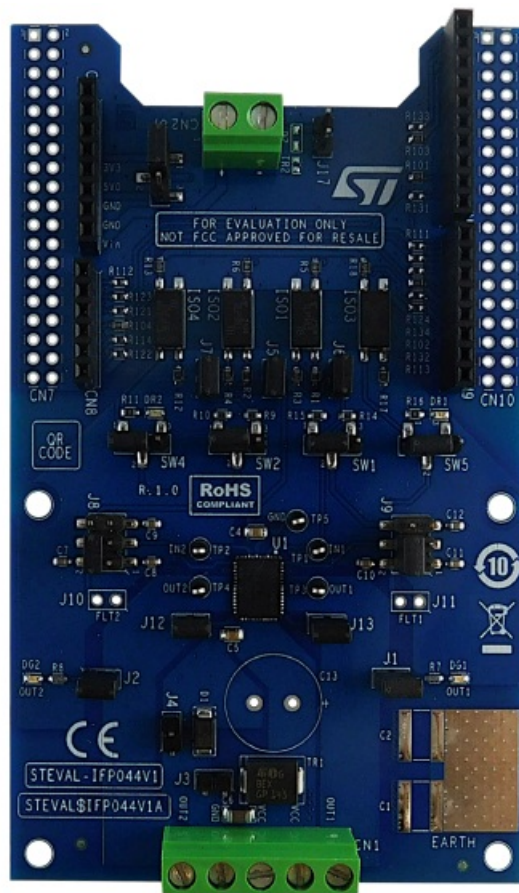


## Introduction

The STEVAL-IFP044V1 is an industrial digital output expansion board. It provides a powerful and flexible environment for the evaluation of the driving and diagnostic capabilities of the IPS2050HQ-32 (dual high-side smart power solid state relay) in a digital output module connected to 5.7 A (max.) industrial loads.

The STEVAL-IFP044V1 can interface with the microcontroller on the STM32 Nucleo via 5 kV optocouplers driven by GPIO pins, Arduino UNO R3 (default configuration) and ST morpho (optional, not mounted) connectors. The expansion board can be connected to either a NUCLEO-F401RE or NUCLEO-G431RB development board. It is also possible to evaluate a system composed by up to four stacked STEVAL-IFP044V1 expansion boards. As an example, a system with four STEVAL-IFP044V1 expansion boards allows you to evaluate an eight-channel digital output module with 5.7 A (max.) capability each.

**Figure 1. STEVAL-IFP044V1 expansion board**

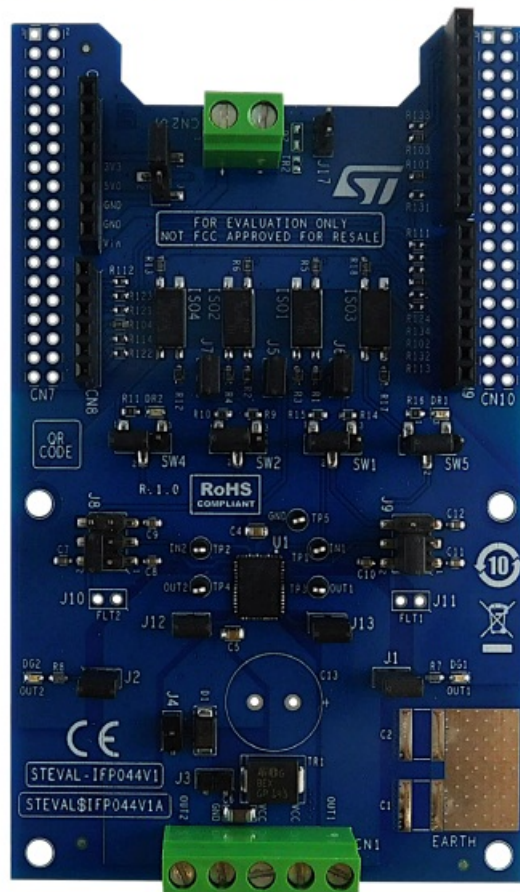

## Getting started

### Overview

The STEVAL-IFP044V1 embeds the IPS2050HQ-32 intelligent power switch (IPS), featuring overcurrent and overtemperature protection for safe output load control.

The board is designed to meet application requirements in terms of galvanic isolation between user and power interfaces. This requirement is satisfied by optical isolation implemented through four optocouplers (ISO1, ISO2, ISO3 and ISO4) for signal forward to the device and FLT pins for feedback diagnostic signals.

### The STEVAL-IFP044V1 features:


- Based on IPS2050HQ-32 dual high-side switch, which features:
  - Operating range up to 60 V/5.7 A
  - Low power dissipation ( $R_{ON(MAX)} = 50\text{ m}\Omega$ )
  - Fast decay for inductive loads
  - Smart driving of capacitive load
  - Under-voltage lock-out
  - Per-channel overload and over-temperature protections
  - QFN48L 8×6 mm package
- Application board operating range: 8 to 33 V/0 to 5.7 A
- Extended voltage operating range (J3 open) up to 60 V
- Green LEDs for output on/off status
- Red LEDs for per-channel diagnostic (overload and overheating)

- 5 kV galvanic isolation
- Supply rail reverse polarity protection
- Compatible with STM32 Nucleo development boards
- Equipped with Arduino UNO R3 connectors
- CE certified
- RoHS and China RoHS compliant
- Not FCC approved for resale

### Digital section

The digital section is associated with the STM32 interface and digital supply voltage to and from the STEVAL-IFP044V1 expansion board.

**Figure 2. STEVAL-IFP044V1 expansion board: digital interface components**

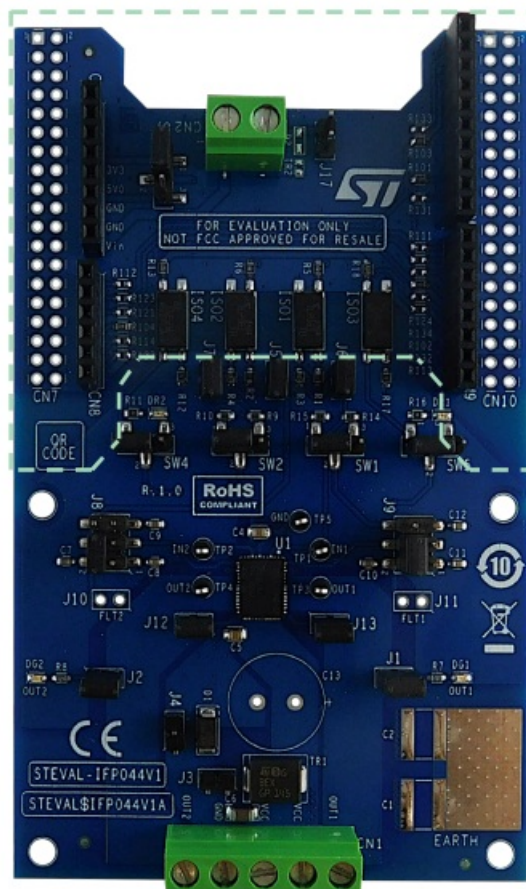

### The four Arduino UNO R3 connectors:

- allow expansion board communication with the STM32 Nucleo development board microcontroller accessing STM32 peripheral and GPIO resources;
- provide digital supply voltage between the STM32 Nucleo development board and the STEVAL-IFP044V1 expansion board, in either direction.

Normally, the STM32 Nucleo development board supplies the expansion board by a 3v3 or 5v0 generated by the USB. You can select the preferred voltage on the expansion board via SW3 (3v3 closing pins 1-2; 5v0 closing pins 2-3).

Alternatively, it is possible to supply the STM32 Nucleo development board by the expansion board. In this case, an external supply voltage (7-12 V) should be connected CN2 connector (not mounted by default) on the expansion board and the ground loop should be closed by mounting D2 (enable the reverse polarity protection) or by closing J17 (without reverse polarity).

To supply the VIN voltage rail is necessary to:


- close jumper JP5 between pins 2 and 3 and open jumper JP1 on the NUCLEO-F401RE
- open jumper JP5 between pins 1 and 2 and close jumper JP5 between pins 3 and 4 on the NUCLEO-G431RB

### Power section

The power section involves the power supply voltage (CN1, pin 2 and 3 for VCC, pin 4 for GND), load connection (between CN1 pins 1-4 and CN1 pins 5-4) and electromagnetic compatibility (EMC) protection.

1. Output channel 1 – fault red LED
2. Output channel 2 – fault red LED
3. Output channel 1 – green LED
4. Output channel 2 – green LED
5. IPS2050HQ-32
6. Output and power supply connector

Figure 3. STEVAL-IFP044V1 expansion board: power stage components

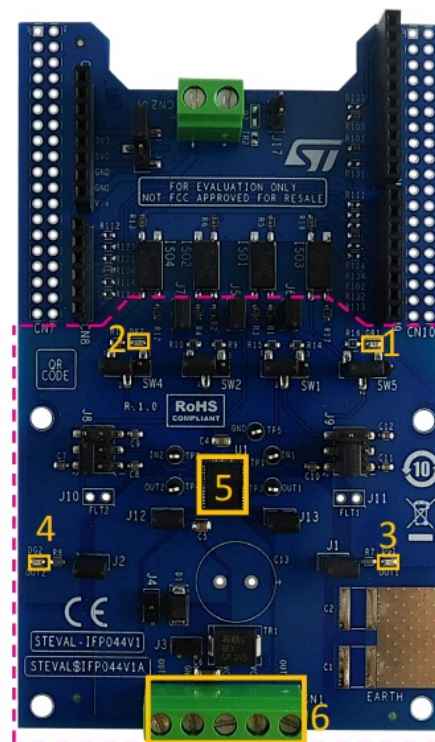

For EMC:

- The SM15T39CA transient voltage suppressor (TR1), enabled by closing JP3, is placed between VCC and GND tracks to protect the IPS2050HQ-32 against surge discharge on the supply rail path up to  $\pm 1\text{kV}/2\Omega$  coupling;
- in common mode surge testing, two single-layer capacitors (C1 and C2 – not included) must be soldered at the predisposed locations;
- the IPS2050HQ-32 output stages do not require additional EMC protections with respect to the IEC61000-4-2, IEC61000-4-3, IEC61000-4-5 standards.


### Hardware requirements



The STEVAL-IFP044V1 expansion board is designed to be used with the NUCLEO-F401RE or NUCLEO-G431RB STM32 Nucleo development boards.

To function correctly, the STEVAL-IFP044V1 must be plugged onto the matching Arduino UNO R3 connector pins on the STM32 Nucleo board as shown below.

Figure 4. STEVAL-IFP044V1 and STM32 Nucleo stack

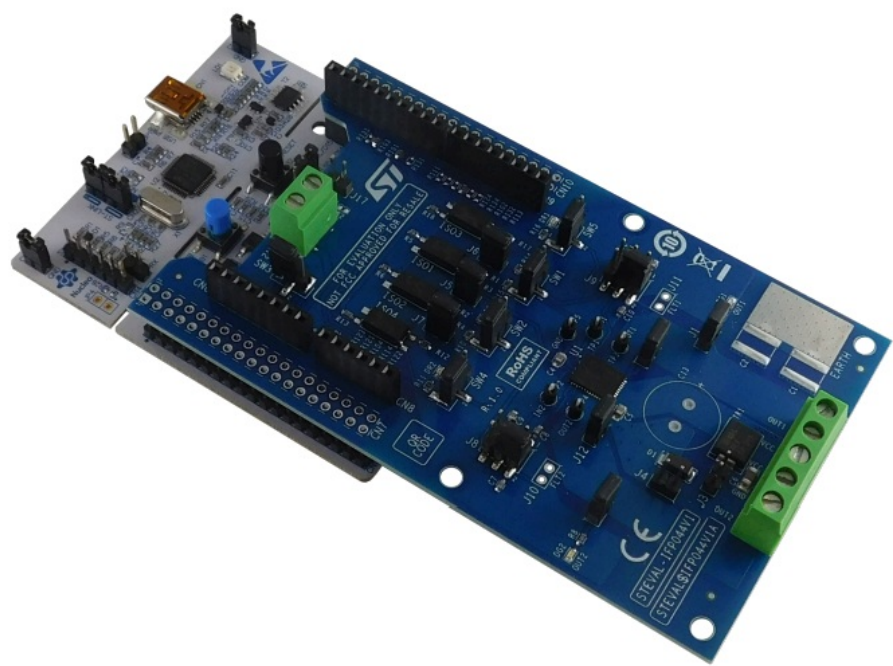

System requirements

To use the STM32 Nucleo development boards with the STEVAL-IFP044V1 expansion board, you need:

- a Windows PC/laptop (Windows 7 or above)
- a type A to mini-B USB cable to connect the STM32 Nucleo board to the PC when using a NUCLEO-F401RE development board
- a type A to micro-B USB cable to connect the STM32 Nucleo board to the PC when using a NUCLEO-G431RB development board
- the X-CUBE-IPS firmware and software package installed on your PC/laptop

Board setup

- **Step 1.** Connect the micro-USB or mini/USB cable to your PC to use the STEVAL-IFP044V1 with NUCLEOF401RE or NUCLEO-G431RB development board
- **Step 2.** Download the firmware (.bin or .hex) onto the STM32 Nucleo development board microcontroller through STM32 ST-LINK utility, STM32CubeProgrammer and according to your IDE environment as detailed in the table below.

Table 1. NUCLEO-F401RE development board supported IDEs – bin files

NUCLEO-F401RE		
IAR	Keil	STM32CubeIDE
EWARM-OUT03_04- STM32F4xx_Nucleo.bin	MDK-ARM-OUT03_04- STM32F4xx_Nucleo.bin	STM32CubeIDE-OUT03_04- STM32F4xx_Nucleo.bin

Table 2. NUCLEO-G431RB development board supported IDEs – bin files

NUCLEO-G431RB		
IAR	Keil	STM32CubeIDE
EWARM-OUT03_04-  STM32G4xx_Nucleo.bin	MDK-ARM-OUT03_04-  STM32G4xx_Nucleo.bin	STM32CubeIDE-OUT03_04-  STM32G4xx_Nucleo.bin

**Note: The binary files listed in the tables above are included in the X-CUBE-IPS software package. The STEVAL-IFP044V1 is fully compatible with the X-NUCLEO-OUT04A1..**

- **Step 3.** Connect the IPS2050HQ-32 device supply voltage via CN1 (see Section 1.1.2 Power section).
- **Step 4.** Provide the digital supply voltage (see Section 1.1.1 Digital section).
- **Step 5.** Connect the load on the output connector (see Section 1.1.2 Power section).
- **Step 6.** Reset the example sequence by pushing the black button on the STM32 Nucleo board.
- **Step 7.** Push the blue button on STM32 Nucleo board to choose among the examples provided in the default firmware package.

### Multiple board configuration

It is also possible to evaluate an eight channel digital output module by stacking four STEVAL-IFP044V1 with shared or independent supply rail and independent loads.  
 In this case, the four expansion boards (board 0, 1, 2, 3 as shown in the table below) must be properly configured: for board 1, 2 and 3, it is necessary to unsolder four resistors for each board from the default position and solder them back in the alternate positions according to the following table.

Table 3. Configuration of a stack of four expansion boards

Board no.	IN1	IN2	FLT1	FLT2
Board 0	R101	R102	R103	R104
Board 1	R131	R132	R133	R134
Board 2	R111	R112	R113	R114
Board 3	R121	R122	R123	R124

**Important:** When using Board 2 and Board 3, two jumpers must close the morpho connectors pins in the STM32 Nucleo board:

- CN7.35-36 closed
- CN10.25-26 closed

### Schematic diagrams

Figure 5. STEVAL-IFP044V1 circuit schematic (1 of 2)

Figure 5. STEVAL-IFP044V1 circuit schematic (1 of 2)

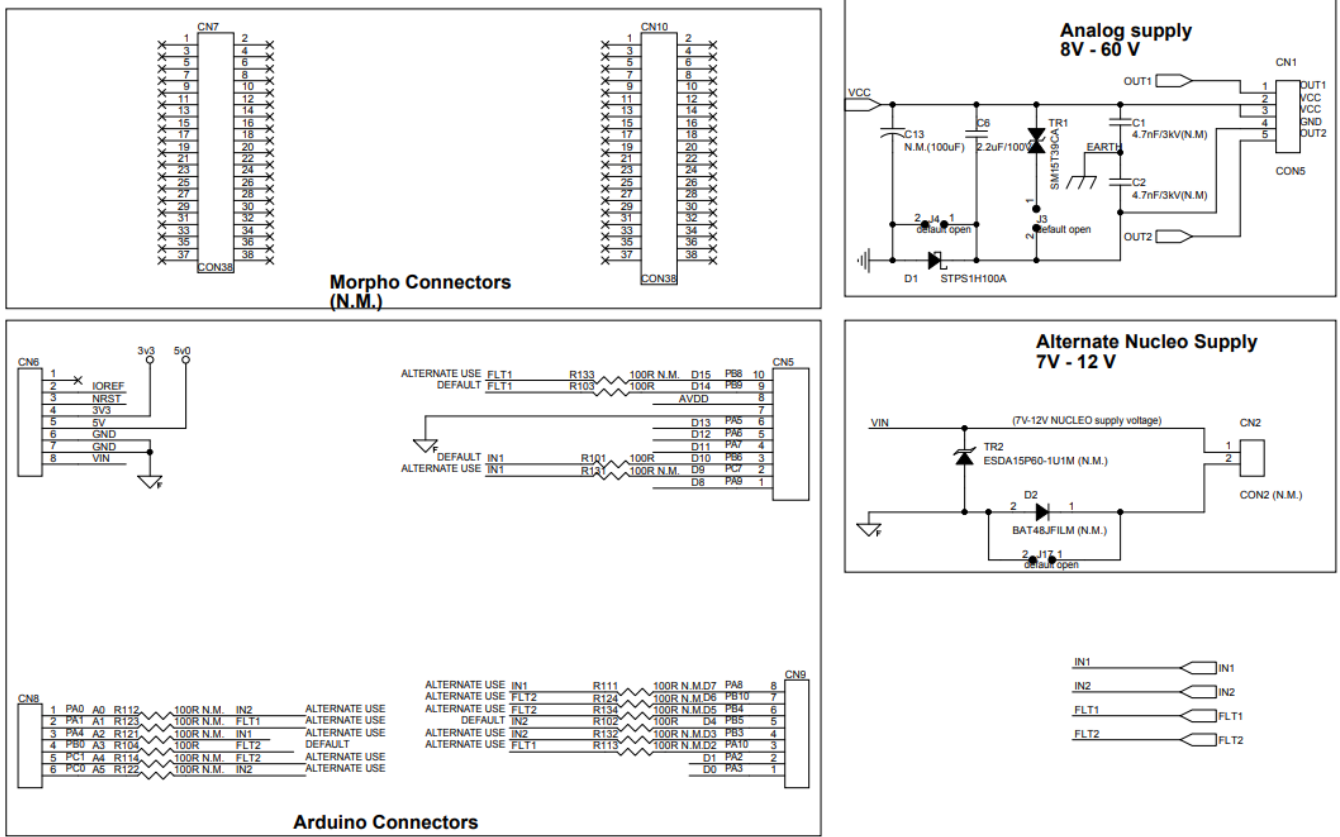


Figure 6. STEVAL-IFP044V1 circuit schematic (2 of 2)

Figure 6. STEVAL-IFP044V1 circuit schematic (2 of 2)

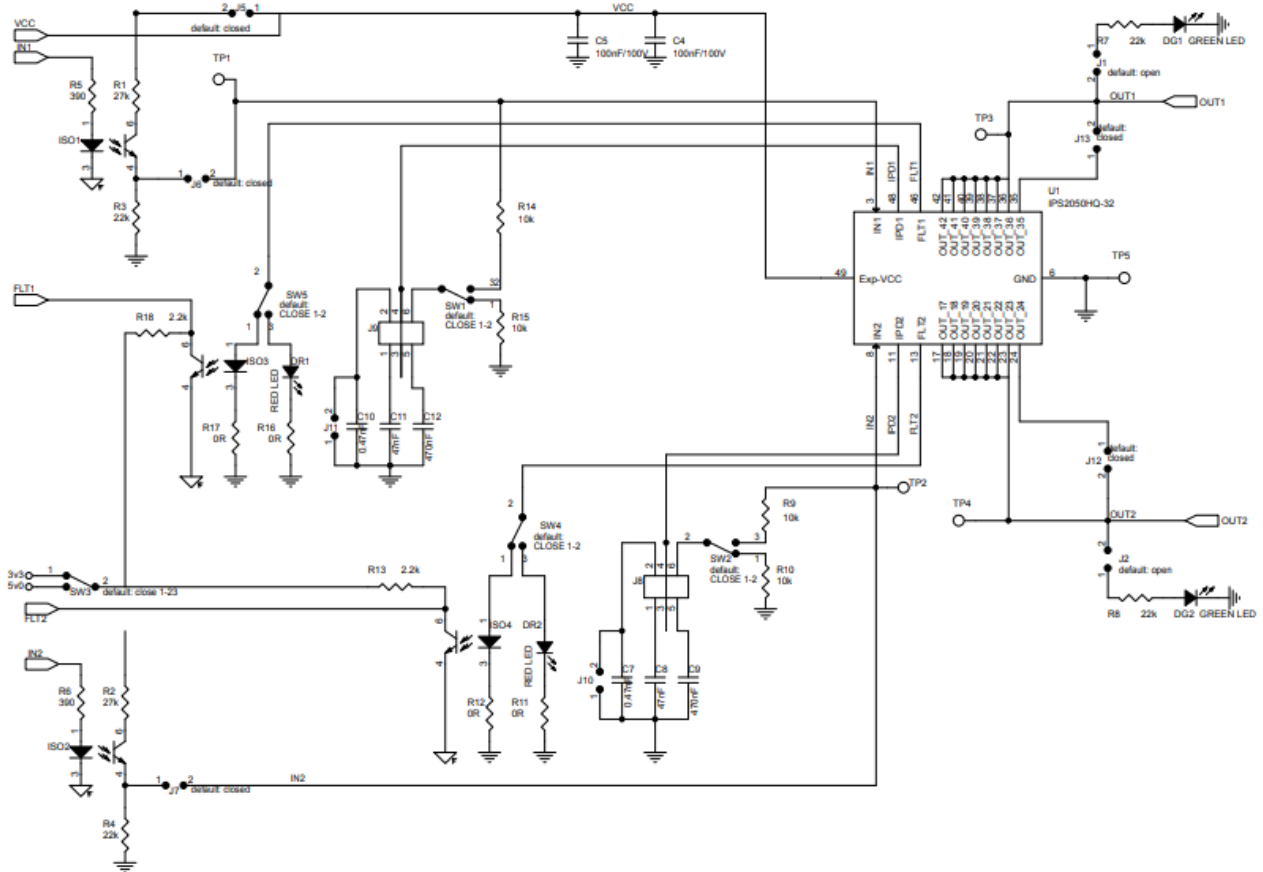




Table 4. STEVAL-IFP044V1 bill of materials

Item	Qty	Ref.	Part/Value	Description	Manufacturer	Order code
1	1	U1	IPS2050HQ-32, QFN48L  8×6 mm	Dual HS IPS	ST	IPS2050HQ-32
2	1	CN1	5 ways, 1 row, TH 5mm, 24 A	Connector	WURTH	691137710005
3		C1,C2 N.A.	4.7nF, 1825, 3k V	Capacitors	Vishay	HV1825Y472KXHAT HV
3	1	TR1	SM15T39CA, SMC	1500 W, 33.3 V TV S in SMC	ST	<a href="#">SM15T39CA</a>
4	1	D1	STPS1H100A, SMA	100 V, 1 A power S chottky rectifier	ST	<a href="#">STPS1H100A</a>
5	10	J1, J2, J3,  J4, J5, J6, J7, J12, J1 3 J17	TH 2.54mm	2 ways, 1 row	WURTH	61300211121
6		J10, J11 N .A.	TH 2.54mm	Jumpers	–	–
7	2	C4, C5	100nF, 0805, 100 V	Capacitors	WURTH	885012207128
8	1	C6	2.2uF, 1206, 100 V	Capacitor	AVX	12061C225KAT2A
9	2	C7, C10	470pF, 0603, 16 V	Capacitors	WURTH	885012206032
10	2	C8, C11	47nF, 0603, 16 V	Capacitors	WURTH	885012206044
11	2	C9, C12	470nF, 0603, 25 V	Capacitors	WURTH	885012206075
12		C13 N.A.	100uF, TH, 100 V	Capacitor	–	–
13	4	ISO1, ISO 2 ISO3, IS O4	TLP383, 11-4P1A, VCE = 80V VISO=5k V	OPTOCOUPLER	TOSHIBA WU RTH	TLP383 140100146000
14	2	R1, R2	27kΩ, 0603, 0.1 W	Resistors	MULTICOMP	MCMR06X2702FTL
15	2	R3, R4	22kΩ, 0603, 0.1 W	Resistors	VISHAY	CRCW060322K0FK EA
16	2	R5, R6	390Ω, 0603, 0.1 W	Resistors	YAGEO	RC0603FR-07390R L
17	2	DG1, DG2	150060GS75000, 0603	Green LED	WURTH	150060GS75000
18	2	R7, R8	22kΩ, 0603, 0.2 W	Resistors	TE-CONN	CRGH0603J22K
19	2	DR1, DR2	150060RS75000, 0603	RED LED	WURTH	150060RS75000

20	2	J8, J9	SMD 2.54mm	6 ways, 2 rows connector	WURTH	61030621121
21	4	R9, R10, R14, R15	10kΩ, 0603, 0.1 W, ±1 %	Resistors	Bourns	CR0603-FX-1002ELF
22	4	R11, R12, R16, R17	0Ω, 0603, 0.1 W	Resistors	MULTICOMP	MCWR06X000 PTL
23	2	R13, R18	2.2kΩ, 0603, 0.1 W	Resistors	MULTICOMP	MCMR06X2201FTL
24	4	R101, R102, R103, R104	100Ω, 0603, 0.1 W, ±0.5 %	Resistors	Panasonic	ERJ3BD1000V
25		R111, R121, R131 R112, R122, R132 R113, R123, R133 R114, R124, R134 N.A.	100Ω, 0603	Resistors	–	–

Item	Qty	Ref.	Part/Value	Description	Manufacturer	Order code
26	5	SW1, SW2, SW3, SW4, SW5	SMD 2.54mm	3 ways, 1 row	TE-CONN	1241150-3
27	1	CN2	TH 5mm	2 ways, 1 row	WURTH	691137710002
28		D2 N.A.	BAT48JFILM, SOD-323, 40 V, 0.35 A	VDD reverse polarity protection	ST	<a href="#">BAT48JFILM</a>
29		TR2 N.A.	ESDA15P60-1U1M, QFN-2L	High-power transient voltage suppressor	ST	<a href="#">ESDA15P60-1U1M</a>
30	1	CN5	TH 2.54mm	10 ways, 1 row	SAMTEC 4UCON	ESQ-110-14-T-S 17896
31	2	CN6, CN9	TH 2.54mm	8 ways, 1 row	SAMTEC 4UCON	ESQ-108-14-T-S 15782
32	1	CN8	TH 2.54mm	6 ways, 1 row	SAMTEC 4UCON	ESQ-106-04-T-S 15781
33		CN7, CN10 N.A.	TH 2.54mm	Connectors	SAMTEC	ESQ-119-14-T-D
34	5	TP1, TP2, TP3, TP4, TP5	TH d = 1mm	Test point	RS	262-2034

## Board versions

**Table 5.** STEVAL-IFP044V1 versions

PCB version	Schematic diagrams	Bill of materials
STEVAL\$IFP044V1A (1)	<a href="#">STEVAL\$IFP044V1A schematic diagram</a>	<a href="#">STEVAL\$IFP044V1A bill of material</a>

This code identifies the STEVAL-IFP044V1 evaluation board first version. It is printed on the board PCB.

## Regulatory compliance information

### Notice for US Federal Communication Commission (FCC)

For evaluation only; not FCC approved for resale

**FCC NOTICE** – This kit is designed to allow:

1. Product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and
2. Software developers to write software applications for use with the end product.

This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference. Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter 3.1.2.

### Notice for Innovation, Science and Economic Development Canada (ISED)

For evaluation purposes only. This kit generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to Industry Canada (IC) rules.

À des fins d'évaluation uniquement. Ce kit génère, utilise et peut émettre de l'énergie radiofréquence et n'a pas été testé pour sa conformité aux limites des appareils informatiques conformément aux règles d'Industrie Canada (IC).

### Notice for the European Union

This device is in conformity with the essential requirements of the Directive 2014/30/EU (EMC) and of the Directive 2015/863/EU (RoHS).

Notice for the United Kingdom This device is in compliance with the UK Electromagnetic Compatibility Regulations 2016 (UK S.I. 2016 No. 1091) and with the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (UK S.I. 2012 No. 3032).

## Revision history

**Table 6.** Document revision history

Date	Revision	Changes
29-Aug-2022	1	Initial release.

## IMPORTANT NOTICE – READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgment.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, refer to

[www.st.com/trademarks](http://www.st.com/trademarks). All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2022 STMicroelectronics – All rights reserved

## Documents / Resources

	<p><a href="#">STMicroelectronics STEVAL-IFP044V1 Industrial Digital Output Expansion Board</a> [pdf] User Manual</p> <p>STEVAL-IFP044V1, Industrial Digital Output Expansion Board, STEVAL-IFP044V1 Industrial Digital Output Expansion Board, Digital Output Expansion Board, Output Expansion Board, Expansion Board, Board</p>
---	--

## References

- [STMicroelectronics: Our technology starts with you](#)
- [STMicroelectronics Trademark List - STMicroelectronics](#)
- [BAT48 - 40 V, 350 mA Axial General purpose Signal Schottky Diode - STMicroelectronics](#)
- [ESDA15P60-1U1M - High-power transient voltage suppressor \(TVS\) - STMicroelectronics](#)
- [IPS2050H-32 - High efficiency, high-side switch with extended diagnostics and smart driving for capacitive loads - STMicroelectronics](#)
- [NUCLEO-F401RE - STM32 Nucleo-64 development board with STM32F401RE MCU, supports Arduino and ST morpho connectivity - STMicroelectronics](#)
- [NUCLEO-G431RB - STM32 Nucleo-64 development board with STM32G431RB MCU, supports Arduino and ST morpho connectivity - STMicroelectronics](#)
- [SM15T39CA - 1500 W, 33.3 V TVS in SMC - STMicroelectronics](#)
- [STEVAL-IFP044V1 - Industrial digital output expansion board based on IPS2050H-32 in a QFN48L package - STMicroelectronics](#)
- [STPS1H100 - 100 V, 1 A Power Schottky Rectifier - STMicroelectronics](#)
- [STSW-LINK004 - STM32 ST-LINK utility \(replaced by STM32CubeProgrammer\) - STMicroelectronics](#)
- [X-CUBE-IPS - Software expansion for STM32Cube driving industrial digital output based on IPS - STMicroelectronics](#)
- [X-NUCLEO-OUT04A1 - Industrial digital output expansion board based on IPS2050H-32 for STM32 Nucleo - STMicroelectronics](#)
- [STM32CubeProg - STM32CubeProgrammer software for all STM32 - STMicroelectronics](#)
- [STM32 Nucleo Boards - STMicroelectronics](#)

