


STMicroelectronics UM3184 Industrial Digital Output Expansion Board User Manual

[Home](#) » [STMicroelectronics](#) » STMicroelectronics UM3184 Industrial Digital Output Expansion Board User Manual 

STMicroelectronics UM3184 Industrial Digital Output Expansion Board User Manual

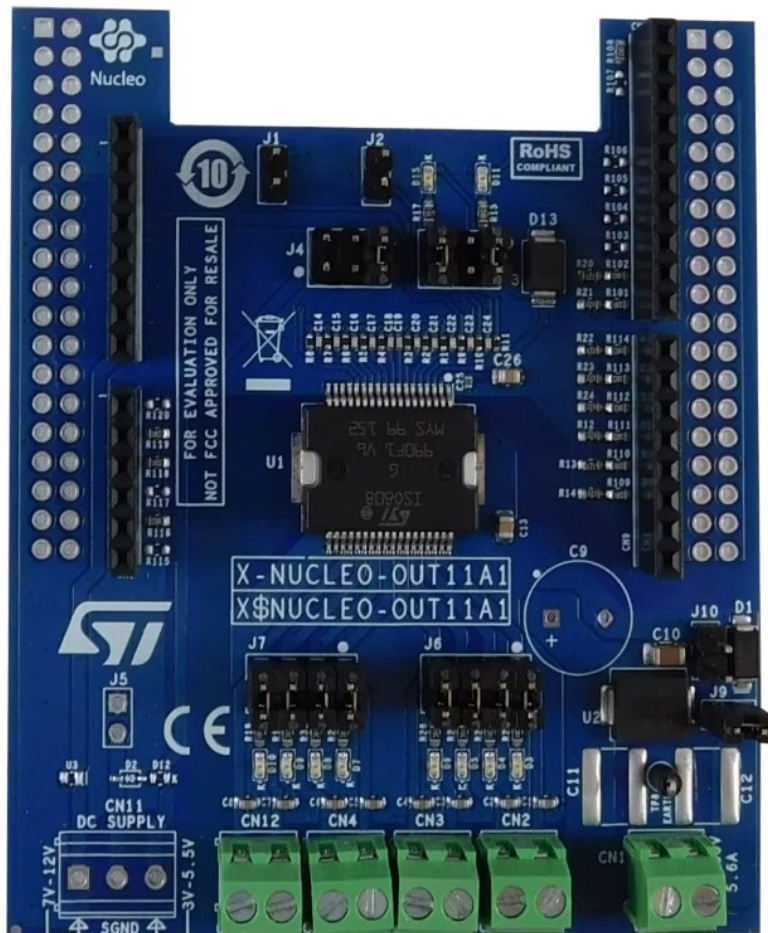

Contents

- 1 Introduction
- 2 Getting started
 - 2.1 Overview
 - 2.2 Board configuration
 - 2.3 Digital section
 - 2.4 Power section
 - 2.5 Hardware requirements
 - 2.6 System requirements
 - 2.7 Board setup
- 3 Schematic diagrams
- 4 Bill of materials
- 5 Board versions
- 6 Regulatory compliance information
- 7 References
- 8 Revision history
- 9 List of tables
- 10 List of figures
- 11 IMPORTANT NOTICE – READ CAREFULLY
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

Introduction

The X-NUCLEO-OUT01A2 is an industrial digital output expansion board for STM32 Nucleo. It provides a powerful and flexible environment for the evaluation of the driving and diagnostic capabilities of the ISO8200BQ octal high-side smart power solid state relay, with embedded galvanic isolation, in a digital output module connected to 0.7 A industrial loads.


The X-NUCLEO-OUT01A2 directly interfaces with the microcontroller on the STM32 Nucleo driven by GPIO pins and Arduino® R3 connectors.

The galvanic isolation between the microcontroller and the process stage is guaranteed by the ISO8200BQ.

The expansion board can be connected to either a NUCLEO-F401RE or a NUCLEO-G431RB development board. It is also possible to evaluate a system composed of a X-NUCLEO-OUT01A2 stacked on other expansion boards.

The board can be configured as the former X-NUCLEO-OUT01A1 by a set of jumpers (open: J13, J14, J15, J16, J17) and switches (close 1-2: SW1, SW28, SW29, SW30, SW31, SW32, SW33, SW35, SW37). In this case, the driving firmware can be only the X-CUBE-OUT1 and the board can be connected to the X-NUCLEO-PLC01A1 to form a powerful industrial PLC with 8 inputs and 16 outputs. Also, wireless communication capabilities can be added with the X-NUCLEO IDW01M1, which establishes communication on a smart device to manage the PLC remotely. A dedicated ST-PLC app is available for Android™ and iOS™ systems for this purpose.

Figure 1. X-NUCLEO-OUT01A2 expansion board

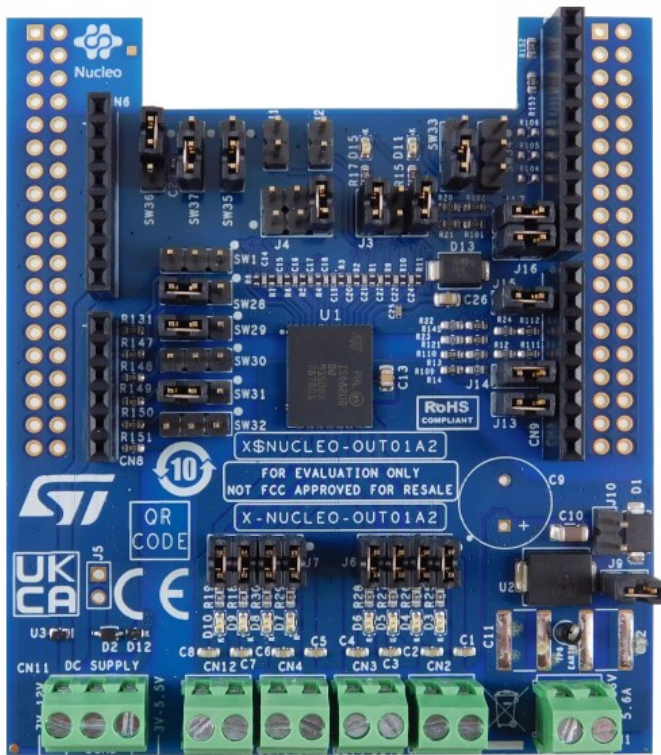

Getting started

Overview

The X-NUCLEO-OUT01A2 embeds the ISO8200BQ intelligent power switch (IPS), which features galvanic isolation, overcurrent and overtemperature protection for safe output loads control.

The board is designed to meet the application requirements for the galvanic isolation between the user and power interfaces.

The galvanic isolation embedded by the ISO8200BQ satisfies this requirement, avoiding the necessity of external controllers, with a consequent cost saving and a reduced application size.

The expansion board features:

- Based on the ISO8200BQ octal high-side switch, which features:
 - Operating range 10.5 to 36 V
 - Low power dissipation ($R_{ON(MAX)} = 240 \text{ m}\Omega$)
 - Process side operating current: up to 0.7 A per channel
 - Embedded 2.5k VRMS galvanic isolation
 - Direct (jitter < 20us) and synchronous (jitter < 6us) control modes
 - Fast decay for inductive loads
 - Undervoltage lock-out
 - Overload and overtemperature protections
 - Loss of ground protection
 - TFQFPN32 package
- Application board process side operating range: 11 (J10 open) to 33 V (J9 closed)
- Extended operating range of process side from 10.5 (J10 closed) up to 36 V (J9 open)
- Application board logic side operating voltage 3.3 to 5 V
- Green LEDs for outputs on/off status (J6 and J7 close 1-2, 3-4, 5-6, 7-8)

- Red LED for common overheating and communication error diagnostic (J3 close 1-2)
- Yellow LED for output enable status signalization (J3 close 5-6)
- Direct control mode (J1 and J2 closed, SW37 close 2-3, SW36 close 1-2)
- Synchronous control mode (J1 and J2 open, SW37 close 2-3, SW36 close 2-3)
- Process and logic supply rails reverse polarity protections
- Compatible with STM32 Nucleo development boards
- Equipped with Arduino® UNO R3 connectors
- RoHS and China RoHS compliant
- CE certified
- **Radiated emission:** class B according to the standard EN 55032

Board configuration

A set of jumpers and switches is available to configure the board. The Table 1 shows the standard configuration, whereas the Table 2 shows how to configure the board to maintain the hardware compatibility with the previous version. At last, in Table 3 is reported a list of switch and jumpers which configuration is common for both version.

Table 1. X-NUCLEO-OUT01A2

Jumpers / Switches	Default configuration
SW1, SW30, SW32, SW34	all open
SW28, SW29, SW31, SW33, SW35, SW37	close 2-3
J13, J14, J15, J16, J17	close

Table 2. X-NUCLEO-OUT01A1

Jumpers / Switches	Default configuration
SW1, SW28, SW29, SW30, SW31, SW32, SW33, SW34, SW35, SW37	close 1-2
J13, J14, J15, J16, J17	open


Table 3. A1 and A2 version

Jumpers / Switches	Default configuration
SW36	close 1-2
J1, J2, J10	open
J3	close 1-2, 5-6
J4	close 5-6
J6, J7	close 1-2, 3-4, 5-6, 7-8
J9	close

Digital section

The digital section is associated with the STM32 interface and the digital supply voltage to and from the XNUCLEO-OUT01A2 expansion board.

Figure 2. X-NUCLEO-OUT01A2 expansion board: digital interface section

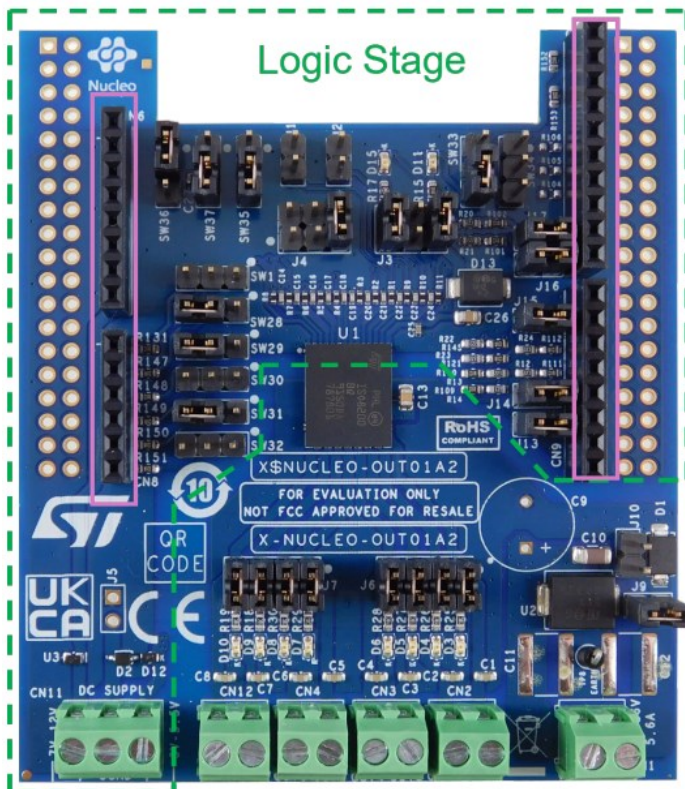

The dotted green line indicates the whole digital interface section. The pink rectangles identify the Arduino® UNO R3 connectors.

The four Arduino® UNO R3 connectors:

- allow the expansion board to communicate with the STM32 Nucleo development microcontroller board accessing the STM32 peripheral and GPIO resources;
- provide the digital supply voltage between the STM32 Nucleo development board and the X **NUCLEOOUT01A2** expansion board, in either direction

Usually, the STM32 Nucleo development board supplies the expansion board by a 3.3 V or 5.0 V generated by the USB.

Alternatively, it is possible to supply the STM32 Nucleo development board from the expansion board. In this case, an external supply voltage (7-12 V) should be connected to the CN11 connector (not mounted by default) on the expansion board and the ground loop should be closed by mounting D2 (enabling the reverse polarity protection) or by closing J5 (without reverse polarity). In this scenario, the logic side of the ISO8200BQ can be supplied by the 3.3 V supply rail generated by the expansion board: in this case, on the X-NUCLEO OUT01A2, J4 must be closed between pins 5 and 6.

To supply the VIN voltage rail, it is necessary to:

- close the JP5 jumper between pins 2 and 3 and open the JP1 jumper on the **NUCLEO-F401RE**;
- open the JP5 jumper between pins 1 and 2 and close the JP5 jumper between pins 3 and 4 on the **NUCLEO-G431RB**.

The pin 3 of the connector CN11 can be used to supply the logic side of the **ISO8200BQ** independently by the


expansion board. In this case, on the **X-NUCLEO-OUT01A2**, the pins 1 and 2 of J4 must be closed (pins 5-6 open).

Power section

The power section involves the power supply voltage (CN1, pin 1 for VCC, pin 2 for GND), the load connection (eight loads can be connected between each pin of CN2, CN3, CN4, and CN12 and pin 2 of CN1), EMC protections (U2), and supply reverse polarity protection (D1)

Figure 3. X-NUCLEO-OUT01A2 expansion board: power section

1. ISO8200BQ
2. Output and power supply connector
3. Output channels – green LEDs
4. Status (overtemperature) red LED
5. Output Enable yellow LED

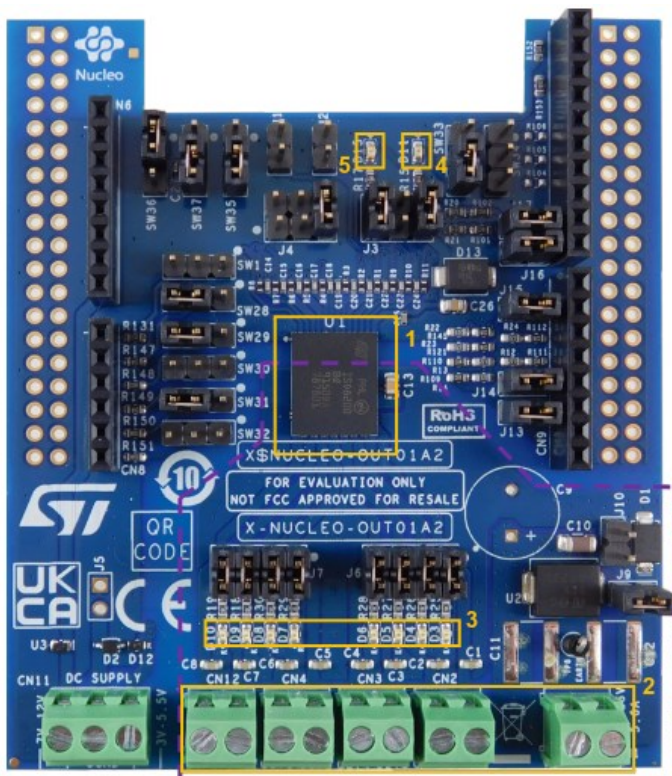

Process Stage

For EMC:

- the **SM15T39CA** transient voltage suppressor (U2), enabled by closing J9, is placed between VCC and GND tracks to protect the **ISO8200BQ** against surge discharge on the supply rail path up to $\pm 1 \text{ kV/}2 \Omega$ coupling;
- in the common mode surge testing, two single-layer capacitors (C11 and C12 – not included) must be soldered at the predisposed locations;
- the ISO8200BQ output stages do not require additional EMC protections with respect to the IEC61000 4-2, IEC61000-4-3, IEC61000-4-4, IEC61000-4-5, IEC61000-4-8 standards.

The EMC performance of the X-NUCLEO-OUT01A2 is detailed below:


- for emission (when the DC input port of the board is powered by an AC-DC, DC-DC or battery with a cable that does not exceed a three-meter length), compliance with standards:
 - EN IEC 61000-6-3:2021
 - EN 55032:2015 +A1:2020
- for immunity, compliance with standards:
 - EN IEC 61000-6-1:2019
 - EN 55035:2017 +A11:2020

Hardware requirements

The **X-NUCLEO-OUT01A2** expansion board is designed to be used with the NUCLEO-F401RE or **NUCLEOG431RB STM32** Nucleo development boards.

To function correctly, the **X-NUCLEO-OUT01A2** must be plugged onto the matching Arduino® UNO R3 connector pins on the **STM32** Nucleo board as shown below

Figure 4. X-NUCLEO-OUT01A2 and STM32 Nucleo stack

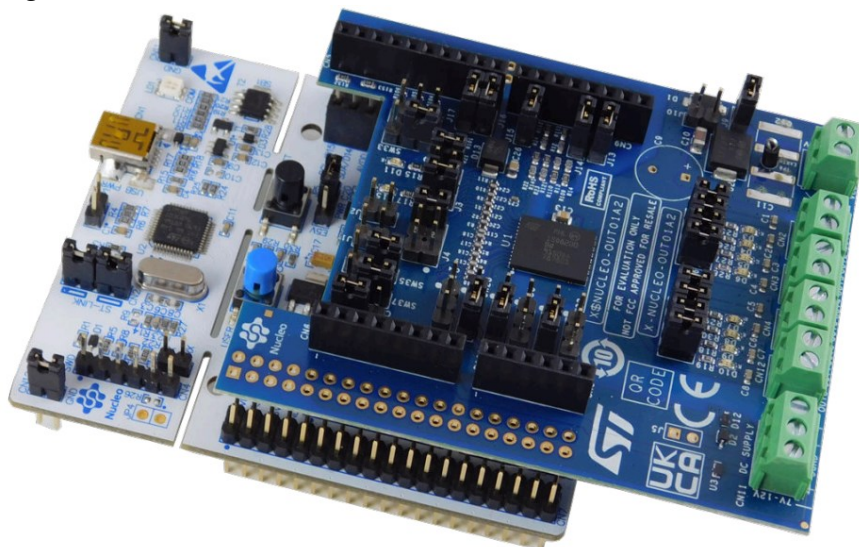

System requirements

To use the STM32 Nucleo development boards with the X-NUCLEO-OUT01A2 expansion board, you need:

- a Windows PC/laptop (Windows 7 or above)
- a type A to mini-B USB cable to connect the STM32 Nucleo board to the PC when using a **NUCLEOF401RE** development board
- a type A to micro-B USB cable to connect the STM32 Nucleo board to the PC when using a **NUCLEOG431RB** development board
- the **X-CUBE-IPS** firmware and software package installed on your PC/laptop

Board setup

If the board is configured as X-NUCLEO-OUT01A1, refer to UM2209 and X-CUBE-OUT1 as the control firmware. When the board is configured as X-NUCLEO-OUT01A2, refer to the following steps:

Step 1. Connect the mini-USB or micro-USB cable to your PC to use the **X-NUCLEO-OUT01A2** with **NUCLEOF401RE** or **NUCLEO-G431RB** development board

Step 2. Download the firmware (.bin) provided with the X-CUBE-IPS software package as detailed in Table 4. The **X-NUCLEO-OUT01A2** must be configured coherently to the selected control mode for **ISO8200BQ** through SW37 and SW36. These switches define the level of ISO_DRV signal: according to the level of this signal (high or low), the firmware will properly manage respectively the synchronous or the direct control mode.


Table 4. Nucleo development boards binary files


Nucleo board	Binary path
<i>NUCLEO-F401R</i> <i>E</i>	Projects\STM32F401RE- Nucleo\Examples\OUT01A2\EightChannels\Binary\EightChannels.bin
<i>NUCLEO-G431R</i> <i>B</i>	Projects\STM32G431RB- Nucleo\Examples\OUT01A2\EightChannels\Binary\EightChannels.bin

- Step 3.** Connect the ISO8200BQ device supply voltage via CN1 (see Section 1.4 Power section).
Step 4. Provide the digital supply voltage (see Section 1.3 Digital section).
Step 5. Connect the load on the output connector (see Section 1.4 Power section).
Step 6. Reset the example sequence by pushing the black button on the STM32 Nucleo board.
Step 7. Push the blue button on the STM32 Nucleo board to choose among the examples provided in the default firmware package.

Schematic diagrams

Figure 5. X-NUCLEO-OUT01A2 circuit schematic (1 of 2)

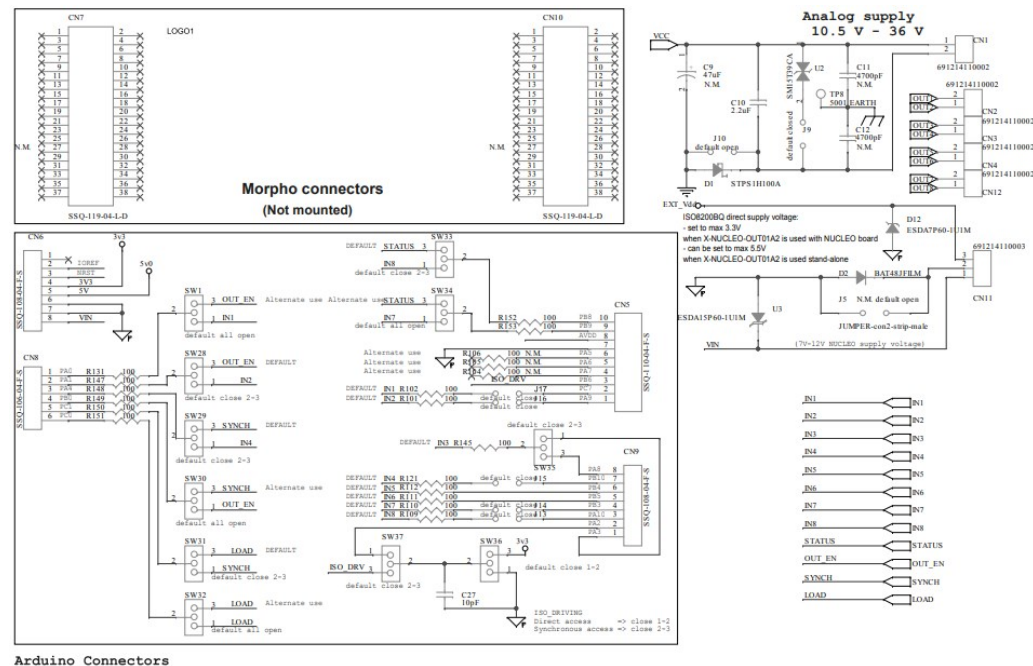

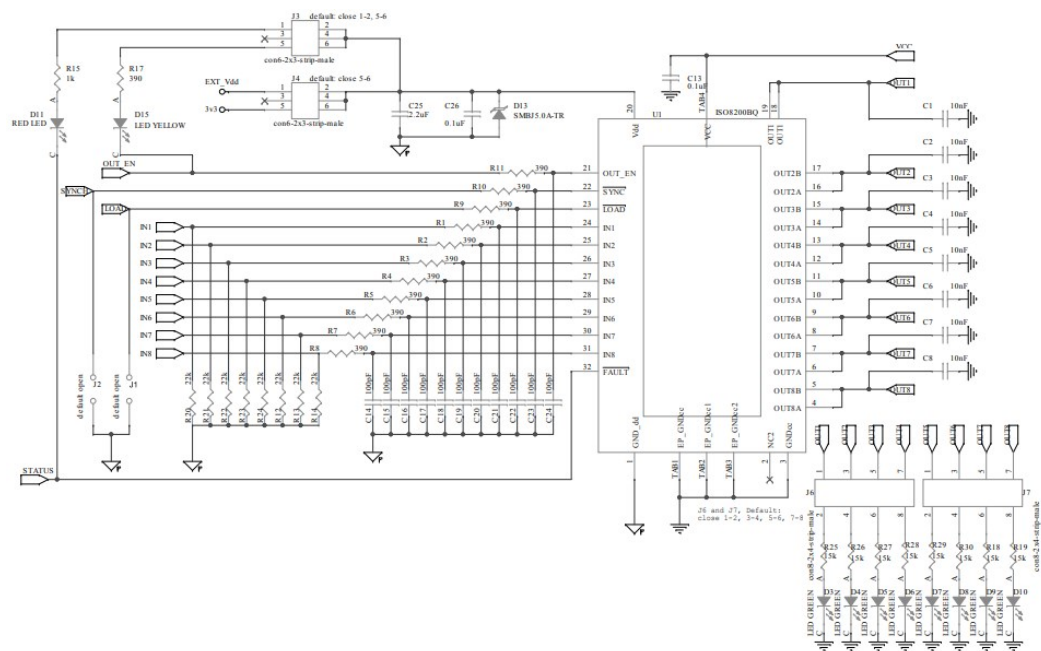

8	1	C27	10pF	CAP CER 10 PF 10V C0G/ NP00402	Würth Electronics Inc.	885012005007
9	5	CN1 CN2 CN3 CN4 CN12	691214110002	TERM BLK 2 POS SIDE ENT 3.5MM PCB	Würth Electronics Inc.	691214110002
10	1	CN5	10 ways, 1 row	CONN RCPT 10POS 0.1 GOLD PCB	SAMTEC 4U CON	ESQ-110-14-T- S 17896
11	2	CN6 CN9	8 ways, 1 row	CONN RCPT 8POS 0.1 GOLD PCB	SAMTEC 4U CON	ESQ-108-14-T- S 15782
12	0	CN7 CN10	SSQ-119-04-L- D	CONN RCPT 38POS 0.1 GOLD PCB	Samtec Inc.	SSQ-119-04-L- D
13	1	CN8	6 ways, 1 row	CONN RCPT 6POS 0.1 GOLD PCB	SAMTEC 4U CON	ESQ-106-04-T- S 15781
14	1	CN11	691214110003	TERM BLK 3 POS SIDE ENT 3.5MM PCB	Würth Electronics Inc.	691214110003
15	1	D1	STPS1H100A , SMA	DIODE SCH OTTKY 100V 1A SMA	STMicroelectronics	STPS1H100A
16	1	D2	BAT48JFILM , SOD323	DIODE SCH OTTKY 40V 350MA SOD323	STMicroelectronics	BAT48JFILM
17	8	D3 D4 D5 D6 D7 D8 D9 D10	LED GREEN	LED GREEN CLEAR 0603 SMD	Würth Electronics Inc.	150060VS75000
18	1	D11	RED LED	LED RED CLEAR 0603 SMD	Würth Electronics Inc.	150060RS75000
19	1	D12	ESDA7P60-1 U1 M, QFN-2L	TVS DIODE 5VWM 11.6VCL1610	STMicroelectronics	ESDA7P60-1 U1 M

20	1	D13	SMBJ5.0A-T R, QFN-2L	TVS DIODE 5 V 13.4V SMB	STMicroelectr on ics	SMBJ5.0A-T R
21	1	D15	LED YELLO W	LED YELLO W CLEAR 06 03 SMD	Würth Electro nics Inc.	150060YS750 00
22	9	J1 J2 J9 J10 J13 J14 J15 J 16 J17	JUMPER- con2-strip-ma le	JUMPER- CO NN HEADER .100 STR 2P OS	Würth Electr onics Inc	61300211121
23	0	J5	JUMPER- con2-strip-ma le	JUMPER- CO NN HEADER .100 STR 2P OS	Würth Electr onics Inc	61300211121
24	2	J3 J4	con6-2×3-stri p- male	CONN HEAD ER .100 DUA L STR 6POS	Würth Electr onics Inc.	61300621121
25	2	J6 J7	con8-2×4-stri p- male	CONN HEAD ER VERT 8P OS 2.54MM	Würth Electro nics Inc.	61300821121
26	11	R1 R2 R3 R4 R5 R6 R7 R8 R9 R10 R11	390	CHIP RESIST OR SMD 5% 1/10W0402	Panasonic	ERJH2GJ391 X
27	8	R12 R13 R14 R20 R21 R22 R23 R24	22k	RES SMD 22 K OHM 1% 1/ 10W0603	Yageo	RC0603FR-0 72 2KL
28	1	R15	1k	RES SMD 1K OHM 1% 1/10W0603	Yageo	RC0603FR-0 71 KL
29	1	R17	390	RES SMD 39 0OHM 1% 1/ 10W0603	Yageo	RC0603FR-0 73 90RL
30	8	R18 R19 R25 R26 R27 R28 R29 R30	15k	RES SMD 15 K OHM 1% 1/ 10W0603	Yageo	RC0603FR-0 71 5KL

31	16	R101 R102 R109 R110 R111 R112 R121 R131 R145 R147 R148 R149 R150 R151 R152 R153	100	RES SMD 100OHM 1% 1/10W0603	Yageo	RC0603FR-071 00RP
32	0	R104 R105 R106	100	RES SMD 100OHM 1% 1/10W0603	Yageo	RC0603FR-071 00RP
33	11	SW1 SW28 SW29 SW30 SW31 SW32 SW33 SW34 SW35 SW36 SW37	con3-strip-male	CONN HEADER .100 STR 3POS	Würth Elektronik	61300311121
34	1	TP8	5001	TEST POINT PC MINI .040 "D BLACK	Keystone Electronics	5001
35	1	U1	ISO8200BQ, TFQFPN 11.0X9.0X1.0 532L	Galvanic isolated octal high side smart power solid state relay with parallel interface	STMicroelectronics	ISO8200BQTR
36	34	N/A		Close jumper	Würth Electronics Inc.	60900213421
37	1	U2	SM15T39CA, SMC	TVS DIODE 3 3.3V 69.7V SMC	STMicroelectronics	SM15T39CA
38	1	U3	ESDA15P60-1U 1M, QFN-2L	TVS DIODE 1 3.2V 22.7V1610	STMicroelectronics	ESDA15P60-1U 1M

Board versions

Table 6. X-NUCLEO-OUT01A2 versions

PCB version	Schematic diagrams	Bill of materials
X\$NUCLEO-OUT01A2 (1)	X\$NUCLEO-OUT01A2 schematic diagrams	X\$NUCLEO-OUT01A2 bill of materials

1. This code identifies the X-NUCLEO-OUT01A2 evaluation board first version. It is printed on the board PCB.

Regulatory compliance information

Notice for US Federal Communication Commission (FCC)

For evaluation only; not FCC approved for resale

FCC NOTICE – This kit is designed to allow:

1. Product developers to evaluate electronic components, circuitry, or software associated with the kit to determine whether to incorporate such items in a finished product and
2. Software developers to write software applications for use with the end product.

This kit is not a finished product and when assembled may not be resold or otherwise marketed unless all required FCC equipment authorizations are first obtained. Operation is subject to the condition that this product not cause harmful interference to licensed radio stations and that this product accept harmful interference.

Unless the assembled kit is designed to operate under part 15, part 18 or part 95 of this chapter, the operator of the kit must operate under the authority of an FCC license holder or must secure an experimental authorization under part 5 of this chapter 3.1.2.

Notice for Innovation, Science and Economic Development Canada (ISED)

For evaluation purposes only. This kit generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to Industry Canada (IC) rules.

Notice for the European Union

This device is in conformity with the essential requirements of the Directive 2014/30/EU (EMC) and of the Directive 2015/863/EU (RoHS).

Notice for the United Kingdom

This device is in compliance with the UK Electromagnetic Compatibility Regulations 2016 (UK S.I. 2016 No. 1091) and with the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (UK S.I. 2012 No. 3032).

References

Freely available on www.st.com:

- ISO8200BQ datasheet
- UM3035: “Getting started with X-CUBE-IPS industrial digital output software for STM32 Nucleo”
- NUCLEO-F401RE documentation
- NUCLEO-G431RB documentation

Revision history

Table 7. Document revision history

Date	Revision	Changes
04-Jul-2023	1	Initial release.

List of tables

Table 1. X-NUCLEO-OUT01A2 3

Table 2. X-NUCLEO-OUT01A1 3

Table 3. A1 and A2 version 3

Table 4. Nucleo development boards binary files 7

Table 5. X-NUCLEO-OUT01A2 bill of materials 10

Table 6. X-NUCLEO-OUT01A2 versions 13

Table 7. Document revision history 16

List of figures

Figure 1. X-NUCLEO-OUT01A2 expansion board..... 1

Figure 2. X-NUCLEO-OUT01A2 expansion board: digital interface section 4

Figure 3. X-NUCLEO-OUT01A2 expansion board: power section 5

Figure 4. X-NUCLEO-OUT01A2 and STM32 Nucleo stack..... 6

Figure 5. X-NUCLEO-OUT01A2 circuit schematic (1 of 2) 8

Figure 6. X-NUCLEO-OUT01A2 circuit schematic (2 of 2) 9

IMPORTANT NOTICE – READ CAREFULLY

St Microelectronics NV and its subsidiaries (“ST”) reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST’s terms and conditions of sale in place at the time of order acknowledgment.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of purchasers’ products.



Documents / Resources

	<p>STMicroelectronics UM3184 Industrial Digital Output Expansion Board [pdf] User Manual UM3184, UM3184 Industrial Digital Output Expansion Board, Industrial Digital Output Expansion Board, Digital Output Expansion Board, Output Expansion Board, Expansion Board, Board</p>
---	--

References

-  [STMicroelectronics: Our technology starts with you](#)
-  [ISO8200BQ - Galvanic isolated octal high-side smart power solid state-relay - STMicroelectronics](#)
-  [STMicroelectronics Trademark List - STMicroelectronics](#)
-  [STMicroelectronics: Our technology starts with you](#)
-  [BAT48 - 40 V, 350 mA Axial General purpose Signal Schottky Diode - STMicroelectronics](#)
-  [STPS1H100 - 100 V, 1 A Power Schottky Rectifier - STMicroelectronics](#)
-  [X-NUCLEO-IDW01M1 - Wi-Fi expansion board based on SPWF01SA module for STM32 Nucleo - STMicroelectronics](#)
-  [X-NUCLEO-PLC01A1 - Industrial input/output expansion board based on VNI8200XP and CLT01-38SQ7 for STM32 Nucleo - STMicroelectronics](#)
-  [X-CUBE-OUT1 - Industrial digital output software expansion for STM32Cube - STMicroelectronics](#)
-  [NUCLEO-F401RE - STM32 Nucleo-64 development board with STM32F401RE MCU, supports Arduino and ST morpho connectivity - STMicroelectronics](#)
-  [NUCLEO-G431RB - STM32 Nucleo-64 development board with STM32G431RB MCU, supports Arduino and ST morpho connectivity - STMicroelectronics](#)
-  [ISO8200BQ - Galvanic isolated octal high-side smart power solid state-relay - STMicroelectronics](#)
-  [ISO8200BQ - Galvanic isolated octal high-side smart power solid state-relay - STMicroelectronics](#)
-  [NUCLEO-F401RE - STM32 Nucleo-64 development board with STM32F401RE MCU, supports Arduino and ST morpho connectivity - STMicroelectronics](#)
-  [NUCLEO-G431RB - STM32 Nucleo-64 development board with STM32G431RB MCU, supports Arduino and ST morpho connectivity - STMicroelectronics](#)
-  [SM15T39CA - 1500 W, 33.3 V TVS in SMC - STMicroelectronics](#)
-  [X-CUBE-IPS - Software expansion for STM32Cube driving industrial digital output based on IPS - STMicroelectronics](#)
-  [X-NUCLEO-OUT01A1 - Industrial Digital output expansion board based on ISO8200BQ for STM32 Nucleo - STMicroelectronics](#)
-  [X-NUCLEO-OUT01A2 - Industrial digital output expansion board based on ISO8200BQ for STM32 Nucleo - STMicroelectronics](#)
-  [ESDA15P60-1U1M - High-power transient voltage supressor \(TVS\) - STMicroelectronics](#)
-  [ESDA7P60-1U1M - High-power transient voltage suppressor \(TVS\) - STMicroelectronics](#)
-  [SM15T39CA - 1500 W, 33.3 V TVS in SMC - STMicroelectronics](#)
-  [STM32 Nucleo Boards - STMicroelectronics](#)