




STOLTZEN SWC-1 6 Buttons IP Control Panel User Manual

[Home](#) » [STOLTZEN](#) » STOLTZEN SWC-1 6 Buttons IP Control Panel User Manual 



SWC-1 6 Buttons IP Control Panel User Manual

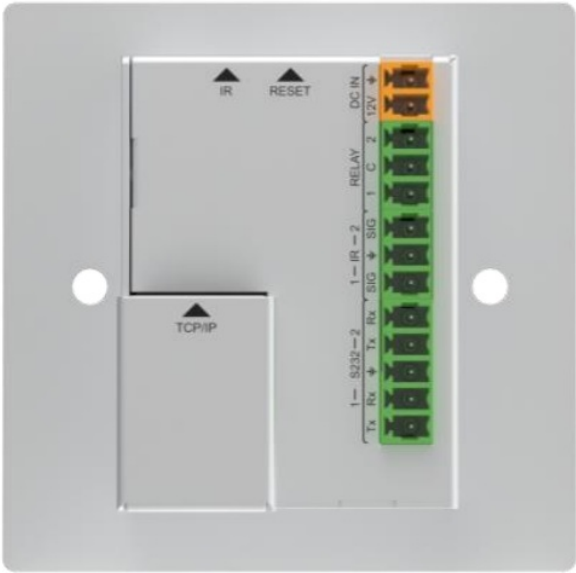

All Rights Reserved
Version: SWC-1_2023V1.0

Program buttons to send RS232 commands to control projectors, screenland other third-party devices.

Contents

- 1 Preface
- 2 FCC Statement
- 3 SAFETY PRECAUTIONS
- 4 Introduction
- 5 Panel Description
- 6 System Connection
- 7 GUI Control
- 8 Specification
- 9 Panel Drawing
- 10 Customer Service
- 11 Documents / Resources

Preface

Read this user manual carefully before using the product. Pictures are shown in this manual for reference only, different models and specifications are subject to real product.

This manual is only for operation instruction, please contact the local distributor for maintenance assistance. The functions described in this version were updated till August, 2022. In the constant effort to improve the product, we reserve the right to make functions or parameters changes without notice or obligation. Please refer to the dealers for the latest details.

FCC Statement

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

Operation of this equipment in a residential area is likely to cause interference, in which case the user at their own expense will be required to take whatever measures may be necessary to correct the interference.

Any changes or modifications not expressly approved by the manufacture would void the user's authority to operate the equipment.



SAFETY PRECAUTIONS

To insure the best from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment
- Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
- Using supplies or parts not meeting the products' specifications may cause damage, deterioration or

malfunction.

- Refer all servicing to qualified service personnel.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Do not put any heavy items on the extension cable in case of extrusion.
- Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
- Install the device in a place with fine ventilation to avoid damage caused by overheat.
- Keep the module away from liquids.
- Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
- Do not twist or pull by force ends of the optical cable. It can cause malfunction.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- Unplug the power cord when left unused for a long period of time.
- Information on disposal for scrapped devices: do not burn or mix with general household waste, please treat them as normal electrical wastes.

Introduction

1.1 Introduction to SWC-1

The Wallplate Control Panel has (2) built-in programmable RS232 connectors and (2) Infrared (IR) connectors. The Programmable Control Panel can fully control the compatible switches, as well as third-party devices such as matrix switcher, compact scaler switcher, projectors, screens, etc. Use the device for presentations in showrooms, classrooms, and boardrooms.

1.2 Features





- Six customizable control buttons;
- One volume control knob;
- Support IR, RS232 and TCP/IP control;
- Can be controlled and configured via GUI;
- Can be powered by PoE;


1.3 Package List

- 1 x SWC-1
- 6 x Button caps
- 2 x 3-Pin Pluggable terminal block
- 1 x User Manual
- 1 x 2-Pin Pluggable terminal blocks
- 1 x 5-Pin Pluggable terminal block
- 1 x Button label

Note: Please confirm if the product and the accessories are all included, if not, please contact with the dealers.

Panel Description

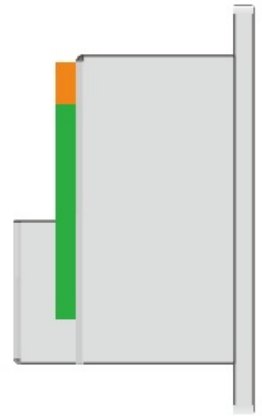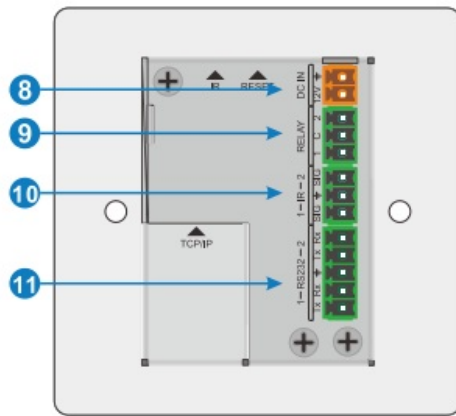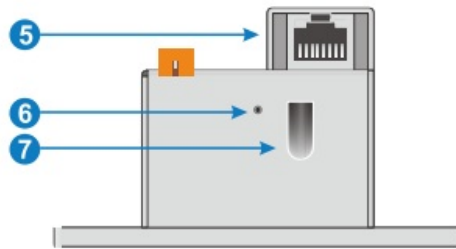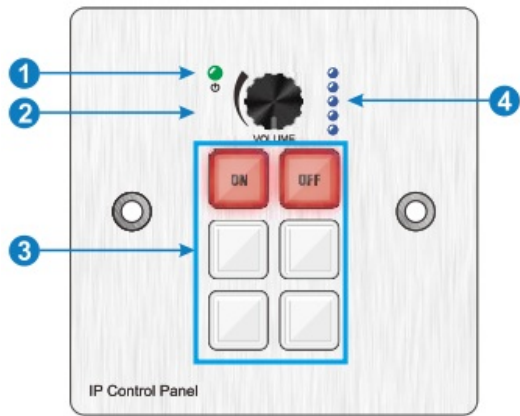


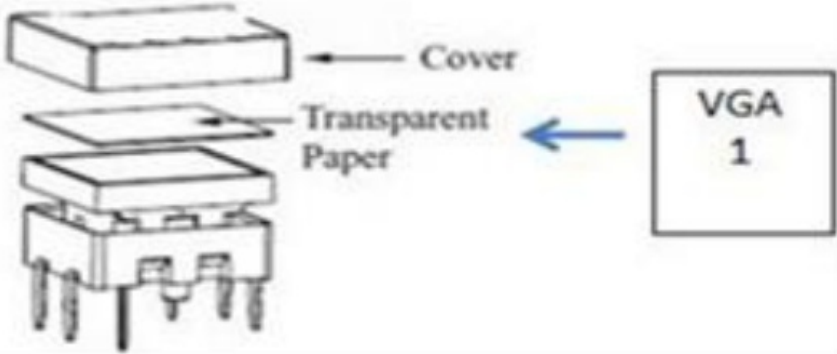No.	Name	Description
1	Power LED	Illuminates green when power on.
2	Volume Knob	Black volume knob, high-quality knob with high damping feel and stable structure, about 12-13mm in diameter
3	Button	<p>(6) crystal and luminescent programmable buttons: Each button can be programmed with the Control Panel Software. Each label within a button can be easily changed. Simply select the label you need and change it as shown below:</p> 
4	Volume indicator	5x blue indicator lights, light up in percentage according to the volume knob (1-19%, 20-39%, 40-59%, 60-79%, 80-100%)
5	TCP/IP	RJ45 connector. Connects with PC to run the GUI to customize button control.
6	RESET	Long-press this button 3 seconds until the power LED goes out to start to the restore factory defaults, and then the LED will light up while the resetting is successful.
7	IR Sensor	Receives and learns the IR code to build the IR database.
8	PWR(12V)	Connects with 12V DC power adaptor.
9	RELAY	Two groups of Relay Control, share a common switch interface, default ON
10	IR	Two sets of IR OUT, share a ground port, 5V standard, connect to the infrared emitting rod
11	RS232	2 RS232 ports. Connect the third-party devices which are need to be controlled via the SWC-1.

System Connection

The SWC-1 can active different ports at one time. It means every button can send the RS232 commands, IR code at the same time.

The demo system diagram as below:

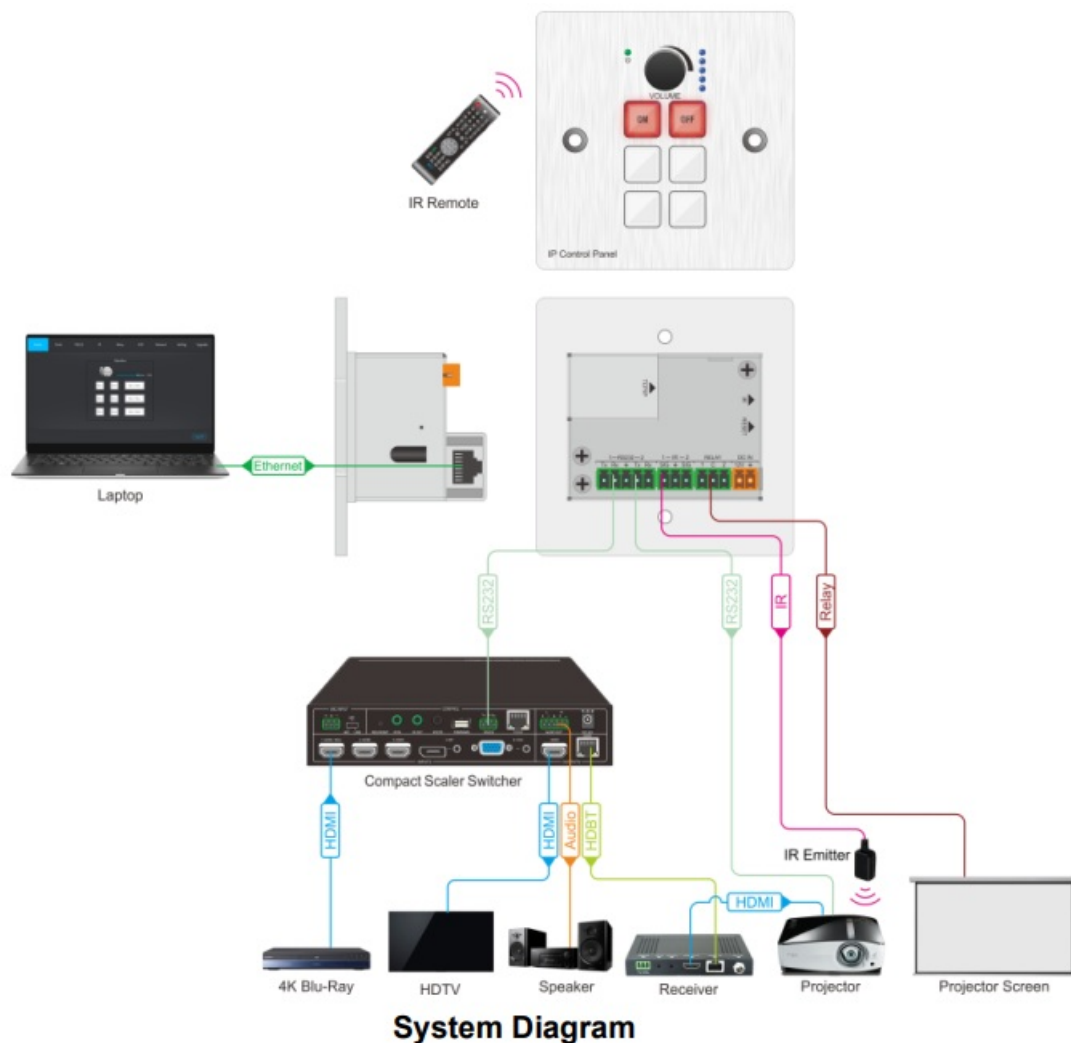

System Diagram

1. Connect the SWC-1 to the LAN port of Wireless Route, or control device (such as PC) to TCP/IP port.
2. Connect the third-party devices (such as Matrix Switcher, Compact Scaler Switcher or Projector) that need to be controlled to RS232 (1) ~ RS232 (3) ports.
3. Connect the IR Emitters to IR (1) ~ IR (2) ports.
4. Connect to the third-party devices that need to be controlled by relay.

GUI Control


4.1 Log in

The SWC-1 is controlled by TCP/IP. The default settings are:

IP Address: 192.168.0.178

Subnet Mask: 255.255.250.0

Type 192.168.0.178 in the internet browser, it will enter the below log-in webpage:

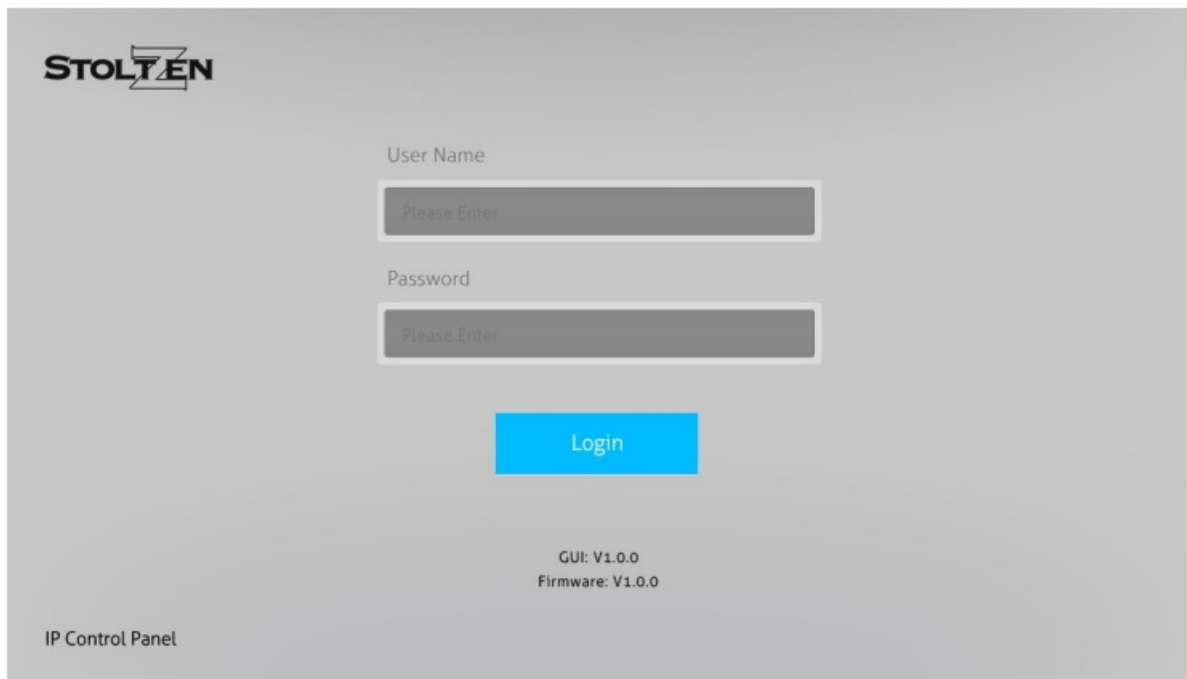


Username: admin

Password: admin

Type the username and password, and then click the login to enter the GUI setting.

4.2 Home

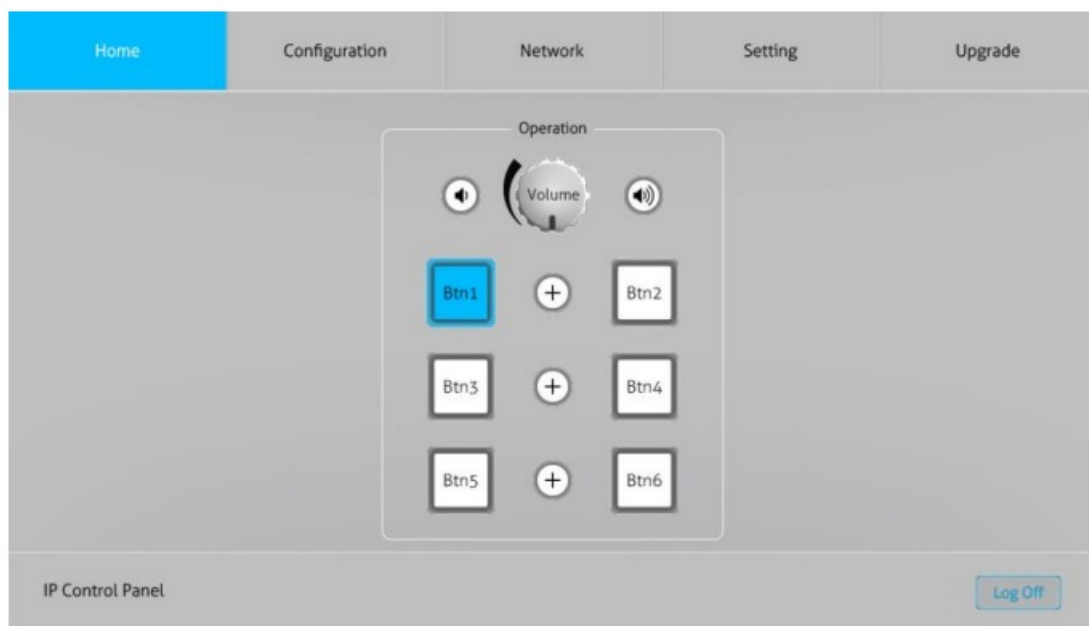

- Click the volume icon to adjust the volume; or click the knob icon to implement the corresponding event;
- Mouse operation click the corresponding button

4.3 Configuration

4.3.1 Knob

The screenshot shows the 'Configuration' tab selected in the top navigation bar. On the left, a sidebar lists 'Knob' and 'Button 1' through 'Button 5 + 6'. The main area is divided into two sections. The top section is for Knob settings, with fields for 'Min Vol:', 'Max Vol:', 'Current Vol:', and 'Vol Wildcard:'. A 'Save' button is below these fields. Below the Save button are three buttons: 'Vol- (Turn Left)', 'Press Down Setting', and 'Vol+ (Turn Right)'. The bottom section is the 'Event List', which has 'Save All' and 'Add Event' buttons. It contains a table with columns 'No.', 'TCP/IP:', and 'Event Name'. The first row shows 'No. 1' with 'TCP/IP:' set to '192.168.0.178', 'Port:' set to '22', 'Format:' set to 'HEX', and 'Data(CMD):' set to an empty field. At the bottom of the page is the 'IP Control Panel' with a 'Log Off' button.

- Knob/Button: Choose the knob or button to enter the event setting page
- Start up: Click to enter the starts up event setting page
- Set the Knob events: Turn Left, Press Down Setting or Turn Right

4.3.2 Button

This screenshot shows the 'Configuration' tab with 'Button 1' selected in the sidebar. The main area displays the 'Event List' with 'Save All' and 'Add Event' buttons. The list contains three entries: 'No. 1' with 'TCP/IP:' settings (IP: 192.168.0.178, Port: 22, Format: HEX, Data(CMD):), 'No. 2' with 'RS232:' settings, and 'No. 3' with 'LED:' settings. Each entry has a trash icon and a refresh icon. At the bottom is the 'IP Control Panel' with a 'Log Off' button.

- Click the Button 1 to set the button 1 event, click Add Event and then set the Event and the corresponding settings
- One button can set multiple command events, such as TCP/IP, RS232, IR, RELAY, Delay and LED status

4.3.3 TCP/IP

The screenshot shows the 'Configuration' tab of the IP Control Panel. On the left, there is a sidebar with 'Knob' and 'Button 1' through 'Button 5 + 6'. The main area is titled 'Add Event'. The 'Event' dropdown is set to 'TCP/IP'. Below it, the 'Event Name' field is empty. The 'IP' field contains '192.168.0.178' and the 'Port' field contains '22'. The 'Format' dropdown is set to 'ASCII' and the 'End Char for ASCII' dropdown is set to 'NULL'. The 'Data(CMD)' field is empty. At the bottom of the form are 'Save' and 'Cancel' buttons. A 'Start Up' button is located below the sidebar. At the very bottom of the page are 'IP Control Panel' and 'Log Off' buttons.

- Set the TCP/IP event, such as IP, Port, Format, End Char for ASCII and Data

4.3.4 RS232

The screenshot shows the 'Configuration' tab of the IP Control Panel. On the left, there is a sidebar with 'Knob' and 'Button 1' through 'Button 5 + 6'. The main area is titled 'Add Event'. The 'Event' dropdown is set to 'RS232'. Below it, the 'Event Name' field is empty. The 'RS232 Port' dropdown is set to 'RS232 1', the 'Baud Rate' dropdown is set to '9600', the 'Data Bit' dropdown is set to '8', the 'Stop Bit' dropdown is set to '1', the 'Parity' dropdown is set to 'NONE', and the 'Format' dropdown is set to 'ASCII'. The 'End Char for ASCII' dropdown is set to 'NULL' and the 'Data(CMD)' field is empty. At the bottom of the form are 'Save' and 'Cancel' buttons. A 'Start Up' button is located below the sidebar. At the very bottom of the page are 'IP Control Panel' and 'Log Off' buttons.

- Set the RS232 event, and then click save button to finish setting.

4.3.5 IR

The screenshot shows the 'Configuration' tab of the IP Control Panel. On the left, there is a sidebar with 'Knob' and 'Button' options. The main area is titled 'Add Event'. The 'Event' dropdown is set to 'IR'. There is an 'IR Learning' button. Below this, there are input fields for 'Event Name', 'Port' (set to 'IR Out 1'), and 'Code or Custom' (set to 'IR Code'). An 'IR Code' input field is also present. To the right of these fields is a table with columns 'Sel', 'Label', 'Value', and 'Del'. Below the table are 'Import' and 'Export' buttons. At the bottom of the form are 'Save' and 'Cancel' buttons. The footer of the page includes 'IP Control Panel' and a 'Log Off' button.

- In IR event, user can import or export the IR command
- Set the Event Name, Port, Code or Custom and IR Code for the event
- Click Save button to finish setting

4.3.6 Relay

The screenshot shows the 'Configuration' tab of the IP Control Panel. On the left, there is a sidebar with 'Knob' and 'Button' options. The main area is titled 'Add Event'. The 'Event' dropdown is set to 'Relay'. Below this, there are input fields for 'Event Name', 'Port' (set to 'Relay 1'), and 'Action Mode' (set to 'ON'). At the bottom of the form are 'Save' and 'Cancel' buttons. The footer of the page includes 'IP Control Panel' and a 'Log Off' button.

- Set the Event Name, Port and the Action Mode;
- Click Save button to finish setting

4.3.7 LED

The screenshot shows the 'Configuration' tab of the IP Control Panel. On the left, a sidebar lists 'Knob' and 'Button 1' through 'Button 5 + 6'. The main area is titled 'Add Event'. It contains the following fields:

- Event:** A dropdown menu with 'LED' selected.
- Event Name:** A text input field with the placeholder 'Event Name'.
- Button Select:** A dropdown menu with 'Button 1' selected.
- Status:** A dropdown menu with 'Always OFF' selected.

At the bottom of the form are three buttons: 'Start Up' (on the left), 'Save' (in the center), and 'Cancel' (on the right). The footer of the page shows 'IP Control Panel' on the left and a 'Log Off' button on the right.

- Set the Event Name, Button Select, Status and LED Color;
- Click the Save button to finish setting

4.3.8 Delay

This screenshot shows the 'Add Event' form with 'Delay' selected in the 'Event' dropdown. The fields are as follows:

- Event:** A dropdown menu with 'Delay' selected.
- Event Name:** A text input field with the placeholder 'Event Name'.
- Hour:** A text input field with '0' and a range '(0-23)'.
- Minute:** A text input field with '0' and a range '(0-59)'.
- Second:** A text input field with '0' and a range '(0-59)'.
- Millisecond:** A text input field with '0' and a range '(0-999)'.

The same 'Start Up', 'Save', and 'Cancel' buttons are at the bottom of the form. The footer remains 'IP Control Panel' and 'Log Off'.

- Set the delay event to trigger the event after how long to press
- Click Save button to finish setting

4.4 Network

Home	Configuration	Network	Setting	Upgrade
<p>MAC Address: 44-33-4C-C9-35-12</p> <p>DHCP <input checked="" type="checkbox"/> Static IP <input type="checkbox"/></p> <p>IP Address: <input type="text" value="192.168.0.178"/></p> <p>Subnet Mask: <input type="text" value="255.255.255.0"/></p> <p>Gateway: <input type="text" value="192.168.0.1"/></p> <p><input type="button" value="Confirm"/></p>				
IP Control Panel				<input type="button" value="Log Off"/>


- Select dynamic or static IP mode. Under static mode, then IP Address, Subnet Mask and Gateway can be reset.

4.5 Setting

Home	Configuration	Network	Setting	Upgrade
<p>Credentials</p> <p>User Name: <input type="text" value="admin"/></p> <p>New Password: <input type="text" value="admin"/></p> <p><input type="button" value="Confirm"/></p> <p>Update Profile</p> <p>Setting: <input type="text" value="Please select file"/> <input type="button" value="Browse"/></p> <p><input type="button" value="Import"/></p> <p><input type="button" value="Export"/></p> <p>Factory Default</p> <p><input type="button" value="Default"/></p>				
IP Control Panel				<input type="button" value="Log Off"/>

- Credentials: setting the user name and new password and then click confirm button to perform the modification.
- Update Profile: Import or export the setting file to implement the system configuration.
- Factory Default: Click Factory reset

4.6 Upgrade

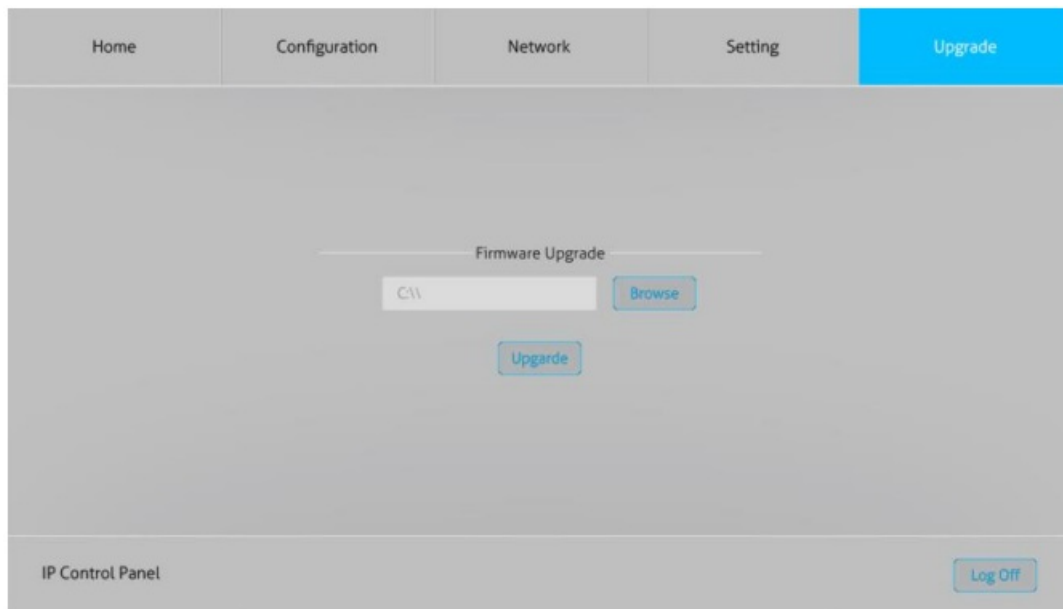


- Firmware Upgrade: click the browse to choose the upgrade file(the file need to be renamed as “SWC-1.app”) and then click upgrade to execute upgrade.

Specification

Program Port	TCP/IP
Output Port	2 x RS232, 2 x IR, 2 x Relay
Output Connector	2 x 3-Pin Pluggable terminal blocks, 2 x 2-Pin Pluggable terminal blocks,
Baud Rate	9600 baud, supports 9600,19200,38400,57600,115200
Power Consumption	2.5W (Max)
Operation Temperature	0 ~ +40°C
Storage Temperature	-10 ~ +55°C
Relative Humidity	10% ~ 90%
Power Supply	Input: 12VDC, PoE
Net Weight	195g
Case Dimensions (W*H*D	86mm x 86mm x 50.5mm

Panel Drawing

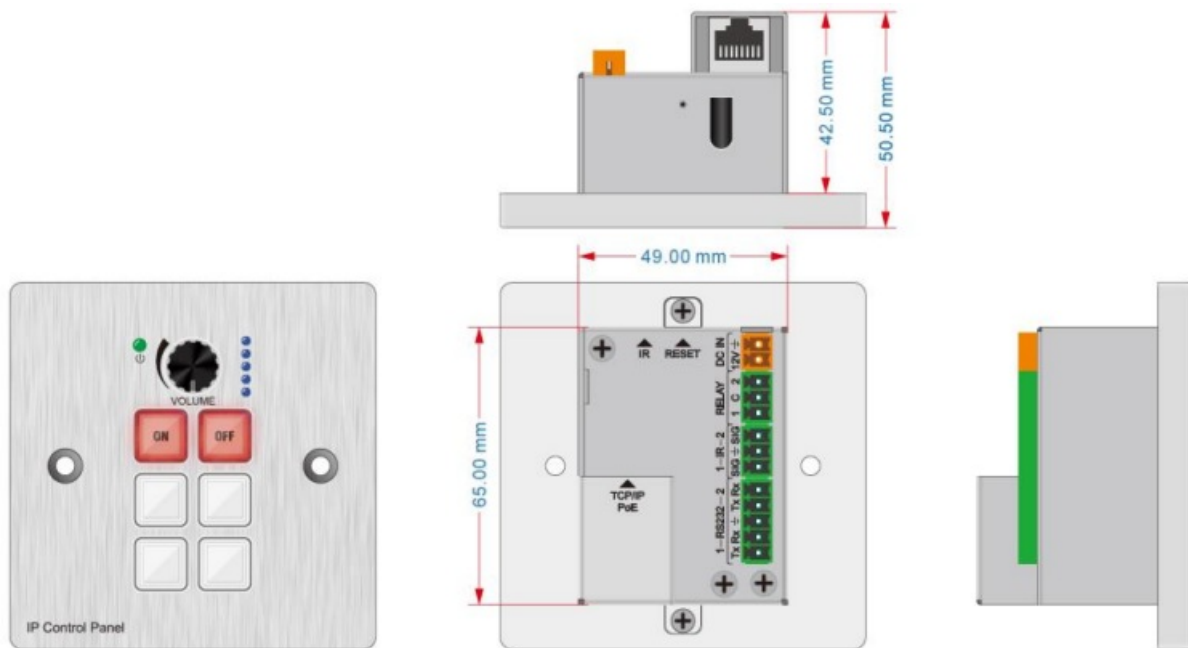

Customer Service

The return of a product to our Customer Service implies the full agreement of the terms and conditions hereinafter. These terms and conditions may be changed without prior notice.

1. Warranty

The limited warranty period of the product is fixed three years.

2. Scope

These terms and conditions of Customer Service apply to the customer service provided for the products or any other items sold by authorized distributor only.

3. Warranty Exclusions:

- Warranty expiration.
- Factory applied serial number has been altered or removed from the product.
- Damage, deterioration or malfunction caused by:
 - ✓ Normal wear and tear.
 - ✓ Use of supplies or parts not meeting our specifications.
 - ✓ No certificate or invoice as the proof of warranty.
 - ✓ The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
 - ✓ Damage caused by force majeure.
 - ✓ Servicing not authorized by distributor.
 - ✓ Any other causes which does not relate to a product defect.
- Shipping fees, installation or labor charges for installation or setup of the product.


4. Documentation:

Customer Service will accept defective product(s) in the scope of warranty coverage at the sole condition that the defeat has been clearly defined, and upon reception of the documents or copy of invoice, indicating the date of purchase, the type of product, the serial number, and the name of distributor.

Remarks: For further assistance or solutions, please contact your local distributor



Documents / Resources

 The thumbnail shows the cover of the user manual for the STOLTZEN SWC-1 6 Buttons IP Control Panel. It features the STOLTZEN logo at the top, the product name in the center, and two small images of the control panel. At the bottom, it says 'All Rights Reserved'.	<p>STOLTZEN SWC-1 6 Buttons IP Control Panel [pdf] User Manual</p> <p>SWC-1, SWC-1 6 Buttons IP Control Panel, 6 Buttons IP Control Panel, IP Control Panel, Control Panel</p>
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Manuals+