




Symetrix Radius NX 4x4 Digital Signal Processor User Guide

[Home](#) » [Symetrix](#) » Symetrix Radius NX 4x4 Digital Signal Processor User Guide 

Contents

- [1 Symetrix Radius NX 4x4 Digital Signal Processor](#)
- [2 Product Usage Instructions](#)
- [3 What Ships in the Box](#)
- [4 Important Safety Instructions](#)
- [5 Software Installation](#)
- [6 Configuring IP Parameters](#)
- [7 Declaration of Conformity](#)
- [8 FCC STATEMENT](#)
- [9 CONTACT](#)
- [10 FAQ](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)



Symetrix Radius NX 4x4 Digital Signal Processor



Product Usage Instructions

- Read and keep the instructions for future reference.
- Heed all warnings and follow instructions carefully.
- Avoid water exposure and do not place objects on the apparatus.
- Do not block ventilation openings and keep the device clean with a dry cloth.
- Install according to the manufacturer's instructions and avoid heat sources.
- Ensure your AC mains voltage is within the range of 100-240 VAC, 50-60 Hz. Only use the specified power cord and connector for safe operation.
- When changing the lithium battery, observe the correct polarity to prevent damage to the device.

What Ships in the Box

- A Radius NX 4×4 or 12×8 hardware unit
- A North American (NEMA) and Euro IEC power cable. You may need to substitute a cable appropriate for your locale
- 13 (Radius NX 4×4) or 29 (Radius 12×8) detachable 3.5 mm terminal block connectors
- This Quick Start Guide

What You Need to Provide

- Windows PC with the following minimum specifications:
 - 1 GHz or higher processor
 - Windows 10 or higher
 - 10 MB free storage space
 - 1280×1024 graphics capability
 - 16-bit or higher colors
 - Internet connection
 - 1 GB or more of RAM as required by your operating system
 - Network (Ethernet) interface
 - CAT5/6 cable or an existing Ethernet network

Important Safety Instructions


1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water. This apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install only following the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. This apparatus shall be connected to a mains socket outlet with a protective earthing connection. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than

the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Ensure proper ESD control and grounding when handling exposed I/O terminals.
11. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Only use attachments/accessories specified by the manufacturer.
13. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



14. Unplug this apparatus during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug cord is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

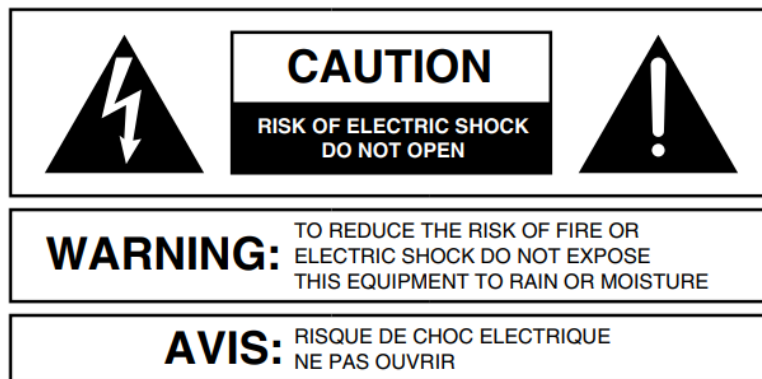

- **The lightning flash** with arrowhead symbol within an equilateral triangle is intended to alert the user of the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product (i.e., this Quick Start Guide).
- **CAUTION:** To prevent electric shock, do not use the polarized plug supplied with the device with any extension cord, receptacle, or other outlet unless the prongs can be fully inserted.
- **Power Source:** This Symetrix hardware uses a universal input supply that automatically adjusts to the applied voltage. Ensure that your AC mains voltage is somewhere between 100-240 VAC, 50-60 Hz. Use only the power cord and connector specified for the product and your operating locale. A protective ground connection, by way of the grounding conductor in the power cord, is essential for safe operation. The appliance inlet and coupler shall remain readily operable once the apparatus has been installed.
- **Lithium Battery Caution:** Observe the correct polarity when changing the lithium battery. There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type. Dispose of used batteries according to local disposal requirements.
- **User Serviceable Parts:** There are no user serviceable parts inside this Symetrix product. In case of failure, customers inside the U.S. should refer all servicing to the Symetrix factory. Customers outside the U.S. should

refer all servicing to an authorized Symetrix distributor. Distributor contact information is available online at:
<http://www.symetrix.co>.



The RJ45 connectors labeled “ARC” are only for use with the ARC series of remotes. DO NOT plug the ARC connectors on Symetrix products into any other RJ45 connector. The “ARC” RJ45 connectors on Symetrix products can carry up to 24 VDC / 0.75 A (class 2 wiring), which can damage Ethernet circuitry.

Connecting to Radius NX 4×4 and 12×8 through a Firewall/VPN


We have successfully tested control of Radius NX 4×4 and 12×8 through a firewall and VPN, but are unable to guarantee performance of these types of connections at this time. Configuration instructions are specific to each firewall and VPN, so specifics are not available. Additionally, wireless communications are also not guaranteed, though they have also been successfully tested.

ARC Pinout

The RJ45 jack distributes power and RS-485 data to one or more ARC devices. Uses standard straight-through UTP CAT5/6 cabling.

- Warning! Refer to the RJ45 Warning for compatibility information.

The Symetrix ARC-PSe provides serial control and power distribution over standard CAT5/6 cable for systems with more than 4 ARCs, or when any number of ARCs are located long distances from a Symetrix DSP unit.

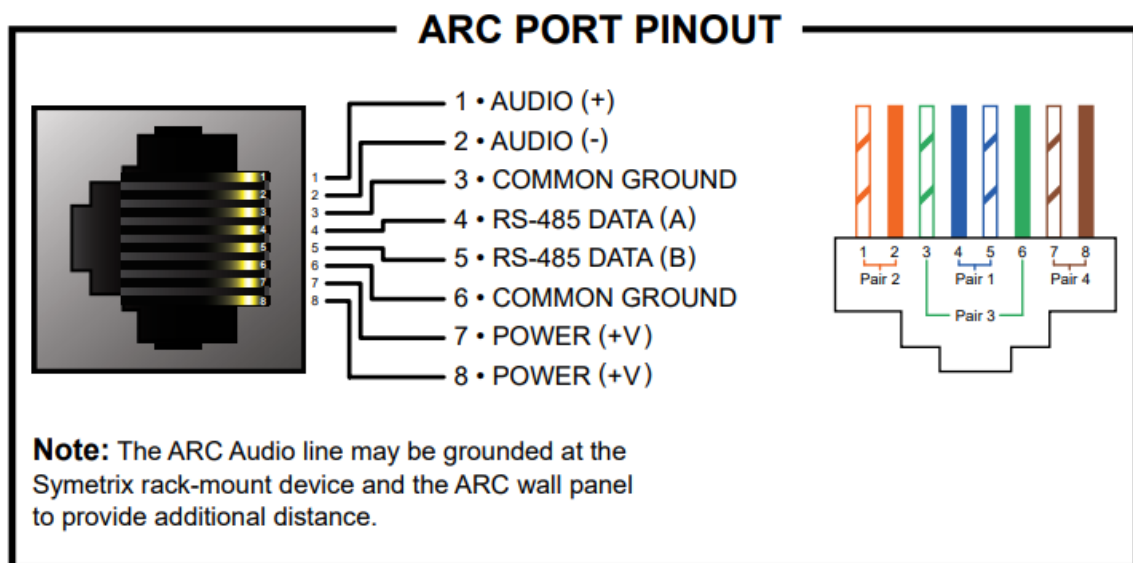

Software Installation

Composer® software provides real-time set-up and control of Composer-Series DSPs, controllers, and endpoints from a Windows PC environment.

1. Download the Composer software installer from the Symetrix website (<https://www.symetrix.co>).

2. Double-click on the downloaded file and follow the on-screen directions to install.

After installing the software, refer to the Help File for full connection and configuration information.

Networking PHY Dante Devices

- Devices with a single Dante port don't have an internal Ethernet switch, and the RJ45 jack is connected directly to the Dante Ethernet physical transceiver (PHY).
- In these cases you must connect the Dante port to an Ethernet switch before connecting to another PHY Dante device to avoid audio dropouts on Dante channels.
- Dante PHY devices include many Ultimo-based devices and Symetrix hardware: Prism, xIn 4, xOut 4, xIO 4x4, xIO Stage 4x4, xIO Bluetooth, xIO Bluetooth RCA-3.5, xIO XLR-Series.

System Setup

- Successful system setup requires first establishing communications with a Symetrix DSP (e.g., Radius NX, Prism).

Basic Connections

1. Connect the Control Ethernet port on the DSP to an Ethernet switch with a CAT5e/6 cable. Connect the Dante port on the DSP with a CAT5e/6 cable to the same Ethernet switch for shared Dante and Control networks, or to a different Ethernet switch for separate Dante and Control networks.
2. Connect the PC running Composer to the Ethernet switch used for Control with a CAT5e/6 cable.
3. To power a PoE Dante device, connect the Dante port on the device to a PoE-enabled port on the Dante switch. Alternately, connect the Dante port on the device to a PoE injector and then from the PoE injector to the Dante switch.
4. To power a PoE Control device, connect the Control port on the device to a PoE-enabled port on the Control switch. Alternately, connect the Control port on the device to a PoE injector and then from the PoE injector to the Control switch.

Network Setup

About DHCP

- Symetrix network-enabled devices boot with DHCP enabled by default. When connected to a network, they will look for a DHCP server to obtain an IP address.
- This process may take several minutes. Computers attached to the same network, and getting IP addresses from the same DHCP server, will be ready to go.
- When no DHCP server is present to assign IP addresses, and Windows default network settings are used, the PC will set an IP in the range of 169.254.x.x with a subnet mask of 255.255.0.0 to communicate with the device.
- This default to an automatic private IP address uses the last four alphanumeric characters of the device's MAC address (MAC address hex value converted to decimal for IP address) for the 'x.x' values. MAC addresses can be found on a sticker on the back of the hardware.
- Even if the PC's default settings have been changed, the device will try to establish communications by setting up appropriate routing table entries to reach devices with 169.254.x.x addresses.

Connecting to Device from Host Computer on Same LAN

The Symetrix device and host computer require the following:

1. IP Address – The unique address of a node on a network
2. Subnet Mask – Configuration that defines which IP addresses are included in a particular subnet.
3. Default Gateway (optional) – The IP address of a device that routes traffic from one subnet to another. (This is only needed when the PC and device are on different subnets.)

If you are putting a device on an existing network, a network administrator should provide the above information, or it may have been provided automatically by a DHCP server. For security reasons, it may not be recommended to put AV system devices directly on the Internet. If you do, a network administrator or your Internet Service Provider can provide the above information. If you are on your own private network, directly or indirectly connected to the device, you may allow it to choose an automatic IP address, or you may choose to assign it a static IP address. If you are building your own separate network with statically assigned addresses, you may consider using an IP address from one of the "Private-Use" networks noted in RFC-1918:

- 172.16.0.0/12 = IP addresses 172.16.0.1 through 172.31.254.254 and a subnet mask of 255.240.0.0
- 192.168.0.0/16 = IP addresses 192.168.0.1 through 192.168.254.254 and a subnet mask of 255.255.0.0
- 10.0.0.0/8 = IP addresses 10.0.0.1 through 10.254.254.254 and a subnet mask of 255.255.0.0

Configuring IP Parameters

Locating Hardware



- Discover and connect to device hardware with the Composer Locate Hardware dialog (found in Hardware menu), or click the Locate Hardware icon in the tool bar, or on a particular unit icon. Composer directly locates DSPs and control devices. Dante devices are located by an already existing, and online DSP in the Site File.



- or -



IP Configuration with Composer ®

- The Composer Locate Hardware dialog will scan the network and list available components. Select the unit you wish to assign an IP address to and click the Properties button.
- If you wish to assign the device a static IP address, select "Use the following IP address" and enter the appropriate IP address, subnet mask, and gateway. Click OK when finished. Now, back in the locate hardware dialog, ensure the device is selected and click "Select Hardware Unit" to use this hardware in your Site File.

Close the Locate Hardware dialog.

Reset Switch

To be used under the supervision of technical support, the device has the ability to reset its network configuration and completely revert to factory defaults. Locate the reset switch using the illustrations in this guide and/or the product data sheet.

- Short press and release: Resets network configuration, returns to DHCP.
- Apply power while holding, release after unit boots then reboots: Factory resets unit. By using Symetrix products, the Buyer agrees to be bound by the terms of this Symetrix Limited Warranty. Buyers should not use Symetrix products until the terms of this warranty have been read.

What is Covered by this Warranty:

- Symetrix, Inc. expressly warrants that the product will be free from defects in material and workmanship for five (5) years from the date the product is shipped from the Symetrix factory.
- Symetrix's obligations under this warranty will be limited to repairing, replacing, or partially crediting original purchase price at Symetrix's option, the part or parts of the product which prove defective in material or workmanship within the warranty period provided that the Buyer gives Symetrix prompt notice of any defect or failure and satisfactory proof thereof.
- Symetrix may, at its option, require proof of the original date of purchase (copy of original authorized Symetrix Dealer's or Distributor's invoice).
- Final determination of warranty coverage lies solely with Symetrix.
- This Symetrix product is designed and manufactured for use in professional audio systems and is not intended for other usage.
- Concerning products purchased by consumers for personal, family, or household use, Symetrix expressly disclaims all implied warranties, including, but not limited to, warranties of merchantability and fitness for a particular purpose.
- This limited warranty, with all terms, conditions, and disclaimers set forth herein, shall extend to the original purchaser and anyone who purchases the product within the specified warranty period from an authorized Symetrix Dealer or Distributor. This limited warranty gives the Buyer certain rights. The Buyer may have additional rights provided by applicable law.

What is not Covered by this Warranty:

This warranty does not apply to any non-Symetrix branded hardware products or any software even if packaged or sold with Symetrix Products. Symetrix does not authorize any third party, including any dealer or sales representative, to assume any liability or make any additional warranties or representations regarding this product information on behalf of Symetrix. This warranty also does not apply to the following:

1. Damage caused by improper use, care, or maintenance or failure to follow the instructions contained in the Quick Start Guide or Help File (In Composer: Help > Help Topics).
2. Symetrix product that has been modified. Symetrix will not perform repairs on modified units.
3. Symetrix software. Some Symetrix products contain embedded software or apps and may also be accompanied by control software intended to be run on a personal computer.
4. Damage caused by accident, abuse, misuse, exposure to liquids, fire, earthquake, acts of God, or other

external causes.

5. Damage caused by improper or unauthorized repair of a unit. Only Symetrix technicians and Symetrix international distributors are authorized to repair Symetrix products.
6. Cosmetic damage, including but not limited to scratches and dents, unless failure has occurred due to a defect in materials or workmanship within the warranty period.
7. Conditions caused by normal wear and tear or otherwise due to the normal aging of Symetrix products.
8. Damage caused by use with another product.
9. Product on which any serial number has been removed, altered, or defaced.
10. The product that is not sold by an authorized Symetrix Dealer or Distributor.

Buyer Responsibilities:

- Symetrix recommends the Buyer make backup copies of Site Files before having a unit serviced. During service, the Site File may be erased. In such an event, Symetrix is not responsible for the loss or the time it takes to
- Reprogram the Site File.

Legal Disclaimers and Exclusion of other Warranties:

- The foregoing warranties are instead of all other warranties, whether oral, written, express, implied, or statutory. Symetrix, Inc. expressly disclaims any IMPLIED warranties, including fitness for a particular purpose or merchantability.
- Symetrix's warranty obligation and Buyer's remedies hereunder are SOLELY and exclusively as stated herein.

Limitation of Liability:

- The total liability of Symetrix on any claim, whether in contract, tort (including negligence) or otherwise arising out of, connected with, or resulting from the manufacture, sale, delivery, resale, repair, replacement, or use of any product will not exceed the retail price of the product or any part thereof that gives rise to the claim.
- In no event will Symetrix be liable for any incidental or consequential damages, including but not limited to damage for loss of revenue, cost of capital, claims of Buyers for service interruptions or failure to supply, and costs and expenses incurred in connection with labor, overhead, transportation, installation or removal of products, substitute facilities or supply houses.

Servicing a Symetrix Product:

- The remedies set forth herein shall be the Buyer's sole and exclusive remedies with respect to any defective product.
- No repair or replacement of any product or part thereof will extend the applicable warranty period for the entire product.
- The specific warranty for any repair will extend for a period of 90 days following the repair or the remainder of the warranty period for the product, whichever is longer.
- Residents of the United States may contact the Symetrix Technical Support Department for a Return Authorization (RA) number and additional in-warranty or out-of-warranty repair information.

- If a Symetrix product outside of the United States requires repair services, please contact your regional Symetrix distributor for instructions on how to obtain service.
- A product may be returned by the Buyer only after an RA number has been obtained from Symetrix. Buyer will prepay all freight charges to return the product to the Symetrix factory.
- Symetrix reserves the right to inspect any products that may be the subject of any warranty claim before repair or replacement is carried out.
- Products repaired under warranty will be returned freight prepaid via commercial carrier by Symetrix to any location within the continental United States. Outside the continental United States, products will be returned freight collect.

Advance Replacements:

- Units that are out of warranty or sold outside
- The United States does not qualify for Advance Replacement. In-warranty units that fail within 90 days may be replaced or repaired depending on available service inventory at Symetrix's discretion.
- The customer is responsible for the return shipping of equipment to Symetrix. Any repaired equipment will be shipped back to the customer at Symetrix's cost.
- Advance replacements will be invoiced as a normal sale through authorized Symetrix dealers and distributors.
- The defective unit must be returned 30 days from the RA issue date, and will be credited against the replacement unit invoice after it has been evaluated by our service department.
- If no problem is found, an evaluation fee will be deducted from the credit.
- Units returned without a valid Return Authorization number may be subject to significant delays in processing.
- Symetrix is not liable for delays due to equipment returned without a valid Return Authorization number.

Returns and Restocking Fees

- All returns are subject to approval by Symetrix. No credit will be issued for any item returned after 90 days from the invoice date.

Return due to Symetrix Error or Defect

- Units returned within 90 days will not be subject to a restocking fee and credited in full (including freight). Symetrix assumes the cost of return shipping.

Return for Credit (not due to Symetrix error):

- Units in a factory-sealed box and purchased within 30 days can be returned without a restock fee in exchange for a PO of greater value. Symetrix is not liable for return shipping.

Restock Fee Schedule for Returns for Credit (not due to Symetrix error):

Factory Seal Intact.

- 0-30 days from invoice date, 10% if no replacement PO of equal or greater value is placed.
- 31-90 days from invoice date: 15%.

- Returns not accepted after 90 days. Factory Seal Broken
- May be returned up to 30 days and the restocking fee is 30%.
- Symetrix is not liable for return shipping.

Out of Warranty Repairs

Symetrix will attempt to repair units outside of warranty for up to seven years from the invoice date, but repairs are not guaranteed. The Symetrix website lists partners who are authorized and qualified to perform repairs on units beyond seven (7) years from the invoiced date. Repair rates and turnaround times for out-of-warranty Symetrix equipment are set solely by the partners and are not dictated by Symetrix.


Declaration of Conformity

We, Symetrix Incorporated,

- 12123 Harbour Reach Dr. Ste. 106 Mukilteo, WA, 98275 USA declare under our sole responsibility that the product:
- Radius NX 4x4 and 12x8 to which this declaration relates conforms with the following standards:
- IEC 62368-1, EN 55032, EN 55103-2,
- FCC Part 15, ICES-003, UKCA, EAC,
- RoHS (Health/Environmental)

Technical construction files maintained at: Symetrix, Inc. 12123 Harbour Reach Dr. Ste. 106 Mukilteo, WA, 98275 USA

- Date of issue: March 27, 2018
- Place of issue: Mukilteo, Washington, USA

- Authorized signature: 
- Mark Graham, CEO of Symetrix Incorporated.

FCC STATEMENT

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules. These limits are designed to protect reasonably against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used following the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.

CONTACT


Composer®, the Windows software that configures Radius NX 4x4 and 12x8 hardware, includes a help file which acts as a complete User's Guide for both hardware and software. If you have questions beyond the scope of this Quick Start Guide, contact our Technical Support Group in the following ways:

- Tel: +1.425.778.7728 ext. 5
- Web: <https://www.symetrix.co>
- Email: support@symetrix.co
- Forum: <https://www.symetrix.co/Forum>

FAQ

- **Q:** Can I use an extension cord with the Radius NX?
- **A:** No, do not use the polarized plug supplied with the device with any extension cord unless the prongs can be fully inserted.
- **Q:** What should I do if the device is exposed to moisture?
- **A:** Avoid exposing the device to rain or moisture to prevent the risk of electric shock. Follow the cleaning instructions provided in the manual.
- **Q:** How should I handle ESD control when using the product?
- **A:** Ensure proper ESD control and grounding when handling exposed I/O terminals to prevent damage to the hardware.

Documents / Resources

	<p>Symetrix Radius NX 4x4 Digital Signal Processor [pdf] User Guide 4x4, 12x8, Radius NX 4x4 Digital Signal Processor, Radius NX 4x4, Digital Signal Processor, Signal Processor, Processor</p>
---	---

References

- [Symetrix - Inspired AV Processing & Control Solutions](#)
- [Symetrix - Inspired AV Processing & Control Solutions](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.