

## TECH DIGITAL JTD-1651 660FT Wireless HDMI Extender User Manual

Home » TECH DIGITAL » TECH DIGITAL JTD-1651 660FT Wireless HDMI Extender User Manual





### **Dear Customer**

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

J-Tech Digital products are designed to make your A/V device use more convenient, comfortable and productive.

The J-Tech Digital JTECH-WEX660 wireless HDMI extender allows the user to extend HD Audio & Video HDMI signals wirelessly up to 660 ft away to an HD capable display. The extender follows the TCP / IP standard Wireless Transport Protocol, so it has high transmission rate and strong anti-interference capability. The JTECH- WEX660 also supports HDMI mirror output and infrared remote-control extension.

The JTECH-WEX660 is widely applicable to office presentations, lectures, education, conferences, residential entertainment and more.

# Contents 1 FEATURES 2 PACKAGE CONTENTS 3 FEATURES OF THE INTERFACE 4 OPERATION AND CONNECTION 5 Panel key operation instructions 6 Web settings 7 SPECIFICATIONS 8 FAQ 9 Documents / Resources


### **FEATURES**

10 Related Posts


- One TX can be paired with up to two JTECH-WEX660 receivers
- Transmitter features a local HDMI output port for local display
- Supports HDMI resolutions: 480P 1080P@50/60Hz and SVGA WUXGA
- Utilizes the 5G ISM frequency band for high-transmission data rate and anti-interference capabilities
- Uses two external dual gain antennas. Full HD 1080p transmits up to 660ft wirelessly in open space. (May be
  affected by the use environment)
- Extends wide-band infrared remote to control source device from display side
- · Supports OSD for easy access to device status
- · Simple Plug and Play installation, no software required
- · Includes web configuration interface

### PACKAGE CONTENTS


• HDMI Wireless Transmitter 1pc

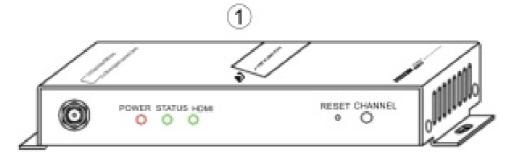


• HDMI Wireless Receiver 1pc

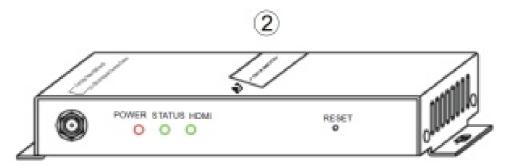

• IR Transmitter cable 1pc

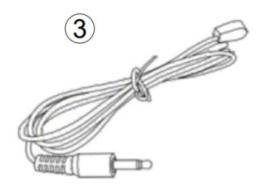


• IR Receiver cable 1pc

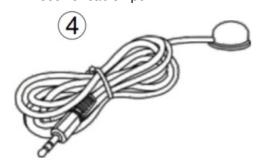


• User manual 1pc



• DC power adapter 2pcs

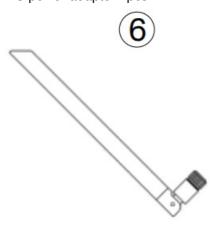

### Antenna 4pcs

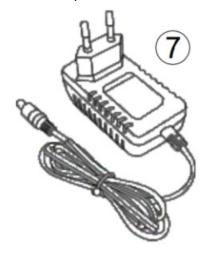


### **FEATURES OF THE INTERFACE**

### Transmitter (TX)

### **FIG.1 TX Front Panel View**



### FIG.2 TX Rear Panel View

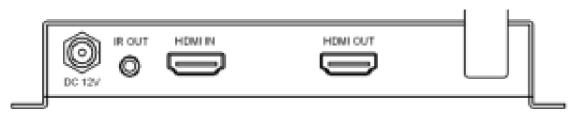

• POWER : Power indicator

• STATUS: System status indicator

• HDMI: HDMI input/output status indicator

• RESET: Factory Reset Button

• CHANNEL: Wireless channel switch button

• **DC12V** : 12V DC in jack

• IR OUT : Port for IR transmitter cable

• HDMI IN: HDMI input port

• HDMI OUT : HDMI loop output port

### Receiver (RX)

### **FIG.3 RX Front Panel View**



### FIG.4 RX Rear Panel View



• POWER: Power indicator

• STATUS: System status indicator

• HDMI: HDMI input/output status indicator


• RESET: Factory Reset Button

• DC12V: 12V DC in jack

IR IN: Port for IR receiver cableHDMI OUT : HDMI output port

### **OPERATION AND CONNECTION**

- Connect one HDMI cable from the HDMI source device (set top box, DVD player, streaming device) into the HDMI input port of the HDMI wireless TX.
- 2. Connect one HDMI cable from TV/Monitor into the HDMI output port of the HDMI wireless RX.
- 3. Connect the IR Transmitter cable to the HDMI wireless TX's IR Out Port and the IR Transmitter cable must face the source device' infrared eye/sensor.
- 4. Connect IR Receiver cable to the HDMI wireless RX's IR In Port.
- 5. Connect 12V power supplies to the TX & RX, the POWER indicator will be illuminated when done successfully.
- 6. The extenders will automatically pair after being powered on. STATUS indicator of TX and RX will be illuminated when the connection is successful. If the HDMI input or output signal is normal, the HDMI indicator light will also be illuminated. The STATUS indicator flashes continuously during normal transmission.
- 7. If you are using multiple receivers, all receivers will be connected in the same way.

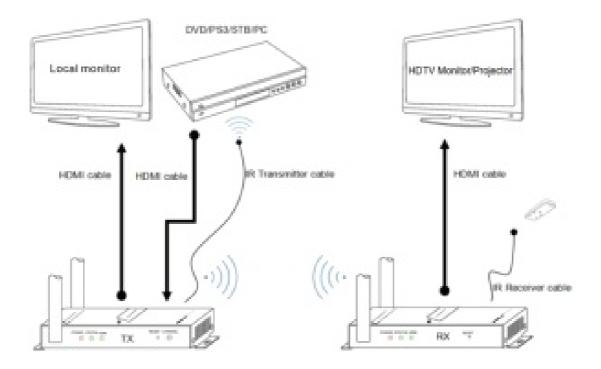

### Panel key operation instructions

- 1. Changing W ireless Channel: Press the "CHANNEL" key on the front panel of TX to cycle through multiple 5GHz wireless channels.
  - If the product works unsteadily or the picture is intermittent, please try a different channel.
- 2. Restore Factory Setting: Press and hold the RESET button for three seconds. The HDMI Status LED will flash three times and the device will restart. The OSD will show that Restore Factory Set is successful.

The Factory Reset Button is located at the bottom of the RESET found on the transmitter and receiver. Perform factory reset while the device is powered on. User will need to use a long and slim stick like a paper clip to press the RESET button.

Note: You must reset transmitter and all receivers before they can be used again.

### Web settings

To prevent interference caused by a device using the same frequency, the Wireless HDMI Extender supports the set-up and adjustment of the operating channel and SSID via the WEB. For safety, the user should change the SSID and the password during the first login. Please follow the below steps:

- 1. Connect 12V power supplies to the transmitter and all receivers, and let them finish the pairing sequence.
- 2. Enable WiFi on the mobile phone / PC, search for and connect to SSID: JTD\_HDMI\_Wireless\_1 Enter the default password: 00000000.
- 3. Modify the IP address type of the mobile phone / PC to Auto (DHCP). When you select static type, you must be set the IP in 192.168.1. xxx address segment range, e.g. 192.168.1.100.
- 4. Open the browser and scan the QR code or enter "192.168.1.10" in the address bar to enter the web GUI as shown below:





5. Enter the default login password: admin, click "Login" to open the settings interface. If you want to modify the login password, please click on the "Modify" button. After the password has been modified click "save" to save your changes and exit. Restore factory settings by clicking the "reset" button.



6. If you have made an incorrect setting adjustment or forgot the set password, you can restore factory settings on both transmitter and receiver.

### **SPECIFICATIONS**

• HDMI resolution: up to 1080P@50/60Hz

• HDMI Audio Format: LPCM2.0/48KHz/16Bit

• HDMI Max bandwidth: 225MHz

• HDMI Max baud rate: 6.75Gbps

• Input/Output TMDS signal: 0.5~1.5Volts p-p(TTL)

• Input/Output DDC signal: 5Volts p-p (TTL)

HDMI output cable distance: ≤40ft AWG26 HDMI standard cable

Antenna type: External dual 3dBi gain antenna

Wireless standard: IEEE 802.11a/n
Wireless Band: 5GHz ISM Band

• Max Data rates: 2T2R up to 300Mbps

• Transmit Output Power(IPEX): 20dBm Max

• Transmission distance: up to 660ft (in open space)

IR Carrier frequency: 20-60KHzTX/RX Max working current: 1A

• Power adapter format Input: AC 100V~240V 50HZ/60Hz, DC12A

Operating Temperature range: 5 to +45°C
Storage Temperature range: 20 to +60°C

• Operating Humidity range: 10 to 90%RH (No Condensation)

• Storage Humidity range: 5 to 95%RH (No Condensation)

• Case Dimension (L x W x H): 5 x 5 x 0.98 (in)

Weight: TX .359 lbs / RX.352lbs

### **Notes**

Please use the machine as instructed to preserve device longevity.

- 1. The machine should be placed in a location far from damp conditions, high-temperatures and dust. Please also avoid erosive and oxidative environments.
- 2. Avoid dropping, hitting or shaking the wireless extenders.
- 3. Touching the power adaptor with wet hands is prohibited.
- 4. Please hold the power adaptor head and do not pull the power cord when removing from an electrical socket.
- 5. Please turn the power off when the machines are not used for a prolonged period of time.
- 6. Please do not attempt to open or tamper with the internal components.
- 7. Please use the provided power adapter only.

### **FAQ**

Before power on, please check all connecting cables carefully.

Please ensure that all cables are seated in their respective ports correctly.

No.	Problem Descriptio n	Solutions
-----	-------------------------	-----------

1	No display	<ol> <li>Ensure the TV is on and is connected to the extender via HDMI.</li> <li>Please check the TX power supply</li> <li>Make sure the TV is working regularly</li> </ol>
2	Displays "Connecting	<ol> <li>Please check the RX power supply</li> <li>Please ensure the WEB settings are set correctly (if customized)</li> <li>Co-channel interference. Please select a new channel</li> <li>Please power cycle both the transmitter and receiver.</li> </ol>
3	Displays "No signal"	<ol> <li>Check the signal source is powered on and output is normal.</li> <li>Check the signal source output resolution (ensure it is supported)</li> <li>Make sure the HDMI cable is properly connected</li> </ol>
4	Transmission distanc e is short	<ol> <li>Please adjust the angle of the antenna or adjust the placement</li> <li>Concrete walls, Brick, Wallpaper, Metal, Bulletproof glass will shorten the sig nal cover range or cause significant signal loss</li> <li>Co-channel interference. Please select a new channel</li> </ol>

\_\_\_\_

5	Image is not fluid	Please adjust the angle of the antenna or adjust the placement     Co-channel interference. Please select a new channel
6	Can't find the SSID	<ol> <li>Please check the RX and TX power supply</li> <li>Please check whether the Phone/PC supports 5G band</li> <li>Factory default or turn off the power restart</li> </ol>
7	Can't login to the We b settings interface	<ol> <li>Please check the RX and TX power supply</li> <li>Please check the IP type of mobile phone/PC is Auto (DHCP)</li> <li>Please check the PC's IP is in 192.168.1. XXX address range</li> <li>Please try logging in with a different web browser add the last page here (last page was provided in the Wechat group)</li> </ol>

### WWW.JTECHDIGITAL.COM

PUBLISHED BY J-TECH DIGITAL. INC. 12803 PARK ONE DRIVE SUGAR LAND. TX 77478



**Documents / Resources** 



# **TECH DIGITAL JTD-1651 660FT Wireless HDMI Extender** [pdf] User Manual JTD-1651, JTECH-WEX660, 660FT Wireless HDMI Extender

Manuals+,