

truflo TI3R Series Insertion Paddle Wheel Flow Meter Sensor User Guide

Home » truflo » truflo TI3R Series Insertion Paddle Wheel Flow Meter Sensor User Guide



Truflo® — TIR | TI3R Series
Insertion Paddle Wheel Flow Meter Sensor
Quick Start Manual



Read the user's manual carefully before starting to use the unit. Producer reserves the right to implement changes without prior notice.

Contents

- 1 Safety Information
- **2 Product Description**
- 3 Technical Specifications
- 4 Installation
- 5 Fittings and K-Factor
- **6 Installation Fittings**
- 7 Warranty, Returns and
- Limitations
- 8 Documents / Resources
 - 8.1 References

Safety Information

- · De-pressurize and vent system prior to installation or removal
- · Confirm chemical compatibility before use
- DO NOT exceed maximum temperature or pressure specifications
- ALWAYS wear safety goggles or face-shield during installation and/or service
- DO NOT alter product construction



Warning | Caution | Danger

Indicates a potential hazard. Failure to follow all warnings may lead to equipment damage, injury, or death.



Note | Technical Notes

Highlights additional information or detailed procedure.







Hand Tighten Only

Over tightening may permanently damage product threads and lead to failure of the retaining nut.



Do Not Use Tools

Use of tool(s) may damage produced beyond repair and potentially void product warranty.



Personal Protective Equipment (PPE)

Always utilize the most appropriate PPE during installation and service of Truflo® products.



Pressurized System Warning

Sensor may be under pressure. Take caution to vent system prior to installation or removal. Failure to do so may result in equipment damage and/or serious injury.

Product Description

The TI Series insertion plastic paddle wheel flow meter has been engineered to provide long-term accurate flow measurement in tough industrial applications. The paddle wheel assembly consists of a engineered Tefzel paddle and micro-polished zirconium ceramic rotor pin and bushings. High performance Tefzel® and Zirconium materials have been selected due to their excellent chemical and wear resistant properties.


Features

- 1/2" 24" Line Sizes
- Flow Rate
- Pulse | 4-20mA | Voltage Outputs (Optional)



New ShearPro® Design

- · Contoured Flow Profile
- Reduced Turbulence = Increased Longevity
- 78% Less Drag than Old Flat Paddle Design*
 - *Ref: NASA "Shape Effects on Drag"

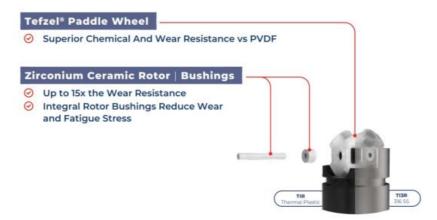

360º Shielded Rotor Design

· Eliminates Finger Spread



Technical Specifications

General				
Operating Range	0.3 to 33 ft/s 0.1 to 10 m/s			
Pipe Size Range	½ to 24" DN15 to DN600			
Linearity	±0.5% of F.S @ 25°C 77°F			
Repeatability	±0.5% of F.S @ 25°C 77°F			
Wetted Materials				
Sensor Body	PVC (Dark) PP (Pigmented) PVDF	(Natural) 316SS		
O-Rings	FKM EPDM* FFKM*			
Rotor Pin Bushings	Zirconium Ceramic ZrO2			
Paddle Rotor	ETFE Tefzel®			
Electrical				
Frequency	49 Hz per m/s nominal 15 Hz per ft/s nominal			
Supply Voltage	10-30 VDC ±10% regulated			
Supply Current	<1.5 mA @ 3.3 to 6 VDC <20 mA @ 6 to 24 VDC			
Max. Temperature/Pressure Rating – Standard and Integral Sensor Non-Shock				
PVC	180 Psi @ 68°F 40 Psi @ 140°F 12.5 Bar @ 20°C 2.7 Bar @ 60°			
PP	180 Psi @ 68°F 40 Psi @ 190°F			
PVDF	200 Psi @ 68°F 40 Psi @ 240°F			

316SS	200 Psi @ 180°F 40 Psi @ 300°F	14 Bar @ 82°C 2.7 Bar @ 148°F			
Operating Temperature	Operating Temperature				
PVC	32°F to 140°F 0°C to 60°C				
PP	-4°F to 190°F	-20°C to 88°C			
PVDF	-40°F to 240°F	-40°C to 115°C			
316SS	-40°F to 300°F	-40°C to 148°C			
Output					
Pulse 4-20mA Voltage (0~5V)*					
Display					
LED Flow Rate					
Standards and Approvals					
CE FCC RoHS Compliant					

See Temperature and Pressure Graphs for more information * **Model Selection**

PVC PP PVDF		
Size	Part Number	Material
1/2" — 4"	TIR-P-S	PVC
6" – 24"	TIR-P-L	PVC
1" – 4"	TIR-PP-S	PP
6" – 24"	TIR-PP-L	PP
1" – 4"	TIR-PF-S	PVDF
6" – 24"	TIR-PF-L	PVDF

Add Suffix – 'E' – EPDM Seals

316 SS		
Size	Part Number	Material
1/2" – 4"	TI3R-SS-S	316 SS
6" – 24"	TI3R-SS-L	316 SS

Add Suffix – 'E' – EPDM Seals


Display Characteristics



Dimensions (mm)



Wiring Diagram

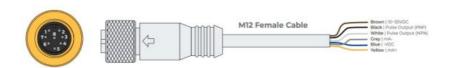

Pin	Description	Color
1	10~30 VDC	Brown
2	Pulse Output NPN	White
3	- VDC	Blue
4	Pulse Output PNP	Black
5	4-20mA + or V*	Yellow
6	4-20mA – or V*	Grey



Pin	Description
1	10~30 VDC
2	Factory Specific
3	- VDC
4	IO-Link

Wiring – One Pulse/Gal | Con E

Set "Con E" in Pulse Output Control (Refer Pulse Control Programmming, Page 11)

Wire Color	Description	
Brown	+ 10~30VDC	
White	Pulse Output	
Blue	-VDC	

Wiring - To Flow Display | Con F

Set "Con F" in Pulse Output Control (Refer Pulse Control Programmming, Page 11)

Wire Color	Description	
Brown	+ 10~30VDC	
White	Paddle Pulse	
Blue	-VDC	

Wiring - SSR* PNP Pulse | Con A

Set "Con A" in Pulse Output Control (Refer Pulse Control Programmming, Page 11)

Wire Color	Description	
Brown	+ 10~30VDC	
Black	Pulse Output PNP	
Blue	-VDC	

Set "Con A" in Pulse Output Control (Refer Pulse Control Programmming, Page 11)

Wire Color	Description	
Brown	+ 10~30VDC	
White	Pulse Output NPN	
Blue	-VDC	


^{*}SSR - Solid State Relay


Installation




- Lubricate O-rings with a viscous lubricant, compatible with the materials of construction.
- Using an alternating | twisting motion, carefully lower the sensor into the fitting. | Do Not Force | Fig-3
- Ensure tab | notch are parallel to flow direction | Fig-4

Hand tighten the sensor cap. DO NOT use any tools on the sensor cap or the cap threads or fitting threads may be damaged. | Fig-5

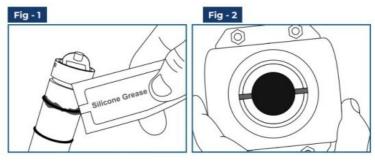


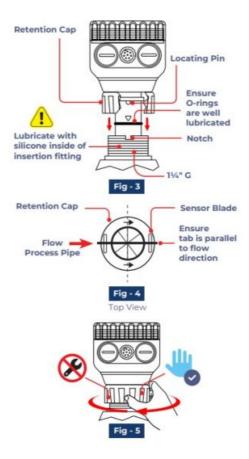


Correct Sensor Position

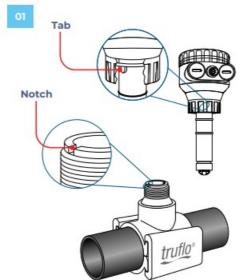

Locate the flow meter positioning tab and clamp saddle notch.

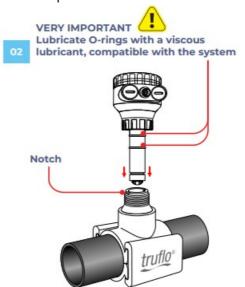


Engage one thread of the sensor cap, then turn the sensor until the alignment tab is seated in the fitting notch. Ensure tab is parallel to flow direction.

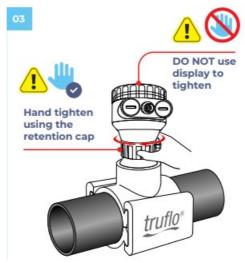

- · Hand tighten the screw cap
- DO NOT use any tools threads may be damaged
- Ensure meter is firmly in place

Correct Sensor Position Setup

TI Series flow meters measure liquid media only. There should be no air bubbles and the pipe must always remain full. To ensure accurate flow measurement, the placement of the flow meters needs to adhere to specific parameters. This requires a straight run pipe with a minimum number of pipe diameters distance upstream and downstream of the flow sensor.

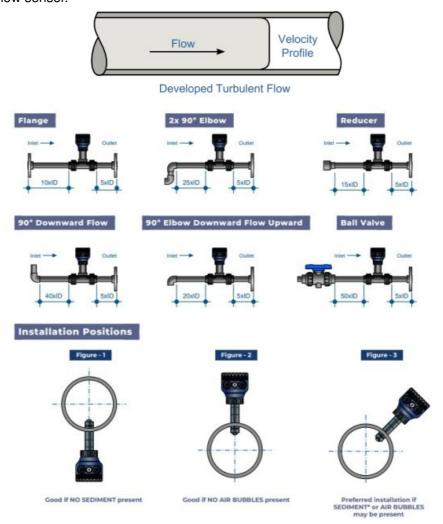

Fittings and K-Factor

TEE FITTINGS

TEE FITTINGS				
Tee Fitting				Sangar Langth
IN	DN	LPM	GPM	Sensor Length
½" (V1)	15	156.1	593.0	S
½" (V2)	15	267.6	1013.0	S
3/4"	20	160.0	604.0	S
1"	25	108.0	408.0	S
11/2"	40	37.0	140.0	S
2"	50	21.6	81.7	S
2½"	65	14.4	54.4	S
3"	80	9.3	35.0	S
4"	100	5.2	19.8	S

TEE FITTINGS (V2)		
Size	K-Factor	
1/2"	282.0	
3/4"	196.0	
1"	136.0	
1½"	43.2	
2"	23.2	

CLAMP-ON SADDLES





Clamp Saddles		K-Factor		Sangar Langth
IN	DN	LPM	GPM	Sensor Length
2"	50	21.6	81.7	S
3"	80	9.3	35.0	S
4"	100	5.2	19.8	S
6"	150	2.4	9.2	L
8"	200	1.4	5.2	L


CPVC SOCKET WELD-ON ADAPTERS





Weld On Adapter		K-Factor		Conservations the
IN	DN	LPM	GPM	Sensor Length
2"	50	14.4	54.4	S
2½"	65	9.3	35.5	S
3"	80	9.3	35.0	S
4"	100	5.2	19.8	S
6"	150	2.4	9.2	L
8"	200	1.4	5.2	L
10"	250	0.91	3.4	L
12"	300	0.65	2.5	L
14"	400	0.5	1.8	L
16"	500	0.4	1.4	L
18"	600	0.3	1.1	L
20"	800	0.23	0.9	L
24"	1000	0.16	0.6	L

Pressure vs. Temperature

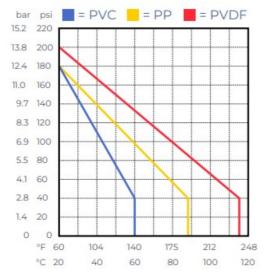

Note: During system design the specifications of all components must be considered. | Non-Shock



Min/Max Flow Rates

Pipe Size (O.D.)	LPM GPM	LPM GPM
Tipe Size (O.D.)	0.3m/s min.	10m/s max
½" DN15	3.5 1.0	120.0 32.0
%" DN20	5.0 1.5	170.0 45.0
1" DN25	9.0 2.5	300.0 79.0
1 ½" DN40	25.0 6.5	850.0 225.0
2" DN50	40.0 10.5	1350.0 357.0
2 ½" DN60	60.0 16.0	1850.0 357.0
3" DN80	90.0 24.0	2800.0 739.0
4" DN100	125.0 33.0	4350.0 1149.0
6" DN150	230.0 60.0	7590.0 1997.0
8" DN200	315.0 82.0	10395.0 2735.0




Programming

Select/Save/Continue Move Selection Left Change Digit Value STEPS




DISPLAY	OPERATION
HH.B.B	Home Screen
8.8. 2 .8	K Factor (K1 K2) K1 — Pipe Size: ¾" – 24" GPM ½" – 8" LPM K2 — Pipe Size: 10" – 24" LPM
8888	K Factor Value Enter K Factor value depending on pipe size. Refer to Page 9 for K-Factor Values
BBBB	Transmitter Range 20mA Note: 4mA = 0 (Factory Default)
HEE.E	Enter 20mA Value 20mA = Max Flow Rate
8888	SSR* Alarm Set Point *SSR – Solid State Relay Note: See Page No. 6 for Wiring
8888	Enter Alarm Set Point Factory Default: 100 Range: 0 ~ 999.9
BHHS	Alarm Hysterisis
	Enter Hysterisis Value Factory Default: 0.0 Range: 0 ~ 999.9

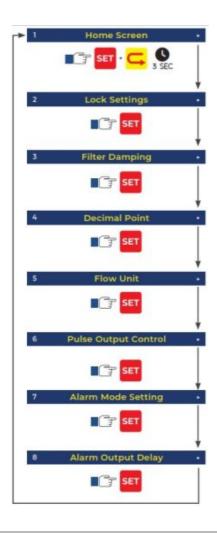

DISPLAY	OPERATION
REE.	Home Screen
E B. 18	Lock Settings Factory Default: Lk = 10 Otherwise meter will enter Lockout Mode*
88.88	Filter Damping Factory Default: F = 10 Range: 00 ~ 99 Sec
BBBB	Decimal Point Factory Default: dP = 1 Range: 0 ~ 1
BE.BB	Flow Unit Ut.G = Gallons (Factory Default) Ut.L = Liters Ut.KL = Kiloliters
EanE	Pulse Output Control Con.E = One Pulse/Gal (Factory Default) Con.F = Paddle Pulse ► Frequency Max 5 KHZ Con.A = SSR*
BLEE	Alarm Mode Setting Factory Default: ALT = 0 Range: 0~4 Refer to Alarm Mode Selection (See below)
88.88	Alarm Output Delay Factory Default: t = 00 Range: 01 ~ 09 Secs

ALt No.	Description	
ALt = 0	CV ≥ SV —► Relay ON CV < [SV – Hys] —► Relay OFF	
ALt = 1	CV ≤ SV → Relay ON CV > [SV + Hys] → Relay OFF	
ALt = 2	[SV + Hys] ≥ CV ≥ [SV - Hys] → Relay ON : CV > [SV + Hys] or CV < [SV - HyS] → Relay OFF	
ALt = 3	[SV + Hys] ≥ CV ≥ [SV - Hys] → Relay OFF: CV > [SV + Hys] or CV < [SV - HyS] → Relay ON	
Hys = Hyst	Hys = Hysteresis — Acts like a buffer ± around Alarm Set Point	
CV: Current Value (Flow Rate) SV = Set Value		

Rotor Pin | Paddle Replacement

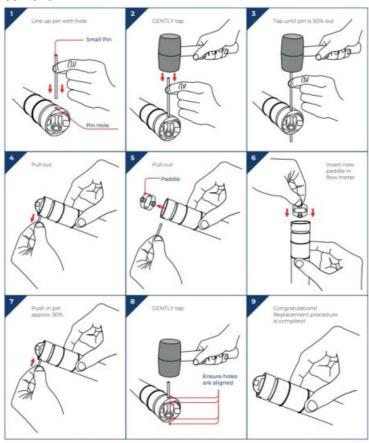

Installation Fittings



SA Clamp-On Saddle Fittings

- PVC Material
- Viton O-Rings
- Available in Metric DIN
- Will Accept Signet® Type Flow Meter

PVC	
Size	Part Number
2"	SA020
3"	SA030
4"	SA040
6"	SA060
8"	SA080



PT | PPT | PFT Installation Fittings

- PVC | PP | PVDF
- Socket End Connections
- Will Accept Signet Type Flow Meter
- True-Union Design®

	PVDF	PVC	PP
Size	Part Number	Part Number	Part Number
1/2"	PFT005	PT005	PPT005
3/4"	PFT007	PT007	PPT007
1"	PFT010	PT010	PPT010
11/2"	PFT015	PT015	PPT015
2"	PFT020	PT020	PPT020

Add Suffix 'E'

- EPDM Seals

'T' - NPT End Connectors

'B' - Butt Fused End Connections for PP or PVDF



SAR

Clamp-On Saddle Fittings (SDR Pipe)

- PVC Material
- Viton O-Rings
- Available in Metric DIN
- Will Accept Signet® Type Flow Meter

PVC	
Size	Part Number
2"	SAR020
3"	SAR030
4"	SAR040
6"	SAR060
8"	SAR080
10"	SAR100
12"	SAR120
14"	SAR140
16"	SAR160



CT CPVC Tee Installation Fitting

- 1"-4" Pipe Sizes
- Easy to Install
- Will Accept Signet Flow Meter®

CPVC	CPVC	
Size	Part Number	
1"	CT010	
1 1/2"	CT015	
2"	CT020	
3"	CT030	
4"	CT040	



PG

Glue-On Adapter

- 2"-24" Pipe Sizes
- Easy to Install
- Will Accept Signet ® Flow Meter

Glue-On Adapter – CPVC	
Size	Part Number
2"- 4"	PG4
6"- 24"	PG24



SWOL Weld-On Adapter

- 2"-12" Pipe Sizes
- 316SS Weld-o-let with PVDF insert
- Easy to Install
- Will Accept Signet® Flow Meter

Weld-On Adapter – 316 SS	
Size	Part Number
3"	SWOL3
4"	SWOL4
6"	SWOL6
8"	SWOL8
10"	SWOL10
12"	SWOL12



SST 316SS TI3 Series NPT Tee Fittings

• Will Accept Signet® Type Flow Meter

Threaded Tee Fitting – 316 SS		
Size	Part Number	
1/2"	SST005	
3/4"	SST007	
1"	SST010	
1 ½"	SST015	
2"	SST020	
3"	SST030	
4"	SST040	



316SS TI3 Series

Sanitary Tee Fittings

• Will Accept Signet Type Flow Meter

Sanitary Tee Fitting – 316 SS		
Size	Part Number	
1/2"	SSS005	
3/4"	SSS007	
1"	SSS010	
1 1/2"	SSS015	
2"	SSS020	
3"	SSS030	
4"	SSS040	



SSF 316SS TI3 Series Flanged Tee Fittings

• Will Accept Signet Type Flow Meter

Flanged Tee Fitting – 316 SS		
Size	Part Number	
1/2"	SSF005	
3/4"	SSF007	
1"	SSF010	
1 ½"	SSF015	
2"	SSF020	
3"	SSF030	
4"	SSF040	

Warranty, Returns and Limitations

Warranty

Icon Process Controls Ltd warrants to the original purchaser of its products that such products will be free from defects in material and workmanship under normal use and service in accordance with instructions furnished by Icon Process Controls Ltd for a period of one year from the date of sale of such products. Icon Process Controls Ltd obligation under this warranty is solely and exclusively limited to the repair or replacement, at Icon Process Controls Ltd option, of the products or components, which Icon Process Controls Ltd examination determines to its satisfaction to be defective in material or workmanship within the warranty period. Icon Process Controls Ltd must be notified pursuant to the instructions below of any claim under this warranty within thirty (30) days of any claimed lack of conformity of the product. Any product repaired under this warranty will be warranted only for the remainder of the original warranty period. Any product provided as a replacement under this warranty will be warranted for the one year from the date of replacement.

Returns

Products cannot be returned to Icon Process Controls Ltd without prior authorization. To return a product that is thought to be defective submit a customer return (MRA) request form and follow the instructions therein. All warranty and non-warranty product returns to Icon Process Controls Ltd must be shipped prepaid and insured. Icon Process Controls Ltd will not be responsible for any products lost or damaged in shipment.

Limitations

This warranty does not apply to products which:

- 1. are beyond the warranty period or are products for which the original purchaser does not follow the warranty procedures outlined above;
- 2. have been subjected to electrical, mechanical or chemical damage due to improper, accidental or negligent use:
- 3. have been modified or altered;
- 4. anyone other than service personnel authorized by Icon Process Controls Ltd have attempted to repair;
- 5. have been involved in accidents or natural disasters; or
- 6. are damaged during return shipment to Icon Process Controls Ltd

Icon Process Controls Ltd reserves the right to unilaterally waive this warranty and dispose of any product returned to Icon

Process Controls Ltd where:

- 1. there is evidence of a potentially hazardous material present with the product;
- 2. or the product has remained unclaimed at Icon Process Controls Ltd for more than 30 days after Icon Process Controls Ltd has dutifully requested disposition.

This warranty contains the sole express warranty made by Icon Process Controls Ltd in connection with its products. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY DISCLAIMED. The remedies of repair or replacement as stated above are the exclusive remedies for the breach of this warranty. IN NO EVENT SHALL Icon Process Controls Ltd BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND INCLUDING PERSONAL OR REAL PROPERTY OR FOR INJURY TO ANY PERSON. THIS WARRANTY CONSTITUTES THE FINAL, COMPLETE AND EXCLUSIVE STATEMENT OF WARRANTY TERMS AND NO PERSON IS AUTHORIZED TO MAKE ANY OTHER WARRANTIES OR REPRESENTATIONS ON BEHALF OF Icon Process Controls Ltd. This warranty will be interpreted pursuant to the laws of the province of Ontario, Canada.

If any portion of this warranty is held to be invalid or unenforceable for any reason, such finding will not invalidate any other provision of this warranty.



Corrosion-Free
Instrumentation Equipment
Find Quality Products Online at:

Valuetesters.com
info@valuetesters.com

Documents / Resources



truflo TI3R Series Insertion Paddle Wheel Flow Meter Sensor [pdf] User Guide
TI3R Series Insertion Paddle Wheel Flow Meter Sensor, TI3R Series, Insertion Paddle Wheel Flow Meter Sensor, Paddle Wheel Flow Meter Sensor, Wheel Flow Meter Sensor, Flow Meter Sensor, Meter Sensor

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.