



Contents [[hide](#)]

- [1 U-Prox SL mini Adjustable Universal Smart Line Reader](#)
- [2 Specifications](#)
- [3 Description](#)
- [4 Installation](#)
- [5 Connection](#)
- [6 Wiegand](#)
- [7 Configuration](#)
- [8 Mobile identification](#)
- [9 U-PROX ID application](#)
- [10 How to obtain mobile ID](#)
- [11 Mifare® identifiers](#)
- [12 Warranty](#)
- [13 FAQ](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)



U-Prox SL mini Adjustable Universal Smart Line Reader



Specifications

- Product Name: U-PROX SL mini
- Compatibility: Works with U-PROX ID application and mobile identifiers
- Interfaces: Wiegand 26, 32, 34, 37, 40, 42, 56, 58, 64, 80 bits, RS232, TouchMemory
- Cable Requirement: Multi-core signal cable with 0.22 mm² cross-section of each wire
- Mobile ID Range: Door – up to 60-70 cm, Barrier/Gate – 1 to 15 m
- Card Support: 125 kHz cards (ASK, PSK), Mifare DESFire EV1, EV2, EV3
- Warranty: 2 years (except batteries)


Description

U-PROX SL mini – the adjustable universal SmartLine reader for mobile credentials and proximity identifiers.


In conjunction with the U-PROX ID application and mobile identifiers U-PROX IDs allow any access control system to use smartphones as access system credentials.

Installation

1. Make small recess or hole (diameter is 14 mm) to connect cable under the reader's case

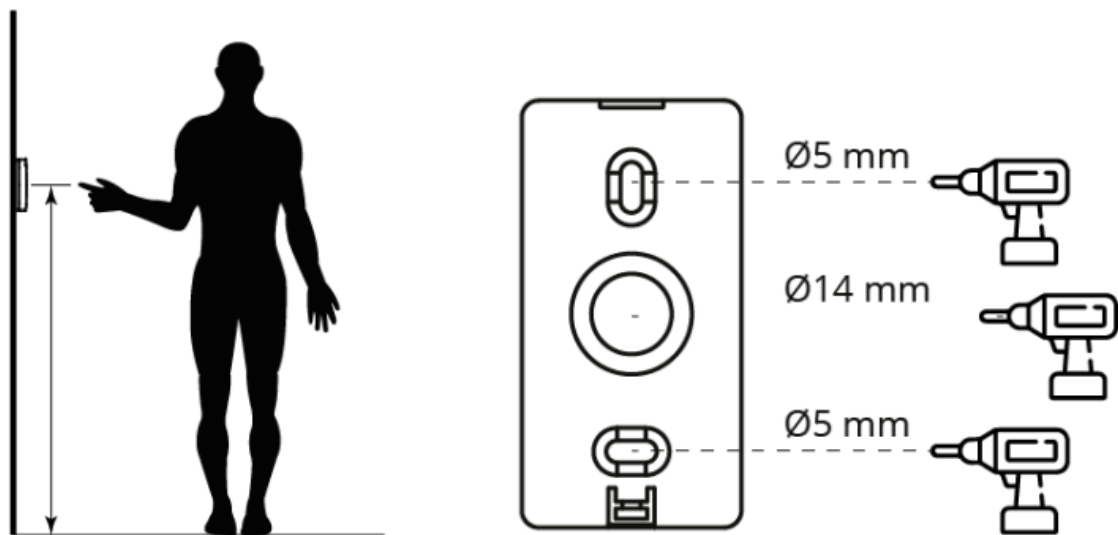

2. Loosen the screw at the bottom of the reader

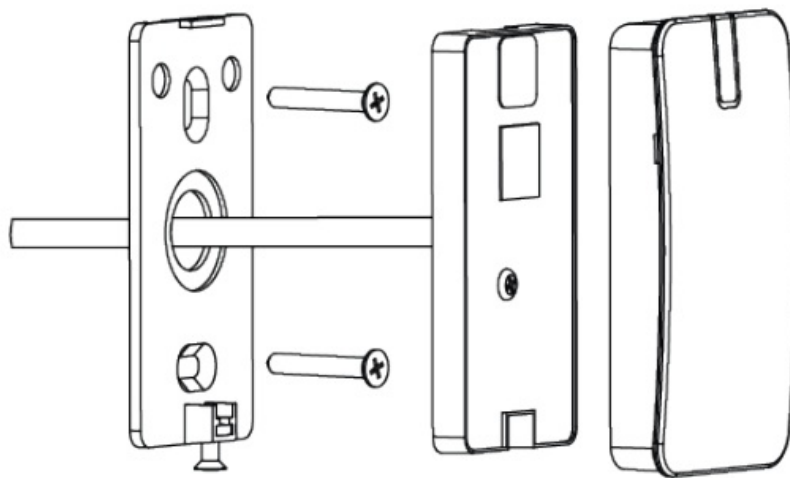

3. Remove the top cover, remove the back plate

4. Mount the back plate of reader on the wall using supplied plastic dowels and screws

5. Carry out wiring to the control panel

6. Insert the reader in the back plate


7. Place the top cover and tighten it with a screw

Installation on the metal surfaces may cause decrease of reading range.

Do not place readers closer than 20 cm one from another. It is possible to install two readers at a distance 10-15 cm of each other when their yellow wires (Hold/Sync) interconnected. This synchronizes the work of the readers, they will work alternately.

Connection

- Seamless and easy connection to existing and new access systems, due to the Wiegand 26, 32, 34, 37, 40, 42, 56, 58, 64, 80 bits interfaces, Wiegand with automatic selection, RS232 and TouchMemory supports.
- We recommend to use multi-core signal cable with 0.22 mm² cross-section of each wire between reader and panel.

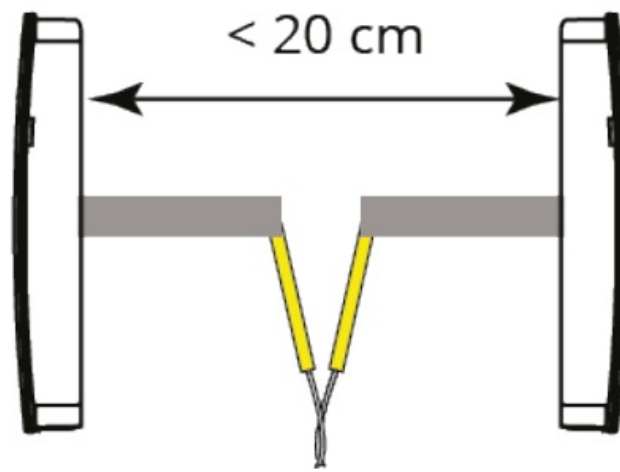


Wiegand

The reader connection wires functions are listed in the table.

+12V	red
GND	
Data0 (WD0)	
Data1 (WD1)	
Red LED (RD)	
Green LED (GN)	
Beep	
Hold or sync	


We recommended to use following wiring when reader connected to the control panel

with twisted pair.

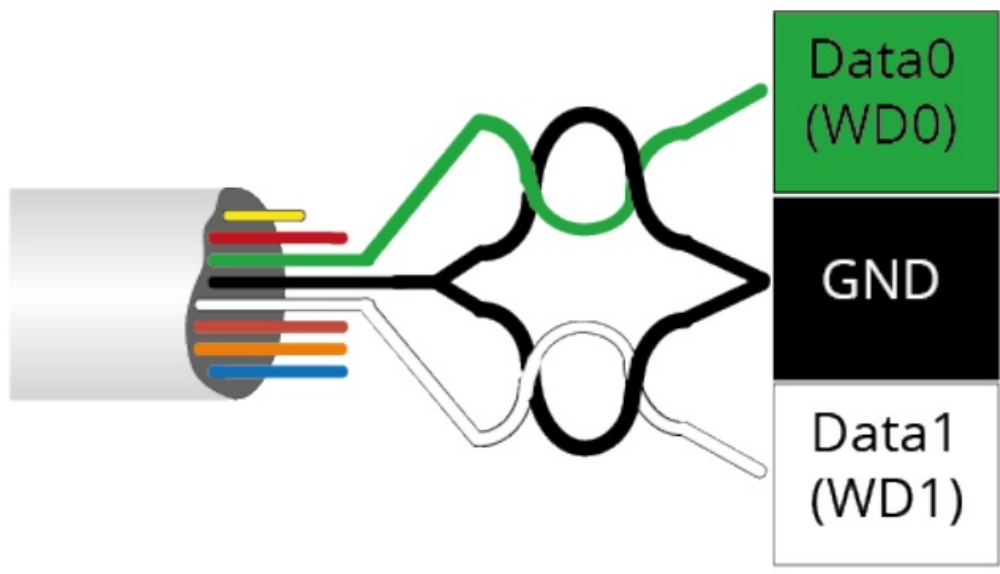


RS-232

The reader connection wires functions are listed in the table.

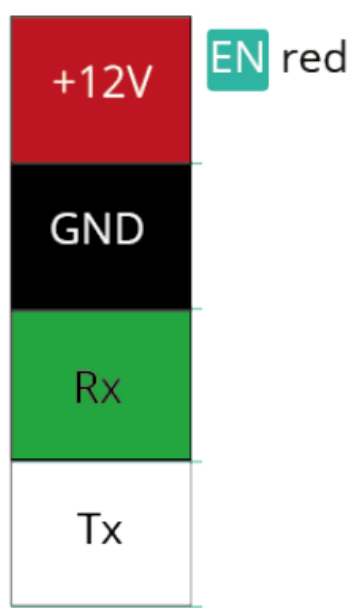


TouchMemory

The reader connection wires functions are listed in the table.

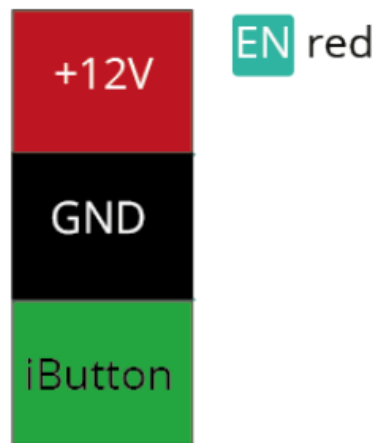

We recommended to use following whiring when reader connected to the control panel with twisted pair.

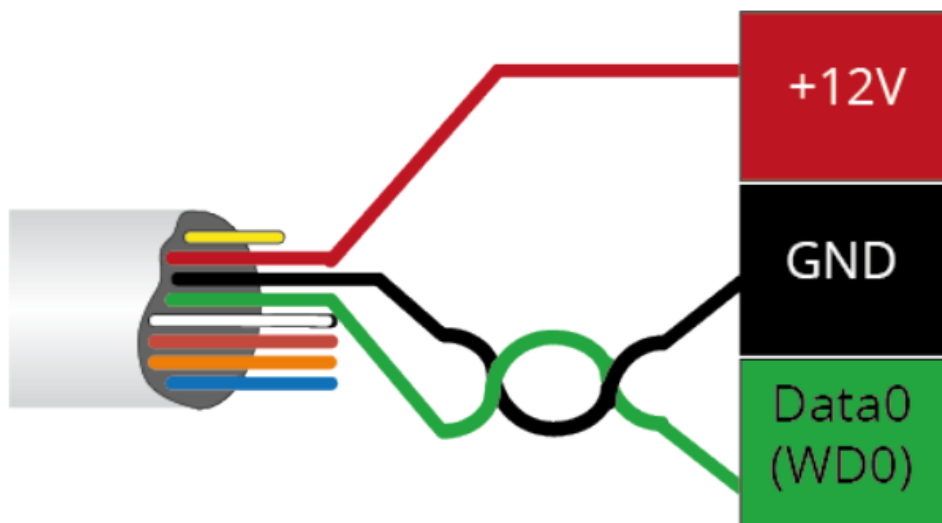

Configuration

With the free mobile application U-Prox Config, the reader can be completely adjusted — from the indication to the encryption modes.




The reader is supplied without the engineering password for programming specified. To connect and (re) set the password — connect inputs D0 (green) and D1 (white) with each other and apply power to the reader.

The reader firmware can be updated with an NFC-enabled Android smartphone only.

Mobile identification

- Reader supports digital personal mobile credential. It is processed and stored in the user's smartphone using the U-PROX ID application. It can be transferred over NFC and/or 2.4 GHz radio between the reader and the smartphone.
- Reader supports hardware active mobile identifiers U-PROX Tag and U-PROX Auto Tag.
- Reader supports 3 operation modes for smartphones with U-Prox ID:
 - “Door-Proximity” – 10-20 cm, reader activates by built-in proximity sensor.
 - Recommended for double-sided doors and turnstiles “Door” – up to 60-70 cm
 - “Barrier/Gate” – adjustable range of interaction from 1 to 15 m.

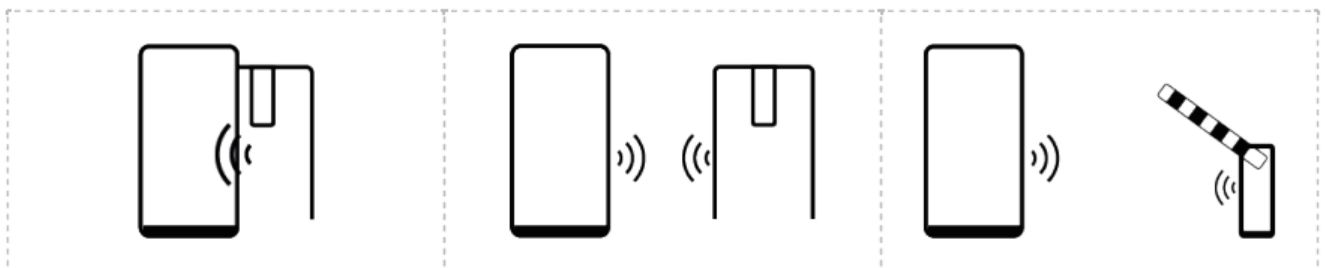

U-PROX ID application

Free mobile application U-PROX ID receives, stores and transmits mobile credentials

between the reader and the smartphone.



How to obtain mobile ID

You can purchase mobile IDs from [our dealers](#).

RFID, 125 kHz

The reader supports 125 kHz cards with amplitude (ASK – EmMarine, etc.) and frequency modulation (PSK – Temik, etc.)

These cards do not have cloning protection, but are very popular due to their low cost

Mifare® identifiers

The reader supports work with Mifare® cards, reads encrypted identifiers with a userassigned card number, with a static or diversified encryption key.

Up to five encryption profiles can be used simultaneously.

Mifare®Classic

The least secure series of cards, has a Crypto 1 (SL1) encryption algorithm vulnerability. When using it, it is recommended to encrypt all card sectors with a diversified encryption key.

Mifare®Plus

The reader supports SL1 and SL3 modes for Mifare®Plus. It is recommended to use SL3 mode as it has the highest security and AES encryption algorithm.

Mifare®Defire

The reader supports Mifare DESFire EV1, EV2 and EV3 cards. AES encryption algorithm is supported.

Warranty


Warranty for U-PROX devices (except batteries) is valid for two years after the purchase date. If the device operates incorrectly, please contact support@u-prox.systems at first, maybe it can be solved remotely.

FAQ

Q: How can I purchase mobile IDs?

A: You can purchase mobile IDs from our authorized dealers.

Documents / Resources

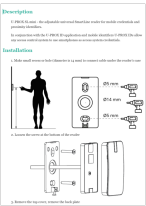	<p>U-Prox SL mini Adjustable Universal Smart Line Reader [pdf] Instruction Manual</p> <p>SL mini Adjustable Universal Smart Line Reader, SL mini, Adjustable Universal Smart Line Reader, Universal Smart Line Reader, Smart Line Reader, Line Reader, Reader</p>
--	---

References

- [User Manual](#)

U-PROX

Adjustable Universal Smart Line Reader, Line Reader, Reader, SL mini, SL mini Adjustable Universal Smart Line Reader, Smart Line Reader, U-PROX, Universal Smart Line Reader

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.