


UNI-T
MSO-
UPO3000E
Series Digital
Oscilloscope

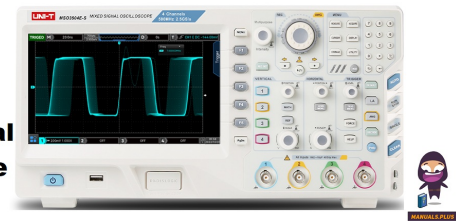

UNI-T MSO-UPO3000E Series Digital Oscilloscope User Guide


[Home](#) » [UNI-T](#) » UNI-T MSO-UPO3000E Series Digital Oscilloscope User Guide 

Contents

- 1 [UNI-T MSO-UPO3000E Series Digital Oscilloscope](#)
- 2 [Product Usage Instructions](#)
- 3 [FAQ](#)
- 4 [Safety Requirements](#)
- 5 [Introduction of MSO/UPO3000E Series](#)
- 6 [Getting Started Guide](#)
- 7 [Front Panel](#)
- 8 [User Interface](#)
- 9 [Touch Screen](#)
- 10 [Operation Menu](#)
- 11 [Remote Control](#)
- 12 [Troubleshooting](#)
- 13 [Appendix Contact Us](#)
- 14 [Copyright Information](#)
- 15 [Documents / Resources](#)
 - 15.1 [References](#)

UNI-T®

UNI-T MSO-UPO3000E Series Digital Oscilloscope

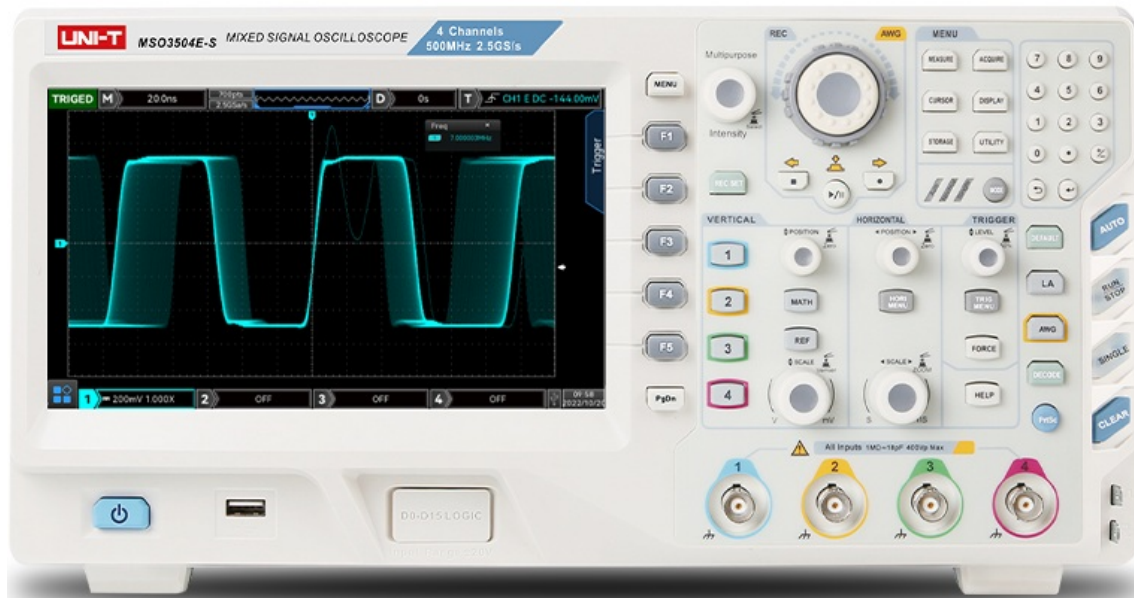

Specifications

- **Model:** MSO/UPO3000E Series Oscilloscope
- **Manufacturer:** Uni-Trend Technology (China) Co., Ltd.
- **Document Version:** MSO/UPO300020221130-V1.00
- **Trademark:** UNI-T
- **Certifications:** CE, UKCA, UL STD 61010-1, 61010-2-030, CSA STD C22.2 No. Certification 61010-1, 61010-2-030

Product Usage Instructions

Safety Requirements

- This section contains essential safety information to ensure safe operation of the oscilloscope. Users must adhere to the safety precautions provided in the manual.

Safety Precautions

- Follow the safety guidelines to avoid electric shock and personal injury.
- Use the device as specified by the manufacturer.
- Indoor use is recommended unless otherwise stated.

Power Management:

- Ensure the main power is off when not in use (OFF position).
- Check the AC and DC voltage ranges for proper operation.

Certifications:

- The oscilloscope conforms to various safety standards including CE, UKCA, and UL certifications.

Waste Management

- Dispose of equipment and accessories responsibly according to local regulations.

EFUP Safety Requirements

- The oscilloscope has an environment-friendly use period of 40 years, after which it should be recycled.

FAQ





- **Q: What should I do if I encounter a safety warning on the oscilloscope?**
 - **A:** If you encounter a safety warning, refer to the manual for guidance on how to proceed safely.
- **Q: Can the oscilloscope be used outdoors?**
 - **A:** The oscilloscope is designed for indoor use unless explicitly stated otherwise in the product manual.









Safety Requirements





This section contains information and warnings that must be followed to keep the instrument operating under safety conditions. In addition, users should also follow the common safety procedures.


Safety Precautions	
Warning	Please follow the following guidelines to avoid possible electric shock and risk to personal safety.
	Users must follow the following conventional safety precautions in the operation, service, and maintenance of this device. UNI-T will not be liable for any personal safety and property loss caused by the user's failure to follow the following safety precautions. This device is designed for professional users and responsible organizations for measurement purposes. Do not use this device in any way not specified by the manufacturer. This device is only for indoor use unless otherwise specified in the product manual.
Safety Statement	
Warning	"Warning" indicates the presence of a hazard. It reminds users to pay attention to a certain operation process, operation method, or similar. Personal injury or death may occur if the rules in the "Warning" statement are not properly executed or observed. Do not proceed to the next step until you fully understand and meet the conditions stated in the "Warning" statement.
Caution	"Caution" indicates the presence of a hazard. It reminds users to pay attention to a certain operation process, operation method, or similar. Product damage or loss of important data may occur if the rules in the "Caution" statement are not properly executed or observed. Do not proceed to the next step until you fully understand and meet the conditions stated in the "Caution" statement.
Note	"Note" indicates important information. It reminds users to pay attention to procedures, methods conditions, etc. The contents of the "Note" should be highlighted if necessary.

Safety Sign

	Danger	It indicates possible danger of electric shock, which may cause personal injury or death.
	Warning	It indicates that you should be careful to avoid personal injury or product damage.
	Caution	It indicates possible danger, which may cause damage to this device or other equipment if you fail to follow a certain procedure or condition. If the "Caution" sign is present, all conditions must be met before you proceed to operation.
	Note	It indicates potential problems, which may cause failure of this device if you fail to follow a certain procedure or condition. If the

		"Note" sign is present, all conditions must be met before this device will function properly.
	AC	Alternating current of device. Please check the region's voltage range.
	DC	Direct current device. Please check the region's voltage range.
	Grounding	Frame and chassis grounding terminal.
	Grounding	Protective grounding terminal.
	Grounding	Measure grounding terminal.
	OFF	Main power off.
	ON	Main power on.
	Power Supply	Standby power supply: when the power switch is turned off, this device is not completely disconnected from the AC power supply.

CAT I	Secondary electrical circuit connected to wall sockets through transformers or similar equipment, such as electronic instruments and electronic equipment; electronic equipment with protective measures, and any high-voltage and low-voltage circuits, such as the copier in the office	
CAT II	CATII: Primary electrical circuit of the electrical equipment connected to the indoor socket via the power cord, such as mobile tools, home appliances, etc. Household appliances, portable tools (e.g. electric drill), household sockets, sockets more than 10 meters away from CAT III circuit or sockets more than 20 meters away from CAT IV circuit	
CAT III	Primary circuit of large equipment directly connected to the distribution board and circuit between the distribution board and the socket (three-phase distributor circuit includes a single commercial lighting circuit). Fixed equipment, such as multi-phase motor and multi-phase fuse box; lighting equipment and lines inside large buildings; machine tools and power distribution boards at industrial sites (workshops)	
CAT IV	Three-phase public power unit and outdoor power supply line equipment. Equipment designed to "initial connection", such as power distribution system of power station, power instrument, front-end overload protection, and any outdoor transmission line	
	Certification	CE indicates a registered trademark of EU.
	Certification	UKCA indicates a registered trademark of UK.
	Certification	Conforms to UL STD 61010-1, 61010-2-030, Certified to CSA STD C22.2 No. 61010-1, 61010-2-030.
	Waste	Do not place equipment and its accessories in the trash. Items must be properly disposed of in accordance with local regulations.

	EFUP	This environment-friendly use period (EFUP) mark indicates that dangerous or toxic substances will not leak or cause damage within this indicated time period. The environment-friendly use period of this product is 40 years, during which it can be used safely. Upon expiration of this period, it should enter the recycling system.
---	------	---

Safety Requirements

Warning		
Preparation before use	<p>Please connect this device to the AC power supply with the power cable provided; The AC input voltage of the line reaches the rated value of this device. See the product manual for specific rated values.</p> <p>The line voltage switch of this device matches the line voltage; The line voltage of the line fuse of this device is correct;</p> <p>It is not used for measuring the main circuit.</p>	
Check all terminal-rated values	Please check all rated values and marking instructions on the product to avoid fire and the impact of excessive current. Please consult the product manual for detailed rated values before connection.	
Use the power cord properly	You can only use the special power cord for the instrument approved by the local and state standards. Please check whether the insulation layer of the cord is damaged or the cord is exposed, and test whether the cord is conductive. If the cord is damaged, please replace it before using the instrument.	
Instrument Grounding	To avoid electric shock, the grounding conductor must be connected to the ground. This product is grounded through the grounding conductor of the power supply. Please be sure to ground this product before it is powered on.	
AC power supply	Please use the AC power supply specified for this device. Please use the power cord approved by your country and confirm that the insulation layer is not damaged.	
Electrostatic prevention	This device may be damaged by static electricity, so it should be tested in the anti-static area if possible. Before the power cable is connected to this device, the internal and external conductors should be grounded briefly to release static electricity. The protection grade of this device is 4 kV for contact discharge and 8 kV for air discharge.	
Measurement accessories	Measurement accessories are of the lower class and do not apply to main power supply measurement, CAT II, CAT III, or CAT IV circuit measurement. Probe subassemblies and accessories within the range of IEC 61010-031 and current sensors within the range of IEC 61010-2-032 can meet its requirements.	
Use the input/output port of this device properly	Please use the input/output ports correctly provided by this device. Do not load any input signal at the output port of this device. Do not load any signal that does not reach the rated value at the input port of this device. The probe or other connection accessories should be effectively grounded to avoid product damage or abnormal function. Please refer to the product manual for the rated value of the input/output port of this device.	
Power fuse	Please use the power fuse of the specified specification. If the fuse needs to be replaced, it must be replaced by maintenance personnel authorized by UNI-T to replace the fuse that meets the specified specifications.	

Disassembly and cleaning	<p>There are no components available to operators inside. Do not remove the protective cover.</p> <p>Maintenance must be carried out by qualified personnel.</p>
Service environment	<p>This device should be used indoors in a clean and dry environment with ambient temperature from 0 °C to 40 °C.</p> <p>Do not use this device in explosive, dusty, or humid air.</p>
Do not operate in a humid environment	Do not use this device in a humid environment to avoid the risk of internal short circuits or electric shock.
Do not operate in a flammable and explosive environment	Do not use this device in a flammable and explosive environment to avoid product damage or personal injury.
Caution	
Abnormality	If this device may be faulty, please contact the authorized maintenance personnel of UNI-T for testing. Any maintenance, adjustment, or parts replacement must be done by the relevant personnel of UNI-T.
Cooling	<p>Do not block the ventilation holes at the side and back of this device;</p> <p>Do not allow any external objects to enter this device via ventilation holes; Please ensure adequate ventilation, and leave a gap of at least 15 cm on both sides, front and back of this device.</p>
Safe transportation	Please transport this device safely to prevent it from sliding, which may damage the buttons, knobs, or interfaces on the instrument panel.
Proper ventilation	Poor ventilation will cause the device temperature to rise, thus causing damage to this device. Please keep proper ventilation during use, and regularly check the vents and fans.

Keep clean and dry	Please take action to avoid dust or moisture in the air affecting the performance of this device. Please keep the product surface clean and dry.
Note	
Calibration	The recommended calibration period is one year. Calibration should only be carried out by qualified personnel.

Introduction of MSO/UPO3000E Series

MSO/UPO3000E series digital phosphor oscilloscope includes ten models

Model	Analog Channel	Analog bandwidth	LA	AWG
UPO3354E	4	350MHz	○	×
UPO3352E	2	350MHz	○	×
UPO3504E	4	500MHz	○	×
UPO3502E	2	500MHz	○	×
MSO3354E	4	350MHz	●	×
MSO3352E	2	350MHz	●	×
MSO3504E	4	500MHz	●	×
MSO3502E	2	500MHz	●	×
MSO3354E-S	4	350MHz	●	●
MSO3504E-S	4	500MHz	●	●

- : Standard
- Optional
- × Not support

Getting Started Guide

- This chapter introduces using the oscilloscope for the first time, the front and rear panels, the user interface, as well as the built-in help system.

General Inspection

It is recommended to inspect the instrument by following the steps below before using the MSO/UPO3000E series for the first time.

1. Check for Damages caused by Transport

- If the packaging carton or the foam plastic cushions are severely damaged, please contact the UNI-T distributor of this product immediately.

2. Check Attachment

- Please check the appendix for the list of accessories. If any of the accessories are missing or damaged, please contact UNI-T or local distributors of this product.



3. Machine Inspection

- If the instrument appears to be damaged, not working properly, or has failed the functionality test, please contact UNI-T or local distributors of this product.
- If the equipment is damaged due to shipping, please keep the packaging and notify both the transportation department and UNI-T distributors, UNI-T will arrange maintenance or replacement.


Before Use

To perform a quick verification of the instrument's normal operations, please follow the steps below.

1. Connect to the Power Supply

- The power supply voltage range is from 100 VAC to 240 VAC, the frequency range is 50 Hz to 60 Hz. Connect the oscilloscope to the power supply line that came with the oscilloscope or any power supply line that meets the local country standards.
- If the power switch on the rear panel is not turned on, the indicator of the power soft  button on the left corner of the front panel will be extinguished and no function.
- If the power switch on the rear panel is turned on, the indicator of the power soft button  on the left corner of the front panel will be red, press this button to boot up the instrument.

2. Boot-up Check

- Press the soft power button  and the light should change to green. The oscilloscope will show a boot animation, and then enter the normal interface.

3. Connect Probe

- Use the probe's BNC port to connect to the channel 1 BNC port of the oscilloscope. Connect the probe to the "Compensating signal port" and the ground clip is connected to the "Ground terminal" below the compensating signal port as shown in Figure 1.
- The output of the compensating signal should be amplitude 3 Vpp, default frequency is 1 kHz

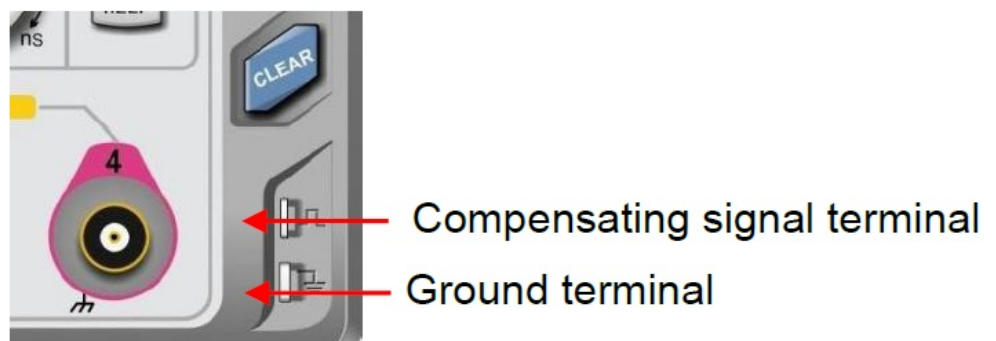


Figure 1 Compensating signal and Ground terminal

4. Function Check

- Press the AUTO key, and a 3 Vpp 1 kHz square wave should appear. Repeat step 3 to check all channels.


5. Probe Compensation

- When the probe is connected to any input channel for the first time, this step might be adjusted to match the probe and the input channel.

Probes that are not compensated may lead to measurement errors or mistakes.

If need to adjust the probe compensation, please follow the following steps:

- Set the attenuation coefficient in the probe menu and the switch on the probe 10x, and connect the probe to CH1. Make sure the probe's connector is properly connected to the oscilloscope.
- Connect the probe's main clip and ground clip to the oscilloscope's compensating signal and ground terminal respectively. Open CH1 and press the AUTO button.
- View the displayed waveform, as shown in Figure 2.

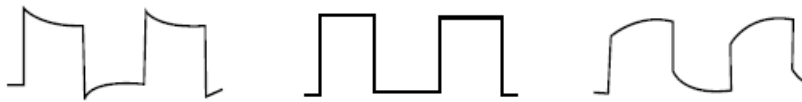

Excessive Compensation Correct Compensation Insufficient Compensation

Figure 2 Compensating Calibration of Probe

- If the displayed waveform looks like the above “Insufficient Compensation” or “Excessive Compensation”, use a non-metallic screwdriver to adjust the probe's variable capacitance until the display matches the “Correct Compensation” waveform.
- **Warning:** To avoid electric shock when using the probe to measure high voltage, please ensure that the probe insulation is in good condition and avoid physical contact with any metallic part of the probe.

Front Panel

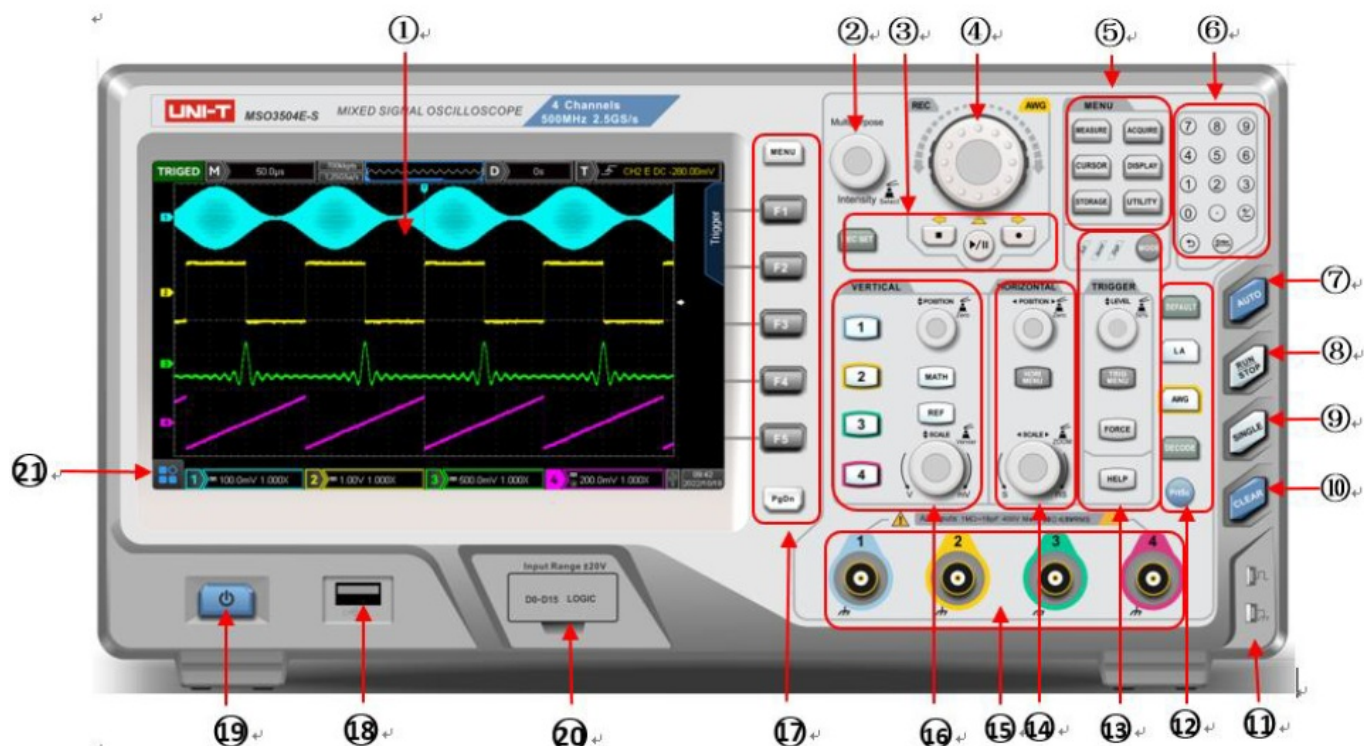


Figure 3 Front Panel

Table 1 Front Panel

No.	Description	No.	Description
1	Screen display area	12	Factory setting, LA, AWG, protocol decoding
2	Multipurpose knob	13	Trigger control (TRIGGER)
3	Recording waveform	14	Horizontal control (HORIZONTAL)
4	Jog dial knob	15	Analog channel input port
5	Function menu	16	Vertical control (VERTICAL)
6	Numeric keypad	17	Menu control soft key
7	Automatic control key	18	USB HOST interface
8	Run/Stop control key	19	Power supply soft key
9	Single trigger control key	20	Digital channel input port
10	Clear all control key	21	HOME menu
11	Compensating signal connector and ground terminal		

Rear Panel

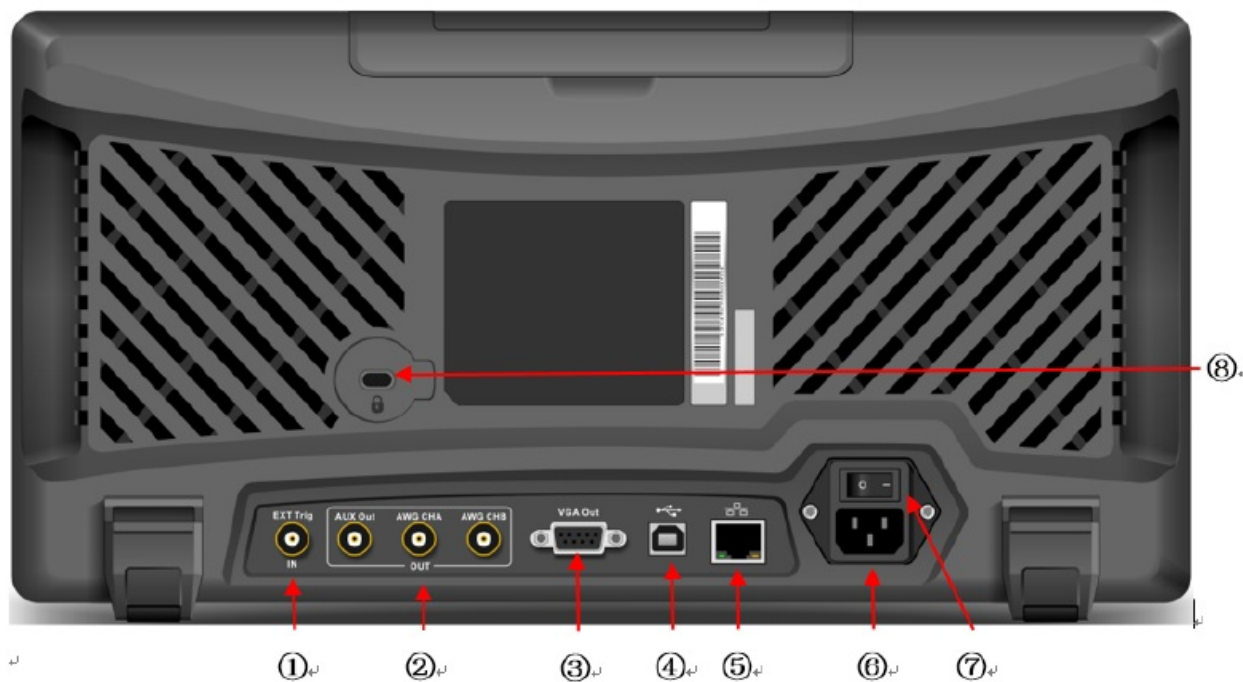


Figure 4 Rear Panel

Table 2 Rear Panel

No.	Description	No.	Description
1	EXT Trig port	5	LAN
2	AUX Out and arbitrary waveform signal output	6	AC Power Input Socket
3	VIDEO Out	7	Power Switch
4	USB Device port	8	Safety Lock

User Interface

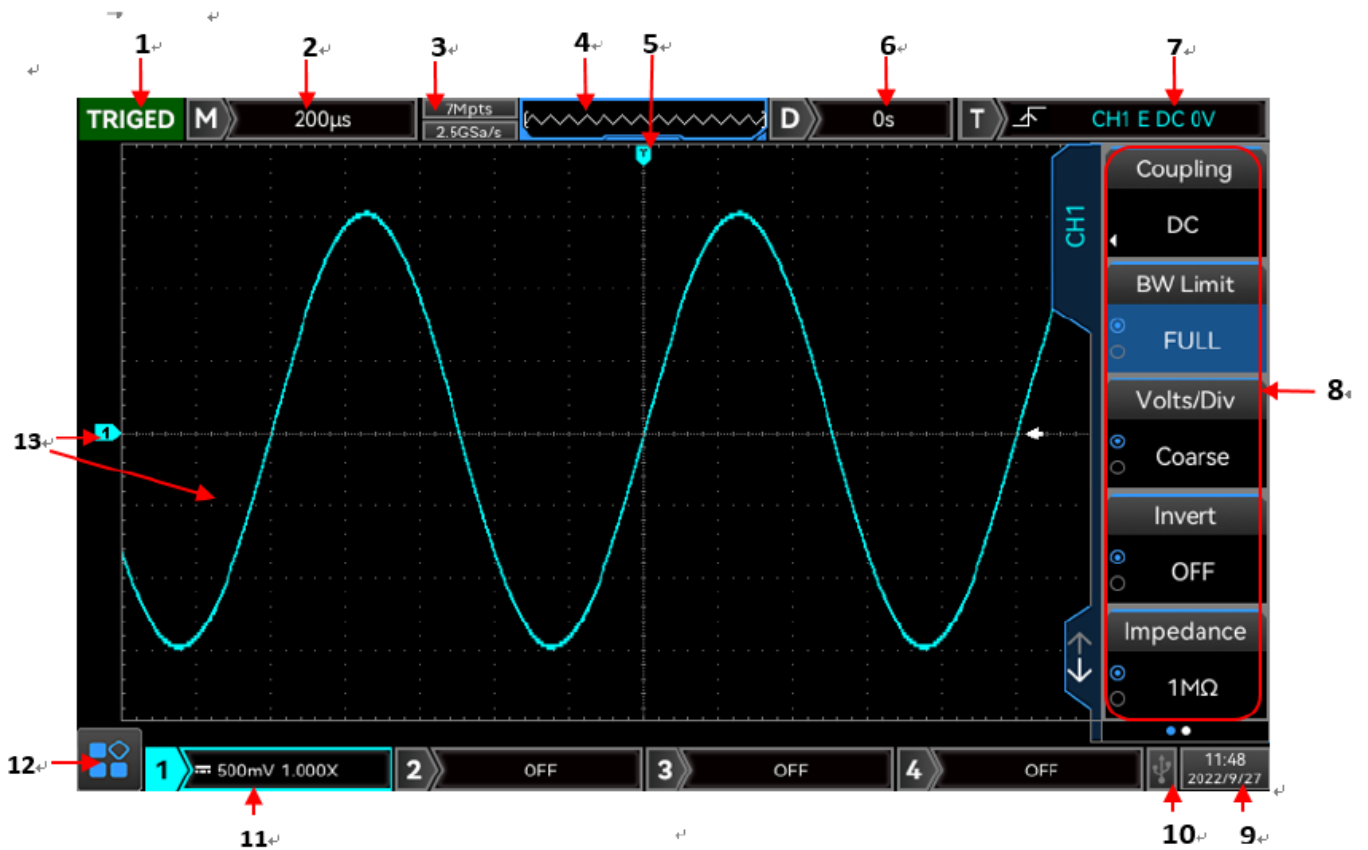


Figure 5 User Interface

Table 3 User Interface

No.	Description	No.	Description
1	Trigger status identification	9	System time
2	Time base scale	10	USB DEVICE icon
3	Sampling rate/storage depth	11	CH4 state icon
4	Waveform indicator	12	CH3 state icon
5	Waveform trigger position	13	CH2 state icon
6	Horizontal displacement	14	CH1 state icon
7	Trigger status	15	HOME menu
8	Operation menu	16	Analog channel icon and waveform

Touch Screen

- MSO/UPO3000E series provides an 8-inch super-capacitive touch screen, multiple-point touch control, and gesture control.
- MSO/UPO3000E has an easy operating system with flexible and highly sensitive touchscreen features for great waveform display and excellent user experience.
- Touch control functions include tap, squeeze, drag, and drawing rectangle.
- **Hint:** The menu displayed on the screen of the oscilloscope can all use the touch control function.

- Tap
- Squeeze
- Drag
- Drawing Rectangle
- Touch Shortcut Operating

Tap

- Use one finger to slightly tap an icon or word on the screen as shown in Figure 7.

Tap can be used for:

- Tap the menu displayed on the screen and then set it up.
- Tap the function guide icon on the left corner of the screen to enable it.
- Tap to pop out the numeric keypad to set parameters.
- Tap the virtual keyboard to set the label and file name.
- Tap the message to pop out the close button on the right corner to close it.
- Tap other window displayed on the screen to setup



Figure 7 Touch Gesture

Squeeze

- Squeeze two fingers together or separate. Squeeze gestures can zoom out or zoom in the waveform. If the waveform needs to zoom out, squeeze two fingers together and then slide away;
- If the waveform needs to zoom out, separate two fingers and then squeeze two fingers together as shown in Figure 8.

Squeeze gesture can be used for:

- Adjusting the horizontal time base of the waveform in the horizontal direction.
- Adjusting the vertical scale of the waveform in the vertical direction.



Figure 8 Squeeze Gesture

Drag

- Use one finger to press and drag the selected item to the aimed position as shown in Figure 9.

Drag gestures can be used for:

- Drag waveform to change waveform displacement or offset.
- Drag window control to change window position (such as a numeric keyboard).
- Drag the cursor to change the cursor position.


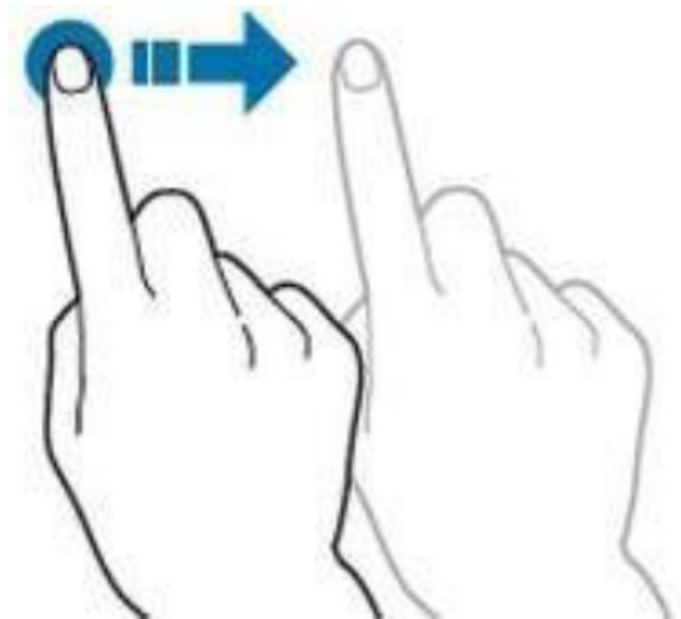



Figure 9 Drag Gesture

Drawing Rectangle

- Open the function guide and tap the drawing rectangle icon to switch to drawing rectangle mode. Drag your finger on the screen to draw a rectangle as shown in Figures 10(a), and 10(b).
- Move your finger away from the screen, the menu displayed on the screen, and tap to select “Area A enable”, “Area B enable”, “Intersection”, “Non-intersecting”, and “Source”.
- Drag your finger on the screen from the bottom right up to the top left to draw the trigger area.

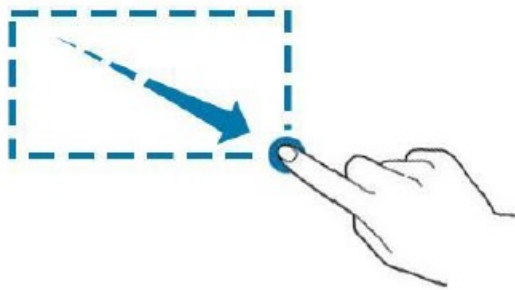



(a)

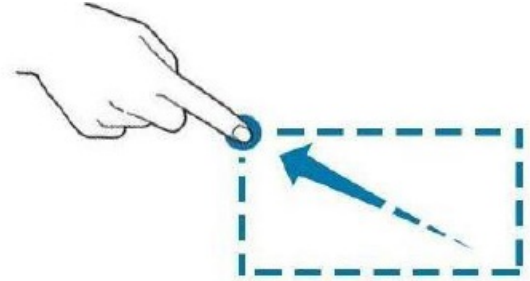


(b)

Figure 10 Drawing Rectangle Gesture


- **Select “Area A”:**
 - Drawing the area of trigger area A;
 - Open trigger area A;
 - Open the “trigger area” menu.
- **Select “Area B”:**
 - Drawing the area of trigger area B;
 - Open trigger area B;
 - Open the “trigger area” menu.
- **Hints:** Press the “drawing rectangle” icon to switch the drawing rectangle and operating waveform mode.
- Press the “drawing rectangle” icon, if the icon displays , which presents the drawing rectangle mode is opened;
- Press the “drawing rectangle” icon, if the icon displays , which presents the operating waveform mode opened.
- The operating waveform mode of the oscilloscope is enabled by default.

Touch Shortcut Operating

- Separate two fingers and meanwhile slide two fingers in one direction, this gesture can quickly turn on/off time measurement and voltage measurement cursor.
- **a. Time measurement cursor**
 - Slide down in vertical to directly turn on the time measurement cursor as shown in Figure 11 (a);
 - Slide up vertically to directly turn off the time measurement cursor;
- **b. Voltage measurement cursor**
 - Slide right in horizontally to directly turn on the voltage measurement cursor as shown in Figure 11 (b);
 - Slide left horizontally to directly turn off the voltage measurement cursor;
 - **Note:** Turn on/off the cursor requires that slide distance should be 3div.

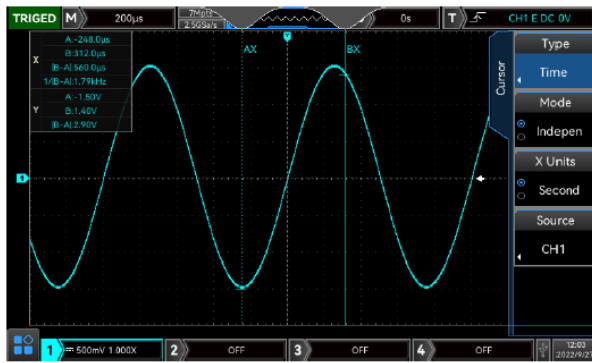


(a)

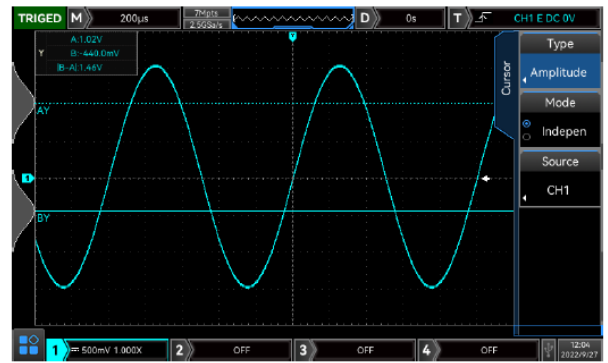

(b)

Figure 11

• c. Quick Guide

- When the oscilloscope is stopped, touch and drag the T identifier to the left or right around quickly or rotate the horizontal Position knob, a quick guide icon will display at the top of the screen, as shown in Figure 12.
- The quick guide icon can be closed when the oscilloscope is operating.
- In a quick guide, the oscilloscope will automatically adjust the delay on the horizontal direction at a constant speed according to the user-defined, it is convenient for user to observe the waveform.
- Press the guide key  on the front panel, it can adjust to play forward, stop, or backward.
- When guiding, pressing the Multipurpose knob can also stop the guide.

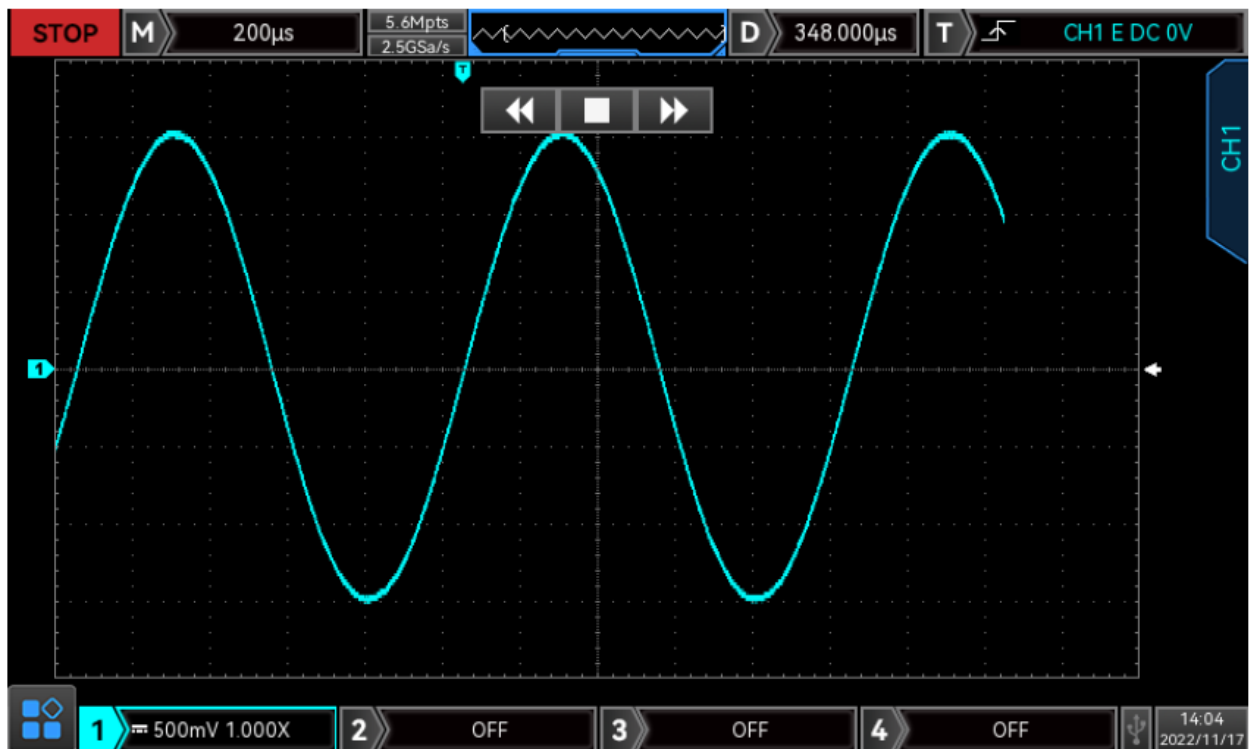











Figure 12

Operation Menu

- Press any soft key to activate the corresponding menu; the following icon may be displayed on the menu.
-  This symbol represents that the multipurpose knob on the front panel can be used to select and adjust parameters.

-  This symbol represents that there are several options.
-  This symbol represents that there is a next menu.
-  This symbol represents that the menu has two options.
-  This symbol represents that the multipurpose knob and jog dial on the front panel can be used to adjust parameters.
-  This symbol represents the numeric keypad on the front panel or touches to pop out the numeric keyboard to input content.
-  This symbol represents that the current page can be flipped up or down.
-  Circle numbers represent the total pages of the menu. A single page has no circle display, and two pages or more have a circle display. Use  the key to turn the page.

Remote Control

- MSO/UPO3000E series digital phosphor oscilloscope communicates with the computer through a USB interface and LAN interface to achieve remote control.
- Remote control is implemented based on the SCPI (Standard Commands for Programmable Instruments) command set.
- MSO/UPO3000E series digital phosphor oscilloscope supports three remote control modes:
 - a. User-defined programming
 - b. Use PC software (instrument manager)
 - c. Web Control

Troubleshooting

1. **When press the button, the oscilloscope is a blank screen.**
 - a. Check whether the power is correctly connected and whether the power supply is normal or not.
 - b. Check whether the power switch is turned on. The soft power switch button should light in green when the instrument is a normal boot. And it should have a relay sound.
 - c. If there is a relay sound, it indicates that the oscilloscope starts normally.
 - Try the following steps: press the DEFAULT key, then press F1, if the device returns to normal, it means the backlight brightness is set too low.
 - d. After completing the above steps, restart the oscilloscope.
 - e. If the instrument still cannot work, please contact UNI-T.
2. **After signal acquisition, a signal of the waveform does not appear on the screen**
 - a. Check whether the BNC port is connected properly.
 - b. Check whether the signal output channel has turned on.
 - c. Check whether the input signal channel has turned on.
 - d. Check whether has DC displacement in the signal of the information source.
 - e. Plug out the input signal, and check whether the baseline is in the screen range (if not, please perform auto-calibration.)
 - f. If the instrument still cannot work, please contact UNI-T.

3. The measured voltage amplitude value is 10 times larger or smaller than the actual value: Check the channel probe attenuation coefficient setting is consistent with the used probe attenuation rate.
4. **There is a waveform display but not stable**
 - a. Check the trigger source in the trigger menu and confirm that it matches the input channel of the actual signal.
 - b. Check the trigger type: the general signal should use the “Edge” trigger. The waveform can display stably only the proper trigger type is used.
 - c. Change the trigger coupling setting to high-frequency or low-frequency reject, to filter out the high-frequency or low-frequency noise that interferes with the trigger.
5. **No display after pressing the Run/Stop button**
 - a. Check whether the mode at the trigger panel (TRIGGER) is “Normal” or “Single” and whether the trigger level exceeds the waveform range.
 - b. If it exceeds set the trigger level to the middle or set the trigger mode to Auto.
 - c. Press the AUTO button could automatically finish the above setting.
6. **Waveform refresh is very slow:**
 - a. Check whether the acquisition method is average and the average times are large.
 - b. Check whether the storage depth is the maximum.
 - c. Check whether the trigger release time is large.
 - d. Check whether the trigger is normal and the current time base is slow.
 - e. All the preceding causes slow refreshing of waveforms. Users can restore the factory settings so that the waveforms can be refreshed normally.

Appendix Contact Us

- If the use of this product has caused any inconvenience, if you are in mainland China, you can contact UNI-T company directly.
- Service support: 8 am to 5.30 pm (UTC+8), Monday to Friday or via email. Our email address is infosh@uni-trend.com.cn
- For product support outside mainland China, please contact your local UNI-T distributor or sales center.
- Many UNI-T products have the option of extending the warranty and calibration period, please contact your local UNI-T dealer or sales center.
- To obtain the address list of our service centers, please visit our official website <http://www.uni-trend.com>
- Test Equipment Depot – 8005178431 – TestEquipmentDepot.com

Copyright Information

- Uni-Trend Technology (China) Co., Ltd. All rights reserved.

Trademark Information

- UNI-T is the registered trademark of Uni-Trend Technology (China) Co., Ltd.


Document Version

- MSO/UPO300020221130-V1.00

Statement

- UNI-T products are protected by patent rights in China and foreign countries, including issued and pending patents.
- UNI-T reserves the rights to any product specification and pricing changes.
- UNI-T reserves all rights. Licensed software products are properties of Uni-Trend and its subsidiaries or suppliers, which are protected by national copyright laws and international treaty provisions.
- Information in this manual supersedes all previously published versions.

Documents / Resources

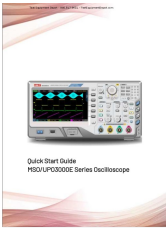	<p>UNI-T MSO-UPO3000E Series Digital Oscilloscope [pdf] User Guide MSO-UPO3000E Series, MSO-UPO3000E Series Digital Oscilloscope, Digital Oscilloscope, Oscilloscope</p>
---	--

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.