



UNI-T UT285C Power Quality Analyzer User Manual

[Home](#) » [UNI-T](#) » UNI-T UT285C Power Quality Analyzer User Manual 

UNI-T®

UT285C



P/N:110401110254X 2021/07/06 REV.0
Power Quality Analyzer
Operating Manual

Contents

1	UT285C Power Quality Analyzer
2	SUMMARY
3	PACKING
4	PRESENTATION
5	USE
5.1	Start-up
5.2	Configuration
5.3	Installation of leads
5.4	Waveform capture
5.5	Display of harmonics
5.6	Waveform measurements
5.7	Alarm recording
5.8	Trend recording
5.9	Energy measurements
5.10	Transfer of data to the PC
5.11	Deleting data
5.12	Turning off
5.13	Power supply
6	CONFIGURATION KEY
6.1	Available sub-menus
6.2	Display language
6.3	Date/Time
6.4	Display
6.5	Calculation methods
6.6	Connection
6.7	Sensors and ratios
6.8	Transient mode
6.9	Trend mode
6.10	Alarm mode
6.11	Erase memory
6.12	About
7	WAVEFORM CAPTURE KEY
7.1	Available sub-modes
7.2	Transient mode
8	HARMONICS MODE
9	WAVEFORM KEY
10	ALARM MODE KEY
11	TREND MODE KEY
12	POWER AND ENERGY KEY
13	SCREEN SNAPSHOT KEY
14	HELP KEY
15	DATA UPLOADED TO THE COMPUTER
16	GENERAL SPECIFICATIONS
17	FUNCTIONAL CHARACTERISTICS
18	APPENDICES
19	MAINTENANCE
20	Documents / Resources
21	Related Posts



UT285C Power Quality Analyzer



Warning

Thank you for purchasing our **UT285C Power Quality Analyzer**, in order to better use this product, be sure to:
–To read this user manual in detail.

–To abide by the safety regulations and precautions strictly.

- Failure to comply with these precautions may result in an electric shock, explosion, or fire.
- Under any circumstance, it shall pay special attention to the safety of the use of this device.
- Pay attention to words and symbols that stick on the panel and back of the device.
- This measuring device is only to be used, disassembled, and repaired by qualified personnel with authorization.
- When it may cause a hazard by continuous use for the reason of the device itself, it shall immediately stop using it and deposit it at once, leaving it for disposal by an authorized agency.
- For the risk of danger icon in the manual ““, users must perform safe operations strictly in compliance with the manual content.
- The user must strictly follow the instructions preceded by ““the danger symbol on the instrument and manual.
- When removing and replacing the battery and/or the SD Card, make sure that the device is disconnected and off.
- The current clamp must be correspondingly connected with the device, if not the test error may increase.
- The device must not be used if the “battery/SD Card” compartment cover is missing, damaged, or incorrectly fitted.
- The safety of any system incorporating this instrument is the responsibility of the system assembler.
- For your safety, use only the compatible leads and accessories delivered with the instrument, which comply with IEC standard 61010-031 (2002). When sensors or accessories having a lower voltage rating and/or category are connected to the instrument, the lower voltage and/or category applies to the system so constituted.
- Before use, check that the leads, enclosures, and accessories are in perfect condition. Any lead, sensor, or accessory of which the insulation is damaged (even partially) must be repaired or scrapped.
- Comply with the environmental conditions (see 15.3.1)
- We recommend using Personal Protection Equipment where required.
- This device may be used on category IV installations for voltages that do not exceed 600 V (AC or DC) with respect to earth (as per IEC standard 61010-1), or on category III installations for voltages that do not exceed 1000 V. Never use it on networks of which the voltage or category exceeds those mentioned.
- Use only the mains power adaptor and battery pack supplied by the manufacturer. They include specific safety features.
- Do not reach past the physical guards on the accessories and sensors. Keep your hands away from unused terminals.
- Some current sensors must not be placed on or removed from bare conductors at hazardous voltage.

Connection procedure:

- Switch the instrument on.
- Configure the device for the measurement to be made and the type of network concerned.
- Connect the leads and current sensors to the unit.
- Connect the earth and/or neutral lead to the network earth and/or neutral and connect the corresponding current sensor.

- Connect the L1 phase lead to the network L1 phase and connect the corresponding current sensor. If applicable, repeat the procedure for phases L2, and L3.

Note: complying with this procedure reduces connection errors to a minimum and avoids wasting time.

Disconnection procedures:

- Proceed in the reverse of the order of connection, always finishing by disconnecting the neutral (when distributed). Disconnect the leads and switch the device off.
- Charging the battery and uploading the test data when necessary.
USB is used for data transmission, the battery can be charged by the fringe special adapter.

Homonymous ends of the current clamp

- The side of the current clamp marks L1, L2, L3, N/D or has a red dot is the current noninverting input, that is the homonymous end.
- The side of 008B current clamp has a red dot is the current noninverting input, which is the homonymous end.
- The side of 040B, 068B current clamp without screws is the current noninverting input, which is the homonymous end.

SUMMARY

1.1. Introduction

UT285C Power Quality Analyzer is a comprehensive test instrument carefully developed by our company and specially designed for field tests of three phases, multi-functional and intelligent, concise man-machine operation. It is easy to use, large LCD screen display, high resolution, interface in both Chinese and English, shock-proof shell structure, and so on. Can simultaneously measure the 4-channel current (ABC three-phase and neutral wire current), 4-channel voltage (ABC three-phase voltage and neutral line voltage to ground), the peak value of current voltage, maximum/minimum value over a period, three-phase imbalance factor, short-time voltage flicker, transformer K factor, active power, reactive power, apparent power, power factor and displacement power factor, active power, reactive power, apparent power, total harmonic distortion and harmonic, etc; Display real-time waveform, harmonic ratio bar charts of current-voltage; Dynamically capture the instantaneous change of voltage current, monitoring starting current, monitoring the power parameters and generate the alarm list, generate the trend chart for a long time record test data.

In the current power applications, more and more large power equipment, and power grid fault have become more and more complex, with the development of the industry, it put forward high requests for more and more quality than electric energy. We provide this power quality analyzer for that, which you can troubleshoot complex power systems more quickly and accurately, and monitor and maintenance of power quality parameters more comprehensively and systemic.

UT285C Power quality analyzer adopts DSP + ARM double processor architecture, DSP is used for data collection and the processing of algorithm, the ARM is used for the communication protocol and the man-machine interface processing; Analog signal acquisition is by 2 pieces AD7655 of ADI company. The resolution for AD7655 is 16 bit and it is 4-channel synchronous sampling. The highest sampling rate can reach 1 MSPS, to ensure the accuracy of the channel and the information integrity, and wouldn't miss any transient changes in the grid, can be more accurate to detect the transient waveform rising and dropping drastically, and waveform instantaneous interrupt; DSP working frequency is over 200 MHZ, to be able to timely monitoring of the power grid and dynamically adjust the sampling frequency to realize synchronization of power frequency and sampling frequency; Using a 5.6 -inch LCD color screen display, a resolution of 640 dots x 480 dots, with different display color difference between the parameters of phase, waveform, vector diagram, harmonic ratio, the user can be more efficient and more intuitive understand the state of power grid parameters. Built-in flash memory can store 60 groups of screenshots at the same time, 150 groups of capture transient voltage/current waveform figures, and 12800 groups of alarm lists. Starting current detection model can continuously capture starting current waveform

for 100 s. Built-in 2G memory card to store the trend curve record, simultaneously recording 20 parameters (can choose according to need) collect data once every five seconds, trend curve records can be stored for 300 days.

Power Quality Analyzer also named: Intelligent Three Phase Power Quality Analyzer, Multifunctional Power Quality Analyzer, which is simultaneous with the functions of harmonic Analyzer, phase volt-ampere meter, and electric parameter tester. It applies to the electricity industry, petrochemical, metallurgy, railway, mining enterprises, scientific research institution, and metrological departments. Especially suitable for comprehensive analysis and diagnosis of all the voltage, current, power, power, harmonic, and phase electric parameters.

1.2. Function

1.2.1. Basic function

Waveform real-time display (4 channels voltage/4 channels current).

- True RMS values of voltages and currents.
- The DC components of voltages.
- Peak current and voltage values.
- Minimum and maximum half-cycle RMS current and voltage values.
- Phasor diagram display.
- Measurement of each harmonic up to order 50.
- Bar charts show harmonic ratios of the current and voltage of each phase.
- Total harmonic distortion (THD).
- Active, reactive, apparent power, by phase, and cumulative.
- Active, reactive, apparent energy, by phase, and cumulative.
- Transformer K factor.
- Power factors (PF) and displacement factors (PDF or COS).
- Short-term voltage flicker (PST).
- Three-phase unbalance(current and voltage).

1.2.2. Capture function

• Transient capture function

Monitoring instantaneous change of power grid voltage current parameters, including the voltage current fluctuations, voltage current surge, sag and short supply interruption, temporary overvoltage, impact current, and Current-voltage instantaneous distortion. Instruments can store 150 sets of transient waveforms at the same time.

• Starting current monitoring

Monitoring the surge current of the line and the startup current when electrical equipment is starting helps to correctly design capacity. Can display the RMS rising/falling curve In the startup process, the envelope curve of startup current, the waveform of 4 channels current and 4 channels voltage. Recording about 100s after the trigger, storage of the current /voltage instantaneous, and waveform curve of each cycle in 100s.

• Trend chart recording and storing function

Store all the test parameters of basic test functions (Urms, Utd, Ucf, Uunb, Hz, Vrms, Vthd, Vcf, Vunb, PST, Arms, Athd, Acf, Aunb, KF, W, VAR, VA, PF, COS, TAN),50 voltage harmonics, 50 current harmonics. And create the trend curve. Record data for a long time according to need(concurrent selection of 20 parameters to record data once every five seconds, you can record about 300 days.).

- **Alarm function**

Set the limit values according to need, monitoring the values whether overshoot, if overshoot will generate an alarm log, such as voltage, current, unbalance, harmonic ratio, frequency, active power, and total harmonic distortion. You can configure 40 different alarms, each group can set different monitoring parameters (including 50 harmonics, a total of 123 different parameters) and limit values, and also can set the shortest time of overshoot. The log can contain up to 12,800 alarms.

- **Snapshot function**

Any screen can be saved (screen snapshot), at the same time automatically recording the time and test mode. Such as can save voltage and current waveform, harmonic bar charts, phasor diagrams, etc. It can save a maximum of 60 screen snapshots.

1.2.3. Other functions

- **Communication function**

Communicate with computer via USB; Monitoring software can display the waveform of the power quality analyzer, read the transient waveform, trend chart recording, alarm log, screenshots, and display on the computer.

- **Setting function**

The user can configuration of the time and date, configuration of the screen contrast and brightness, definition of each phase curve color'.

Choice of type of connection to the network. Configuration of the type of current sensors and voltage ratios.

Select the Chinese menu or English menu. Help menu in Chinese/English Every stage of operation can press the "help" key to obtain relevant information.

1.3. Technical specification

1.3.1. Base condition and working condition

Influence factor	Test item	Base condition	Working condition
Environment temperature	All parameters	(23±2)°C	-10°C— 40°C
Relative humidity	All parameters	40%' 60%	<80%
Phase-to-neutral voltage	All parameters	(100±1%)V	1.0V— 1000V
phase-to-phase voltage	True RMS phase-to-phase voltage	(200±1%)V	1.0V— 2000V
Current	True RMS current	(5±1%)A	10mA— 1000A
Network frequency	All parameters	50Hz±0.1Hz	40Hz— 70Hz
Phase shift	Active power and active energy	Cos4=1	Cosh: 0.2— 1.0
	Reactive power and reactive energy	Sin4=1	Sin.: 0.2— 1.0
Harmonic	All parameters	<0.1%	0.0%— 100%
Voltage unbalance	All parameters	<10%	0.0%— 100%
The working voltage of the device	All parameters	DC9.8V±0.1V	DC9.5V— 10.5V
External electric field, magnetic field	All parameters	Should be avoided	
Test position	Measured related parameters of the current	Tested wire at the center of clamp.	

1.3.2. General specification

Power supply	Rechargeable lithium-ion battery packs 9.6V, backup charger.
Battery indicator	The battery symbol shows dump energy. When the voltage is too low, automatic shutdown after 1 minute.
Power consumption	Current consumption of normal test 490 mA, continuous working for 8 hours.

Display mode	LCD color screen, 640dotsx480dots, 5.6 inches, display domain: 116mmx88mm.
Size of clamp	068B circle current clamp: 68mmx68mm.
Instrument dimensions	LxWxH: 240mmx170mmx68 mm.
Number of channels	4u/41.
Phase-to phase voltage	1.0V-2000V.
Phase-to-neutral voltage	1.0V-1000V.
Current	068B current clamp: 1.0A-1000A;
Frequency	40Hz-70Hz.
Parameters of electricity	W, VA, Var, PF, DPF, cos ϕ , tan ϕ .
Energy parameters	Wh, Varh, Vah.
Harmonic	Order 0-50.
Total harmonic distortion	Order 0-50, for each phase.
Expert mode	Yes.
Number of Transient records	150 sets.
Voltage flicker	Yes.
Starting current mode	Yes, 100 seconds.
3 phases unbalance	Yes.
Record	300 days(simultaneous recording 20 parameters, recording one point every 5 seconds).
Min/Max recorded value	Measurement of maximum and minimum values over a period of time.
Alarm	40 different types of parameter selections, and 12,800 sets of alarm logs.
Peak	Yes.
Phasor diagram display	Automatically.
Capacity of snapshots	60.
Menu language	English/Chinese.
Communication	USB.
	When an alarming campaign is initiated or a search for transients, an inrush current

Automatic switching off	a capture or a trend recording is pending or in progress, the device is not automatically switching off.
	In another test mode, 15 minutes without keystrokes, automatic shutdown after prompt 1 minute.
Backlight function	Yes, suitable for use at night and in dark places.
Weight	Host: 1.6kg (with battery).
	068B circle current clamp: 510gx4;
	Test wires and power adapter: 900g;
Length of voltage test wire	3m.
Length of current sensor wire	2m.
Working temperature and humidity	-10°C-40°C; below 80%Rh.
Storage temperature and humidity	-10°C-60°C; below 70%Rh.
Input impedance	The input impedance of test voltage: 1M Ω .
Withstand voltage	Withstand 3700V/50Hz sinusoidal AC voltage for 1 minute between instrument wiring and shell.
Insulation	Between instrument wiring and shell nOMO.
Structure	Double insulation, with insulation vibration-proof sheath.
Safely rules	IEC 61010 1000V Cat III / 600V CAT IV, IEC61010-031, IEC61326, Pollution degree: 2.

1.3.3. Instrument precision (excluding the current sensor)

Respectively introduce the following data (on the basis of base conditions and the ideal current sensors, perfectly linear, no phase shift)

Measurement	Range	Display resolution	The maximum error in the range of the reference
Frequency	40Hz- 70Hz	0.01Hz	$\pm(0.03)\text{Hz}$
True RMS phase-to-neutral voltage	1.0r 1000V	Min resolution 0.1V	$\pm(0.5\%+\text{Scigt})$

True RMS phase-to-phase voltage	1.0V~ 2000V	Min resolution 0.1V	$\pm(0.5\%+5\text{dgt})$
DC voltage	1.0r 1000V	Min resolution 0.1V	$\pm(1.0\%+5\text{dgt})$
True RMS current	10mA~ 1000A	Min resolution 1mA	$\pm(0.5\%-E5\text{dgt})$
Peak of phase-to-neutral voltage	1.0r 1414V	Min resolution 0.1V	$\pm(1.0\%+5\text{dgt})$
Peak of phase-to-phase voltage current peak Peak factor	1.0r 2828V 10mA~ 1414A 1.00~ 3.99	Min resolution 0.1V Min resolution 1mA 0.01	$\pm(1.0\%-F5\text{dgt})$ $\pm(1.0\%+S\text{clgt})$ $\pm(1\%-E2\text{dgt})$
	4.00~9.99	0.01	$\pm(5\%+2\text{dgt})$
Active power	0.000W~ 9999.9kW	Min resolution 0.001W	$\pm(1\%+3\text{dgt})$ Cos00.8
			$\pm(1.5\%+10\text{dgt})$ 0.25Cos4 \geq 0.8
Reactive power, inductive or capacitive Apparent power Power factor	0.000VAR~ 9999.9 kVAR 0 .000VA~ 9999.9kVA -1.000~ 1.000	Min resolution 0.001VAR Min resolution 0.001VA 0.001	$\pm(1\%+3\text{dgt})$ Sing) \geq 0.5
			$\pm(1.5\%+10\text{dgt})$ 0.25Sing \geq 0.5 $\pm(1\%+3\text{dgt})$ $\pm(1.5\%+3\text{dgt})$ Cos00.S
			$\pm(1.5\%+10\text{dgt})$ 0.2 \leq Cos \varnothing \angle 0.5
Active energy	0.000Wh~ 9999.9MWh	Min resolution 0.001Wh	$\pm(1\%+3\text{dgt})$

			Coscka0.8
			$\pm(1.5\%+10\text{dgt})$ $0.25\text{Cos}4i<0.8$
Reactive energy, inductive or capacitive	0.000VARh~ 9999.9MV ARh	Min resolution 0.001VARh	$\pm(1\%+3\text{dgt})$ Sincka0.5
Apparent energy	0.000VAh~ 9999.9MVAh	Min resolution 0.001VAh	$\pm(1.5\%+10\text{dgt})$ $ 0.25\text{Sin}4'<0.$ $\pm(1\%+3\text{dgt})$
Phase angle Tan, (VAa5OVA)	-179°~ 180° -32.76~ 32.76	1° Min resolution 0.001	$\pm(2^\circ)$ 1): $\pm(1^\circ)$
The phase shift of the power factor (PDF)	-1.000~ 1.000	0.001	1): $\pm(1^\circ)$
Harmonic ratio (order 1 to 50) (Vrms>50V) Harmonic angle (Vrms>50V)	0.0%~ 99.9% -179°~ 180°	0.1% 1°	$\pm(1\%+5\text{dgt})$ $\pm(3^\circ)$ harmonics of order 1 to 25 $\pm(10^\circ)$ harmonics of order 26 to 50
Total harmonic ratio (THD or THD-F)550 Distortion factor (DF or THD-R)550 Transformer K factor 3 phases unbalance	0.0%~ 99.9% 0.0%~ 99.9% 1.00~ 99.99 0.0%~ 100%	0.1% 0.1% 0.01 0.1%	$\pm(1\%+5\text{dgt})$ $\pm(1\%+10\text{dgt})$ $\pm(5\%)$ $\pm(1\%)$

Type of current sensor	True RMS current	current	Max error of phase angleφ
068B current clamp	1.0A~ 9.9A	$\pm(2\%+3\text{dgt})$	$\pm(3^\circ)$
	10.0A~ 1000A	$\pm(2\%+3\text{dgt})$	$\pm(2^\circ)$

Note: current clamp and instruments must be connected to the corresponding, and cannot be inserted opposite.

★ The side of the current clamp marks L1, L2, L3, N/D or has a red dot is the current noninverting input, that is the homonymous end.

★ The side of 040B, 068B current clamp without screws is the current noninverting input, that is homonymous end

PACKING

2.1. Standard configuration

No.	Designation	Quantity
1	Instrument host.	1
2	Instrument knapsack.	1
3	Current sensors	4
5	Testing wires.	5 (yellow, green, red, blue, black)
6	Crocodile clips.	5
7	Test probe.	5
8	Dedicated power adapter.	1
9	USB data cord.	1
10	Software CD.	1
11	Lithium battery pack.	1 (Built into the instrument)
12	2GB memory.	1 (Plug in the instrument)
13	Manual, warranty card, certification.	1

2.2. Weight

No.	Designation	Weight
1	Instrument host.	1.6Kg (with battery).
2	068B circle current clamp.	510g×4.
3	Test wires and power adapter.	900g.


PRESENTATION

3.1. Overall view




Figure 3-1: Overall view of the device

3.2. On/Off key

Pressing  starts the device.

The device can be powered by the battery alone (if it is adequately charged) or by a specific mains power supply unit(if, in this case, the battery is also present, the power supply unit charge it).

Pressing the  key again turns the device off. Confirmation is required to turn it off if the device is in one of its recording modes or is searching for transients, alarm, and/or inrush current capture.

3.3. Display screen

3.3.1. Presentation

This backlit 640×480 pixel graphic liquid crystal screen displays all measurements with their curves, the parameters of the unit, the curves selected, the instantaneous values of the signals, and the type of measurement selected. When the device is powered up, it automatically displays the Waveform screen. Information about this screen can be found in §8.

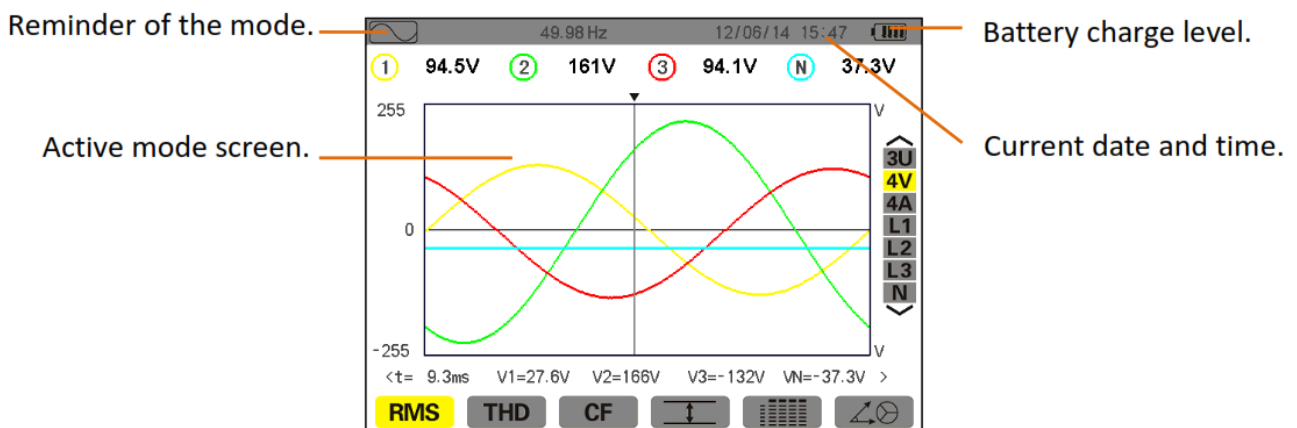


Figure 3-2: Example of a display screen

Automatic switching off:

When an alarming campaign is initiated or a search for transients, an inrush current capture, or a trend recording is pending or in progress, the device is not automatically switched off. In another test mode, 15 minutes without keystrokes, automatic switching off after prompt 1 minute.

3.3.2. Icons

The display uses the following icons

Icon	Designation	Icons	Designation
V	Phase-to-neutral voltage.		Display of voltage and current RMS values and their extrema
U	Phase-to-phase voltage.		Simultaneous display of all voltage and current measurements
A	Current.		Display of voltage and current vector diagram.
VA	Apparent power.		Energies consumed.
	Zoom in.		Energies generated.
	Zoom out.		Page screen 1 of the help function.
▼	The X-axis cursor indicator.		Page screen 2 of the help function.
PF...	Display of PF, PDF, Tanφ.		Page screen 3 of the help function.
W...	Display of powers and energies values.		The monitoring parameter of group 1 is in the trend mode.

	Start Record.		The monitoring parameter of group 2 in the trend
	Recording list.		The monitoring parameter of group 3 in the trend
OK	Validation prompt.		The monitoring parameter of group 4 in the trend
	Shut down.		Previous page screen.
	Delete.		Next page screen.







3.4. Keypad keys

3.4.1. Function keys(yellow keys)

These 6 keys **F1** , **F2** , **F3** , **F4** , **F5** , **F6** activate the function or tool represented by the corresponding icon on the screen.




3.4.2. Navigation keys




A block of 4 arrow keys, a confirm key, and a return key are used for navigation in the menus

Item	Function
	Up direction or zoom in key.
	Down the direction or zoom out the key.
	Right direction or next page key.
	Left direction or previous page key.
	Confirms the selection.
	Return key.

3.4.3. Mode keys




These give access to specific modes

Item	Function	Voir
	Waveform mode: the display of voltage and current waveforms, maxima and minima, extreme value, summary tables, voltage, and current vector diagrams	§ 8
	Harmonic mode: the display of voltage, current, and apparent power harmonic ratios (displayed in a graph), harmonic RMS value, and phase shift with respect to the fundamental	§ 7
	Power and energy mode: displays the active power, the reactive power, the apparent power, power factor, phase shift of power factor, etc	§ 11

	Trend mode: recording of the parameters selected in the Configuration menu.	§ 10
	Alarm mode: listing of recorded alarms exceeding the thresholds programmed in the configuration; recording of network blackouts with half-cycle resolution (Vrms, Arms, Arms), determination of energy consumption overshoots, monitoring of compliance with a power supply quality contract	§ 9
	Capture mode: monitoring the instantaneous change of power grid voltage current parameters, including the voltage current fluctuations, voltage current surge, sag and short supply interruption, temporary overvoltage, impact current, and current-voltage instantaneous distortion	§ 6

3.4.4. Other keys

The other keys have the following functions

Item	Function	Voi
	Configuration key: device configuration and capture mode parameter configuration, can setting date and time, display, type of connection to the network, voltage ratio, current sensor select, choice of thresholds to be detected, the definition of alarms to be detected, choice of parameters to be detected	§ ₅
	Snapshot mode: a snapshot of the current screen and retrieval of screens already stored	§ ₁₂
	Help key: provides information about the functions and the symbols used for the current display mode	§ ₁₃

3.5. Connectors

3.5.1. Measurement input connectors

Located on the top of the device, these connectors are distributed as follows

5 voltage input connectors: L1/A, L2/B, L3/C, E/GND, N/D.

Current input connectors for current sensors: L1, L2, L3, N.



Figure 3-3: Connectors on the top of device





3.5.2. Charging interface and USB interface

Must be used with a special power adapter and USB cable

3.6. Power supply

3.6.1. Indication of battery level

The battery icon in the top right corner of the screen shows the battery level. The number of bars is proportional to the charge level.

Icon	State of charge
	Battery fully charged.
	Low battery.
	Mobile bars: battery charging.
	The device is powered by mains and pre-charged.

When the battery level is too low, the following message is displayed: "Low battery, Instrument will soon turn OFF".

If you do not reconnect the device to the mains, it is switched off one minute after this message appears.

3.6.2. Battery life

Battery life is 8 hours when the battery delivered with the device is fully charged.

3.6.3. Recharging the battery

The battery is recharged by the main power unit provided, and connected to the device by the jack (Figure 3-3). Use only the main power unit provided with the instrument.

Charging a fully discharged battery takes about 5 hours. When the battery is recharged, the device continues to use mains power and does not discharge the battery.

3.6.4. The battery

The device is powered by a specific lithium battery (9.6V) having a nominal capacity of 4,500 mAh.

3.6.5. Mains operation

The battery is not essential when the unit is running on mains power. However, if mains power is cut off (there is no battery), during the recording process, for example, data may be lost.

3.7. The stand

A retractable stand (Figure 3-4) on the back of the instrument keeps the device at an angle of 60° from the horizontal



Figure 3-4: Battery compartment cover

3.8. Summary of functions

3.8.1. Measurement functions

- The RMS values of AC voltages up to 1000 V between terminals.
- The RMS values of AC currents up to 1000A (neutral included).
- Sustaining voltages and currents (neutral included).
- Minimum and maximum half-cycle RMS voltage and current.
- Peak voltages and currents (neutral included).
- Frequency of 50 Hz and 60 Hz networks.
- Current and voltage peak factor (excluding neutral).
- Calculation of the K factor (KF) (application to transformers when current harmonics are present).
- Current and voltage distortion factor (DF) (excluding neutral).
- Current and voltage total harmonic distortion (excluding neutral).
- Active, reactive (capacitive and inductive), apparent power of each phase (excluding neutral).
- Power factors (PF) and displacement power factors (PDF) (excluding neutral).
- Short-term flicker (PST) (excluding neutral).
- Active, reactive (capacitive and inductive), and apparent energy (excluding neutral).
- Current and voltage harmonics (excluding neutral) up to order 50: harmonic ratio, RMS value, minimum and

maximum, and sequence harmonics.

- The apparent power of each harmonic up to order 50: harmonic ratio, RMS value, minimum and maximum.
- The motor starting current and inrush currents

3.8.2. Main functions

- Display of waveforms (voltages and currents).
- Inrush Current function: displays parameters useful for the study of the starting of a motor.
 - ★ Instantaneous current at the instant designated by the cursor.
 - ★ Maximum instantaneous current (over the entire starting time).
 - ★ RMS value of the half-cycle of the current on which the cursor is positioned.
 - ★ Maximum half-cycle RMS current (over the entire starting time).
 - ★ Time at which starting the motor commenced.
- Screen captures (60 maximum).
- Transients function. Detection and recording of transients (up to 150) between the user-defined start and stop dates and times. Recording of 4 complete cycles (one before the triggering event and three after).
- Trend recording function (2GB memory with date-stamping and user-defined start and stop dates for recording, with a maximum of 100 recordings). Display, in bar chart or curve form, the means of many parameters vs. time, with or without minima and maxima.
- Alarm function. List of recorded alarms (up to 12,800) exceeding thresholds defined in the configuration menu. User-defined alarm monitoring starts and stops times. Display the alarm trigger channel, minimum and maximum values after the trigger, duration

3.8.3. Configuration function

- Date and time settings.
- Screen brightness and contrast settings.
- Choice of curve colors.
- Choice of reactive power and reactive energy calculation mode (with or without harmonics).
- Choice of connection (single-phase, split-phase, 3- or 4-wire three-phase, 5-wire three-phase).
- Choose current sensors and voltage ratio.
- Trigger threshold values setting (voltage and current).
- Monitoring parameters of trend diagram settings.
- Choice of alarm monitoring parameters.
- Erasure of data (total or partial).
- Display software and hardware version numbers.
- Choice of language (Chinese/English).

3.9. Abbreviations

Meanings of the symbols and abbreviations used

Symbol	Designation	Symbol	Designation
\approx	AC and DC components.	MAX	Maximum true RMS.
\sim	AC component only.	MIN	Minimum true RMS.
==	DC component only.	ms	Millisecond (unit).
Φ	Phase angle.	PEAK	Maximum (+) or minimum(-) voltage /current peak.
\exists	Inductive phase shift.	PF	Power factor.
\pm	Capacitive phase shift.	PST	Short-term flicker.
$^{\circ}$	Degree.	RMS	True RMS value (current or voltage).
-.+	Expert mode.	T	Time.
Σ	Sum of values.	Tan	Tangent.
L	Phase (line).	THE	Total harmonic distortion.
%	Percentage.	Ucf	phase-to-phase voltage crest factor.
A	Ampere.	Uh	phase-to-phase voltage is harmonic.
Act	Crest (peak) factor of current.	Terms	True RMS phase-to-phase voltage.


Ah	Current harmonic.	USD	Total phase-to-phase voltage harmonic distortion.
Aid	K Factor (for transformers).	Uub	phase-to-phase voltage unbalance (34').
Arms	True RMS current.	V	Phase-to-neutral voltage.
Add	Total harmonic distortion of current.	VA	Apparent power.
Aunt	Current unbalance (34').	Vah	Apparent energy.
AVG	Mean value.	VAR	Reactive power.
CF	Peak factor (current or voltage).	with	Reactive energy.
DC	DC component (current or voltage).	If	Voltage crest (peak) factor.
PDF	Displacement power factor.	Vrms	True RMS phase-to-neutral voltage.
Hz	Frequency of network studied.	Ltd	Total harmonic distortion of phase-to-neutral voltage.
KF	See Akf.	Vung	Phase-to-neutral voltage unbalance (34').
W	Active power.	Wh	Active energy.

USE

The device must be configured in accordance with §5 before any measurements are made.
The following precautions for use must be complied with:

- Do not connect to any voltage exceeding 1,000 Vrms with respect to earth.
- When connecting and disconnecting the battery, make sure that the measuring leads are disconnected and turned off.

Start-up

Press the  key on the keypad to start the device.
After about 3 seconds, the Waveform screen is displayed.

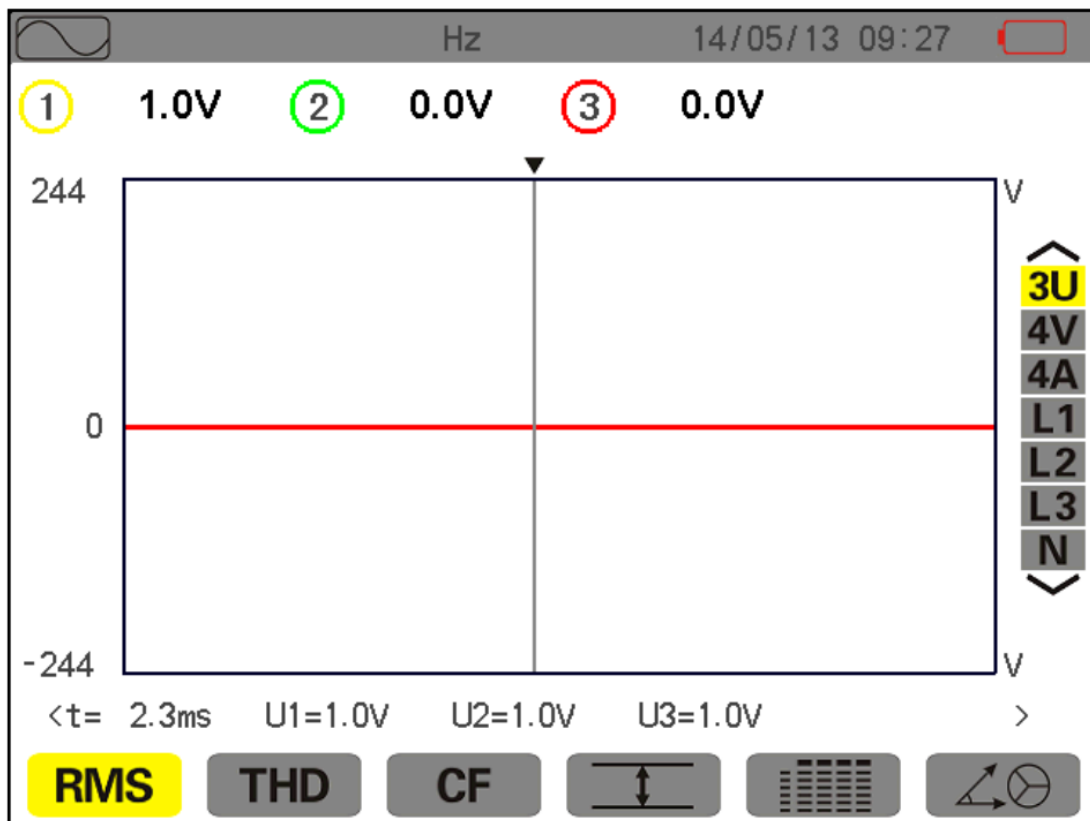





Figure 4-1: Waveform screen

The device is battery-powered only if the battery is adequately charged. If not, the alarm message “Low battery, the instrument will soon turn OFF” is displayed (see § 3.6). The device can be used with the mains power unit supplied with it connected to the jack; there is no need for the battery in this case.

Configuration

To configure the device, proceed as follows:

★ With the device on, press. The configuration screen appears.

★ Press  or  to select the parameter to be modified. Press  to enter the selected sub-menu.

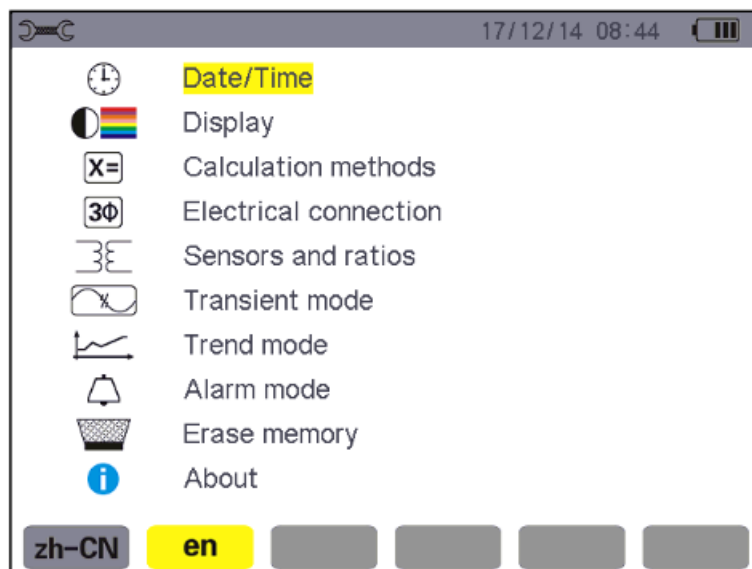


Figure 4-2: Configuration screen

Press or and or to browse and to confirm in the displayed sub-menu. See §5.3–§5.10 for details.

Note: The following points must be checked or adapted for each measurement:

Function	See
Define the parameters of the calculation methods. (reactive power/ reactive energy).	§5.5
Select the type of connection (single-phase to three-phase, five-wire).	§5.6
Programming of the voltage ratios according to the type of current sensor connected.	§5.7
Transient triggering levels (transients mode).	§5.8
Values to be recorded (trend mode).	§5.9
Definition of alarm thresholds.	§5.10

Press to return to the Configuration screen.

Installation of leads

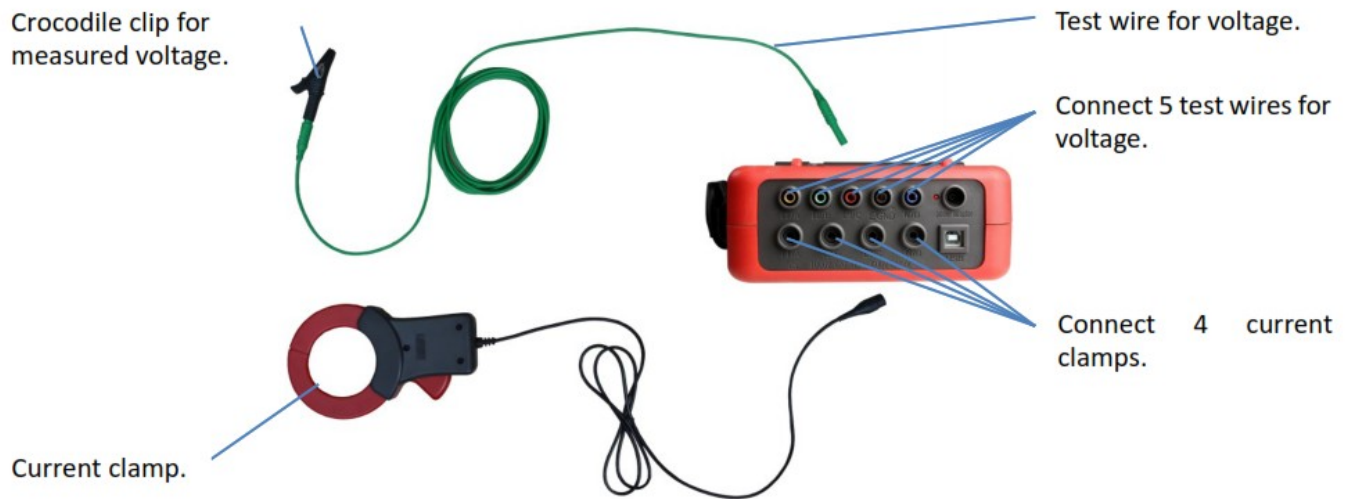


Figure 4-3 test connection on the top of device

Connect the measuring leads to the device as follows:

- Current measurement 4 current clamp corresponding connect to 4 channels current interfaces of L1/A, L2/B, L3/C, N/D. The current clamp muse has a corresponding connection to ensure the accuracy of measurement. Select the current clamp before measurement (see § 5.7).
- Voltage measurement: The 5 voltage test wires according to the color corresponding connect to 5 voltage input interfaces of L1/A, L2/B, L3/C, E/GND, and N/D. Set the voltage ratio before measurement. (see § 5.7). The measuring leads must be connected to the circuit to be studied as shown by the following diagrams.

Single-phase network

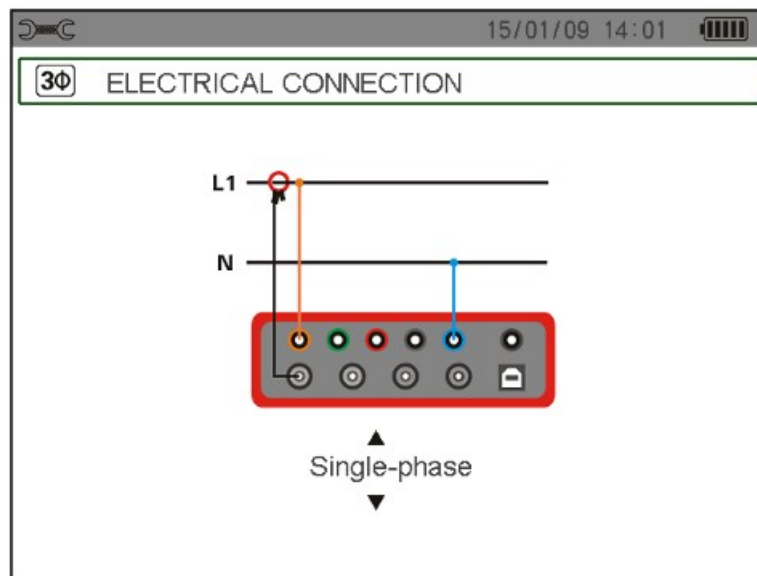


Figure 4-4: Single-phase connection

Split-phase network

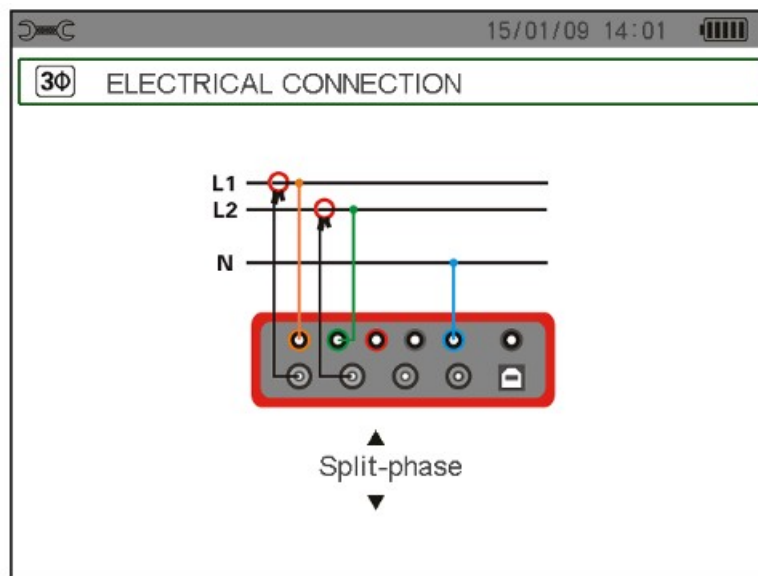


Figure 4-5: Split-phase connection

3- or 4-wire three-phase network

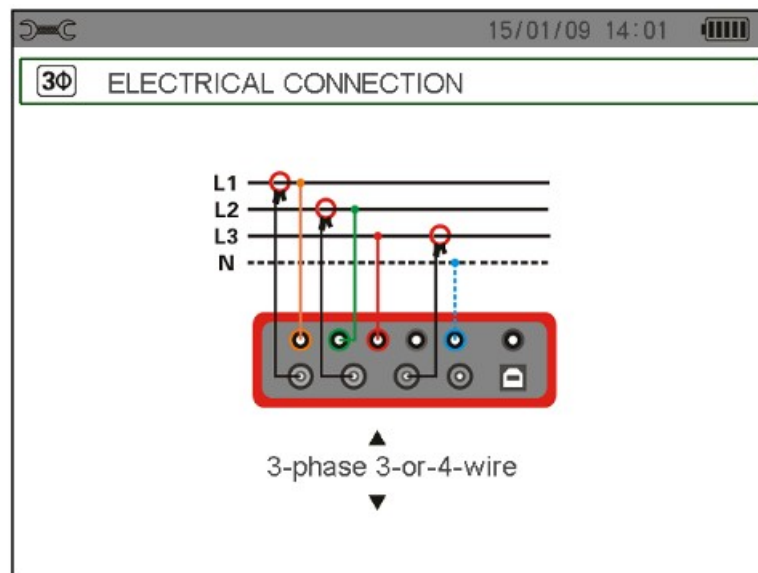


Figure 4-6: 3- or 4-wire three-phase connection

5-wire three-phase network

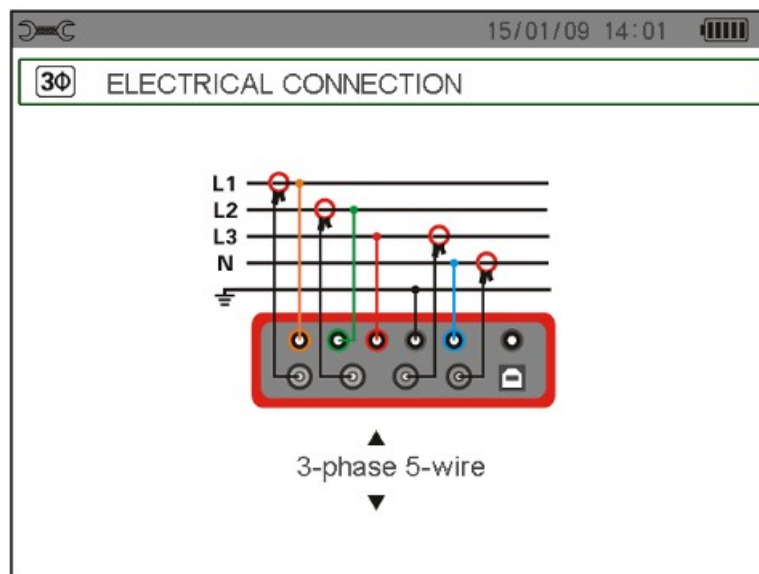




Figure 4-7: 5-wire three-phase connection

Connection procedure

- ★ Switch the instrument on.
- ★ Configure voltage ratio, select the current sensor, and the type of network concerned.
- ★ Connect the leads and current sensors to the unit.
- ★ Connect the earth and/or neutral lead to the network earth and/or neutral (when distributed) and connect the corresponding current sensor.
- ★ Connect the L1 phase lead to the network L1 phase and connect the corresponding current sensor.
- ★ If applicable, repeat the procedure for phases L2, and L3.

Note: complying with this procedure reduces connection errors to a minimum and avoids wasting time.

Waveform capture

Reminder: any screen can be saved (screen snapshot) by pressing the  key (see § 12).
With the device powered up and connected to the network (voltage measurement leads and current sensor), press  .



Display of the transients mode

See §6.2.

Display of the inrush current mode

See §6.3.

Display of harmonics

Reminder: any screen can be saved (screen snapshot) by pressing the  key (see § 12).
With the device powered up and connected to the network (voltage measurement leads and current sensor), press  .



Voltage harmonics display

See §7.2.

Current harmonics display

See §7.3.

Waveform measurements

Reminder: any screen can be saved (screen snapshot) by pressing the  key (see § 12).
With the device powered up and connected to the network (voltage measurement leads and current sensor),
press  .

Display of true RMS measurements

See §8.2.

Display of measurement of total harmonic distortion

See §8.3.

Display of PEAK factor measurements

See §8.4.

Display of Min and Max RMS, extreme values (voltage and current)

See §8.5.



Simultaneous display

See §8.6.

Display of vector diagram

See §8.7.

Alarm recording

Reminder: any screen can be saved (screen snapshot) by pressing the  key (see § 12).
With the device powered up and connected to the network (voltage measurement leads and current sensors),
press  .

Configuration of alarm mode

Configure the values to be monitored as described in §9.2.

Programming of an alarming campaign

See §9.3, configure start and stop time.

Auto stoppage

The alarm recording campaign is stopped automatically at the Stop date and time programmed by the operator.

Manual stoppage

See §9.3.3. Do not reach the preset stop date and time, the operator stop detection is active.


Viewing the alarm log


See §9.4.

Deleting the alarm log

See §9.5.

Trend recording

Reminder: any screen can be saved (screen snapshot) by pressing the  key (see § 12).

With the device powered up and connected to the network (voltage measurement leads and current sensors), press  .

Configuring a trend parameter


See § 10.3.

Programming a recording

See § 10.2.

Energy measurements

Reminder: any screen can be saved (screen snapshot) by pressing the  key (see § 12).

With the device powered up and connected to the network (voltage measurement leads and current sensors), press  .

Measurement of energies consumed

See §11.2.

Measurement of energies generated

See §11.6.

Transfer of data to the PC


The PC software can communicate with the device through a USB interface. Upload and store the measurements for future reference.

Note: The transfer does not delete the data, just copy it to the PC. When an alarming campaign is initiated or a search for transients, an inrush current capture, or a trend recording is pending or in progress, the PC cannot read the data.

Deleting data

Stored data may be deleted prior to a new test campaign, to free memory. See §5.11.

Turning off

Press the  key to turn the device off.

When an alarming campaign is initiated or a search for transients, an inrush current capture, or a trend recording is pending or in progress, the device is not automatically switched off without confirmation.

The following message appears:

**Are you sure want to turn OFF the instrument?
Recording in progress or in standby**

Select Yes or No using the  or  key and press  to validate.

★ If No is selected, the recording will continue.

★ If Yes is selected, the data recorded until that point are saved and the device is turned off.

Power supply


Recharging the battery

See §3.6.3.





Mains operation

See §3.6.5.

CONFIGURATION KEY

The  key is used to configure the device. Before using the instrument, and thereafter as necessary, you must parameterize it. The stored configuration is retained when the instrument is switched off.

Available sub-menus

Select the sub-menu using the  and  keys and confirm by pressing . To return to the main screen, press .

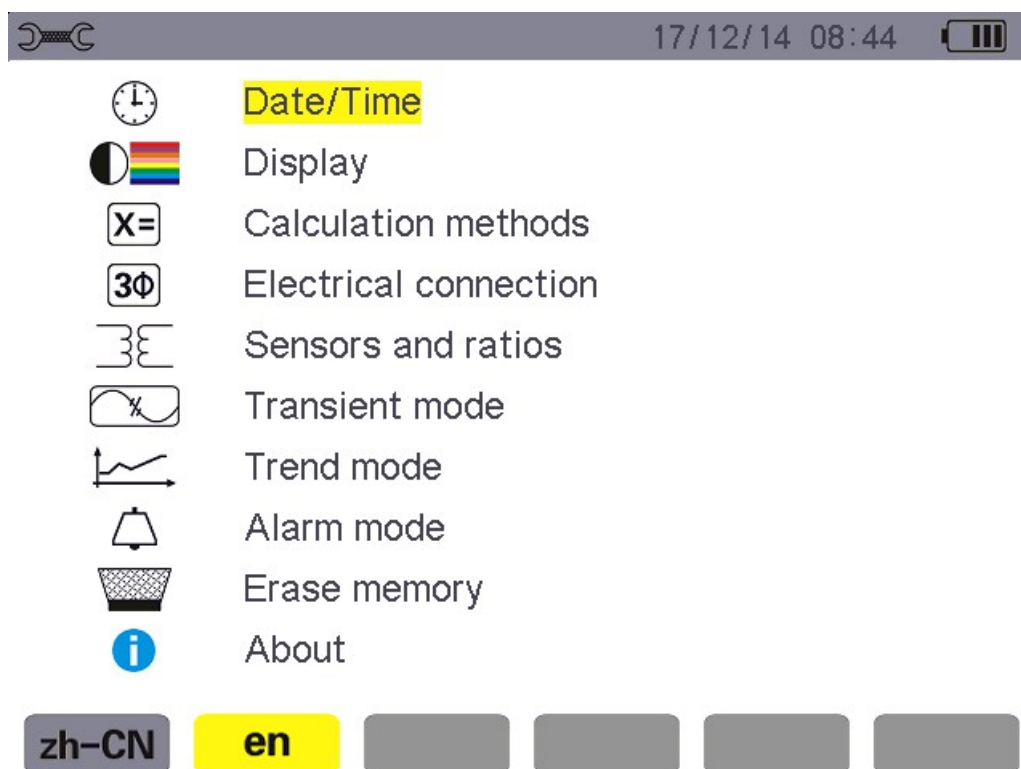


Figure 5-1: The sub-menu display screen

Name	Sub-menu	See
Date/Time	Date and time settings.	§5.3
Display	Screen contrast and brightness settings.	§5.4.1
	Definition of voltage curve and current curve colors.	§5.4.2
Calculation method	Choice of reactive parameters (with or without harmonics).	§5.5
Connection	Choice of type of connection to the network (attention: some calculations depend upon the type of connection).	§5.6
Sensor and ratios	Configuration of the ratios of the current sensors (0086 current clamps, 0406 current clamps, 068B current clamp, transformer).	§5.7.1
	Configuration of voltage ratios.	§5.7.2
Transient mode	Choice of current thresholds to be detected.	§5.8.1
	Choice of voltage thresholds to be detected.	§5.8.2
Trend mode	Choice of parameters to be recorded for.	§5.9
Alarm Mode	Definition of alarms to be detected.	§5.10
Erase data	Choice of total or partial deletion of user data.	§5.11
About	Serial number, software, and hardware version numbers, and capacity of onboard memory card.	§5.12

Display language

To select the display language, press the yellow key under the corresponding icon on the screen (Figure 5-1). Select zh-CN as Chinese, and choose en as English. The yellow icon indicates the current user of the language.

Date/Time

This menu defines the system date and time. The display is as follows:












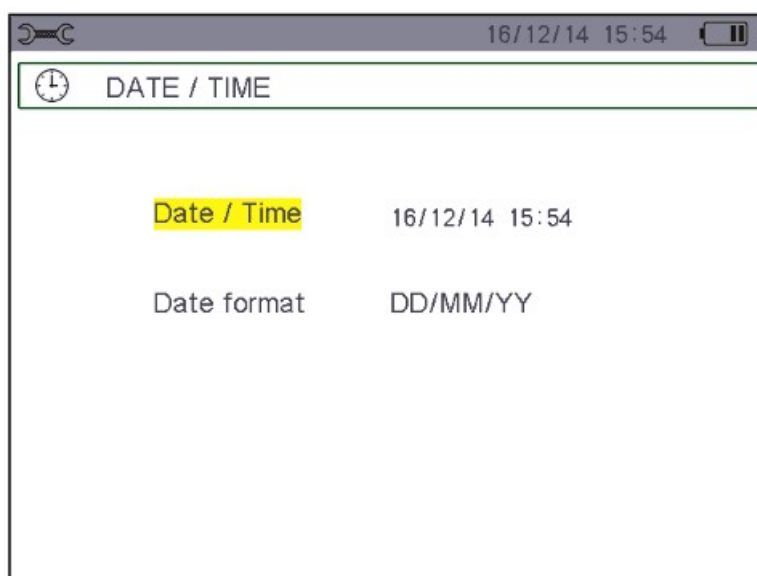








Figure 5-2: Date/Time menu

The Date/Time field is highlighted in yellow.

- To change the date/time, press . The arrows   show which value can be changed. To increment  or  decrement a value, press or.
- To select the value, press  or . To confirm, press .
- To modify the dating system, position the yellow cursor on the field using the  or  key. Press . The arrows   show which value can be changed.
- Select DD/MM/YY or MM/DD/YY or YY/MM/DD, press  or , then confirm by pressing .

To return to the Configuration main menu, press .

Display

Contrast/Brightness

This menu is used to define the contrast and brightness of the display unit. The display is as follows:

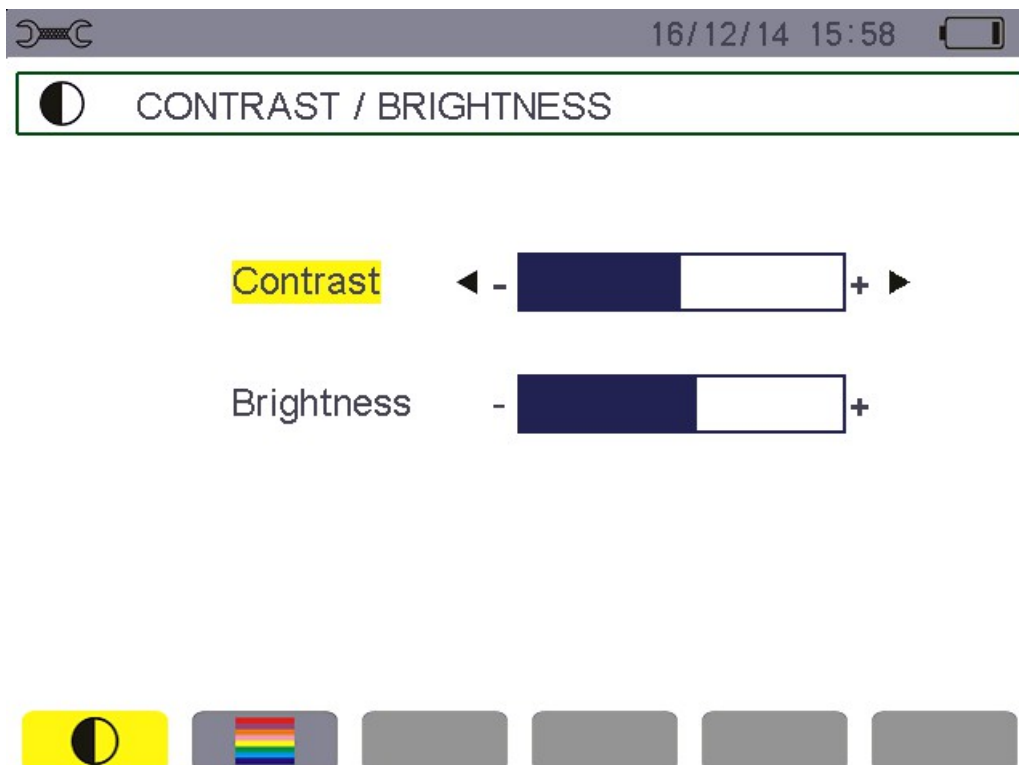








Figure 5-3: The Contrast/Brightness menu


The selected field is highlighted in yellow.

- To modify the contrast, press  or .
- To move to the next field, press  or .

- To change the brightness, press  or .

To return to the Configuration menu, press .

Colors

The  menu is used to define the colors of the voltage and current curves. The colors available are yellow, orange, red, pink, brown, green, and dark green, blue, sky blue, dark blue, light grey, and grey.

The display is as follows:

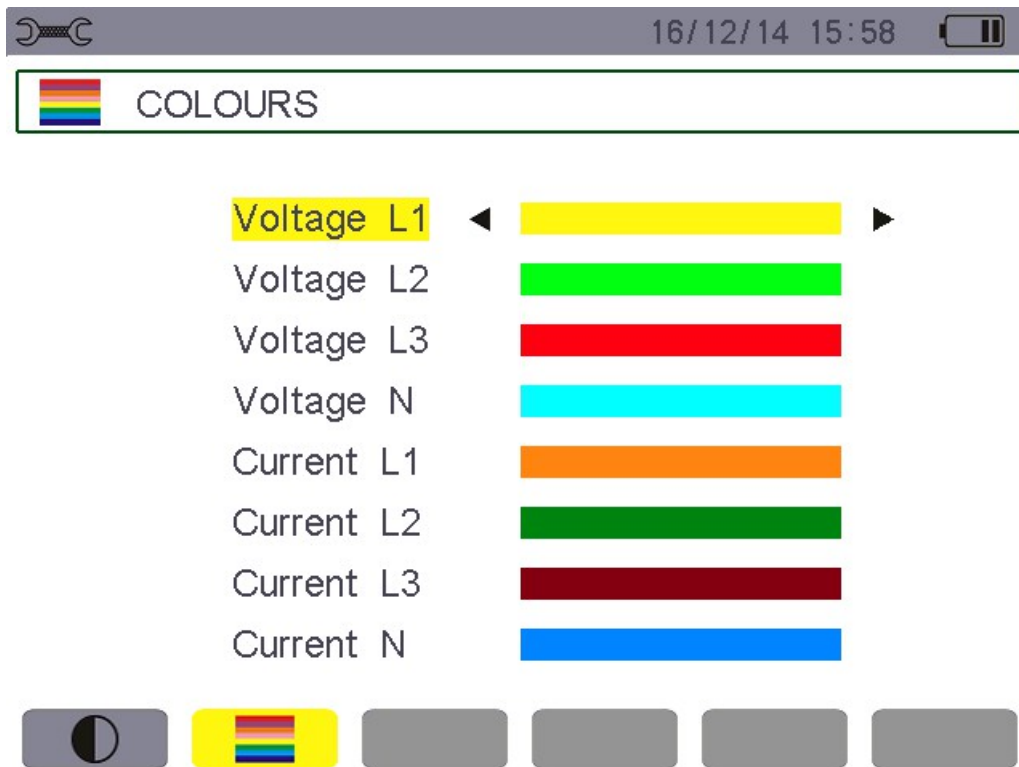







Figure 5-4: The Colours menu

The selected field is highlighted in yellow.

- To select the color of the voltage and current curves, press  or .
- To move to the next field, press  or .

To return to the Configuration menu, press .

Calculation methods

 determines whether or not harmonics are used in calculating the reactive parameters (powers and energies).


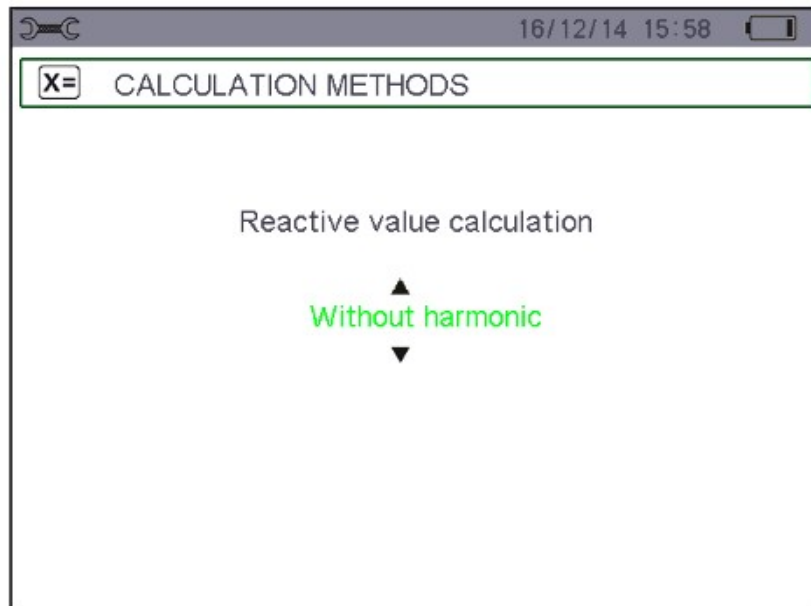


Figure 5-5: The Calculation methods menu

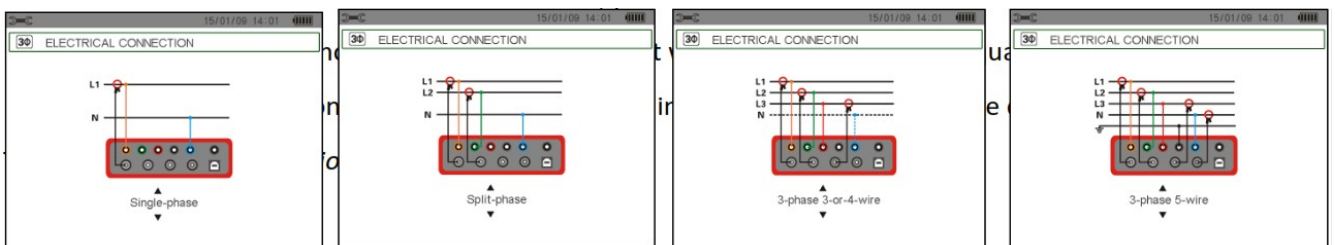- To select With harmonics or Without harmonics, press ▲ or ▼



Connection

The **3Φ** menu is used to define how the device is connected, according to the type of network.

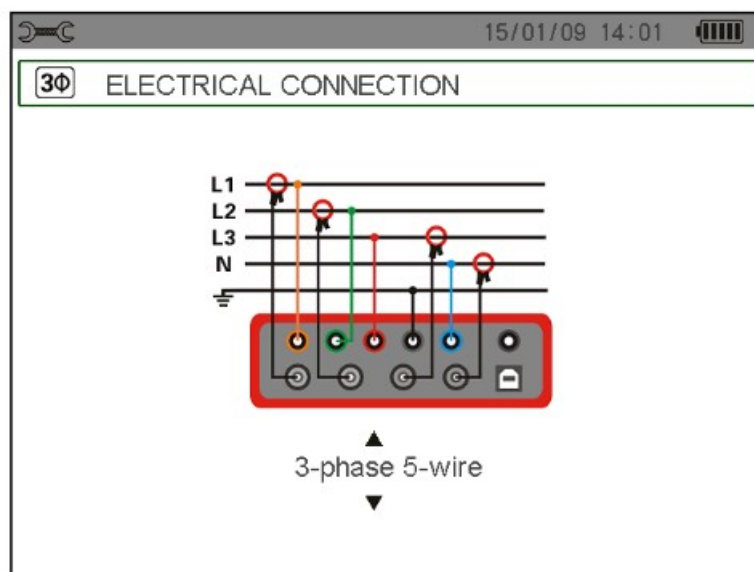





Figure 5-6: The Connection menu

Several electrical diagrams can be selected:


To configure the type of connection, proceed as follows:

- Select Single-Phase, Two-Phase, 3- or 4-wire Three-Phase, or 5-wire Three-Phase by pressing  or .

To return to the Configuration menu, press .

Sensors and ratios

Current sensors and ratios

The  menu, invoked by the yellow key A icon, defines the current sensors and ratios. The device can select 3 current sensors, meanwhile, it can choose an optional current transformer, and set the turn ratio according to to need.












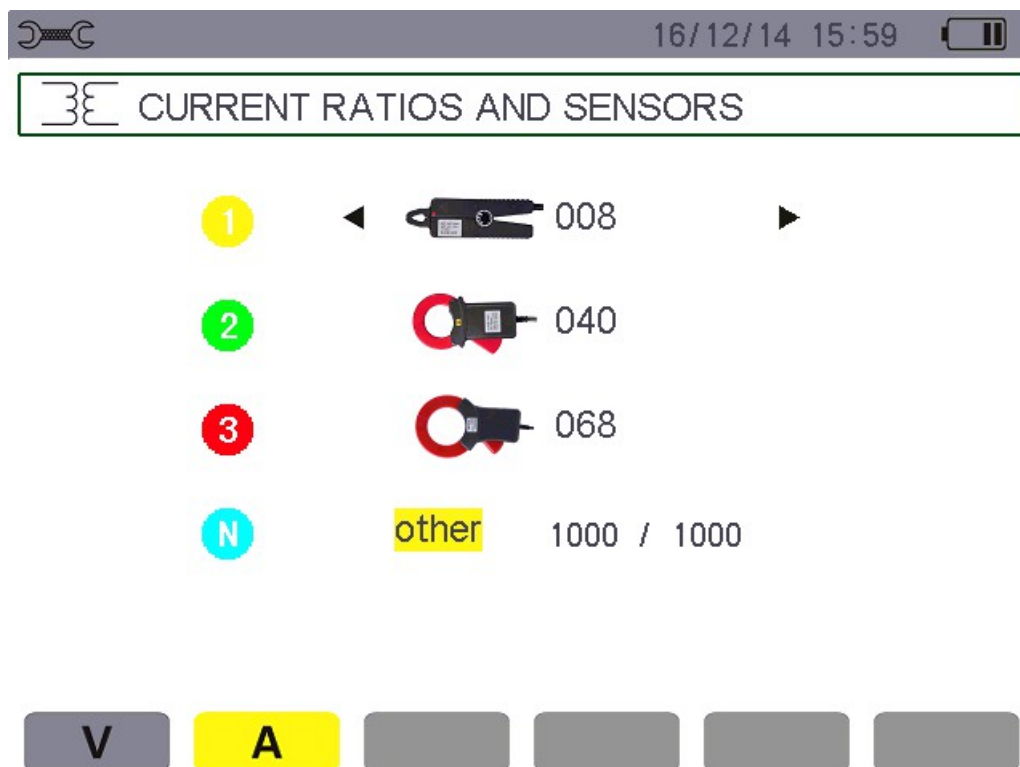

Figure 5-8: Current clamp and ratios screen in the Sensors and ratios menu

The possibilities are:


	008B current clamp: 10mA~ 10A
	040B current clamp: 0.10A~ 100A
	068B current clamp: 1.0A~ 1000A
	300F Flexible Coil Current Sensor (with Integrator) : 10A ~ 3000A

If using the optional current transformer, should be configured as follows:

- Set transformer turns ratio: Into ratio setting, press  .
To select each field, use the  or  , To modify the turns ratio, use the  or  , (such as 2000/0001, device input 25mA, display 50.0A).
- To validate, press  .

Note: selecting optional transformer, device current port forbade input more than 500mA.

Voltage ratios

The  menu, invoked by the V icon, defines the voltage ratios.








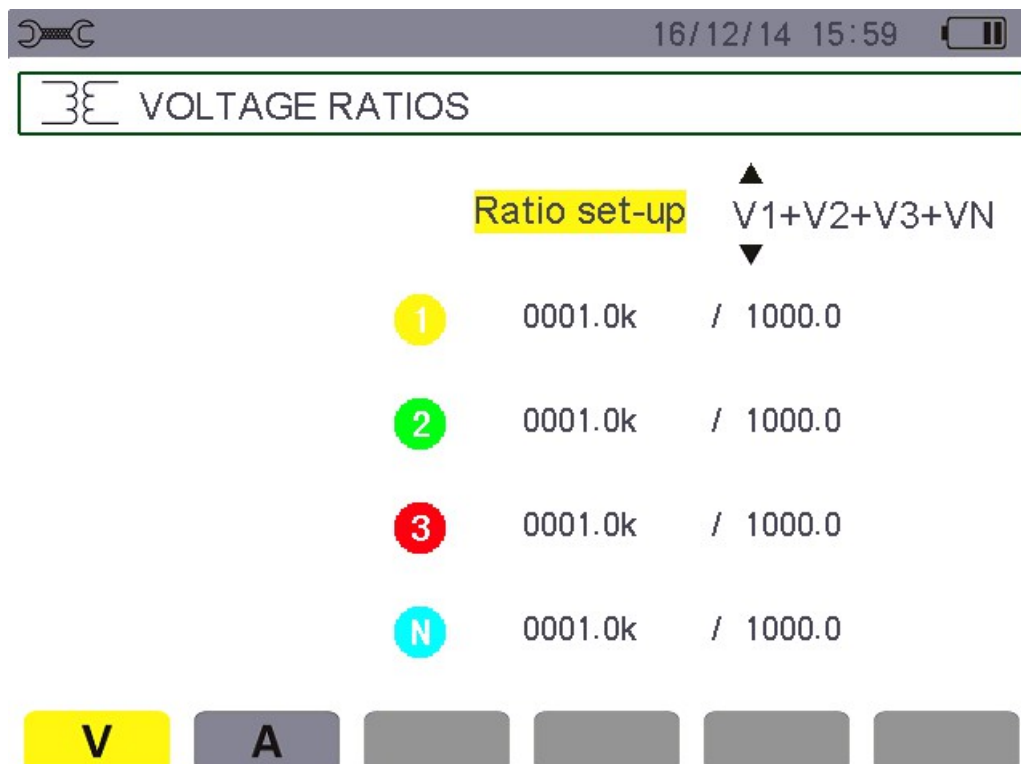Figure 5-9: The Voltage Ratios screen in the Sensors and ratios menu






All the channels ratio can be set as the following:


- (4V, 1/1) 4 channels with are 1:1 ratio.
- (4V) 4 channels are the same ratio.
- (3V+VN)L1\L2\L3 is the same ratio, N line independent setting ratio.
- (V1+V2+V3+VN)4 channels independent setting ratio respectively.

★ To configure the ratios, press , then use the  or  key and validate by pressing .


★ To select the values, use the  or  key (highlighted in yellow).

★ To setting the ratio, press , The arrows   appear.


★ To select the value, press  or . To increment or decrement a value, press  or , then press  to confirm.

To return to the Configuration main menu, press .

Transient mode

The  mode is used to configure the voltage and current thresholds.

Current thresholds

The  screen, displayed by pressing the A icon, is used to define the current thresholds.

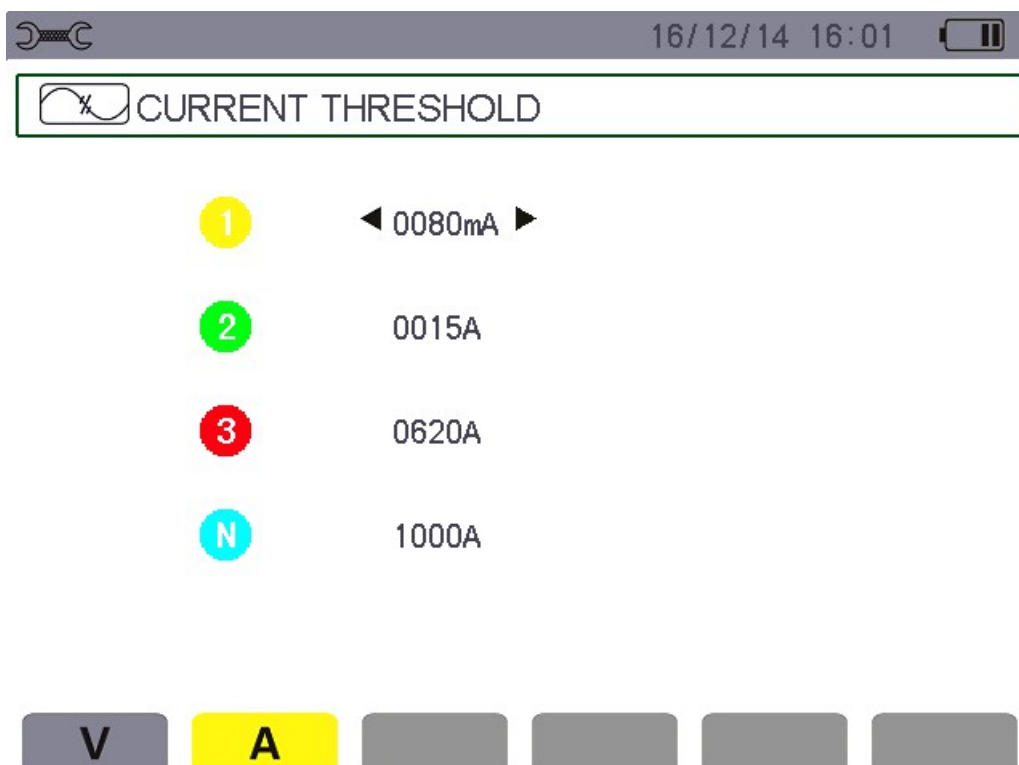










Figure 5-10: The Current thresholds screen in the Transient Mode menu


★ The arrow indicates the channel of a cursor.

★ Use the  or  key to go from one channel to another, press  appear   , and start to change.

★ Press  or select the change bit and threshold current unit(mA/A), To increment or decrement a value, press  or .

★ Press  to confirm.

Voltage thresholds

The  screen, displayed by pressing the V icon, is used to define the voltage thresholds. All the voltage thresholds can be set as the following:

- (4V)4 channels are the same threshold.
- (3V+VN)L1\L2\L3 is the same threshold, N line independent setting threshold.
- (V1+V2+V3+VN) 4 channels independent setting threshold respectively.

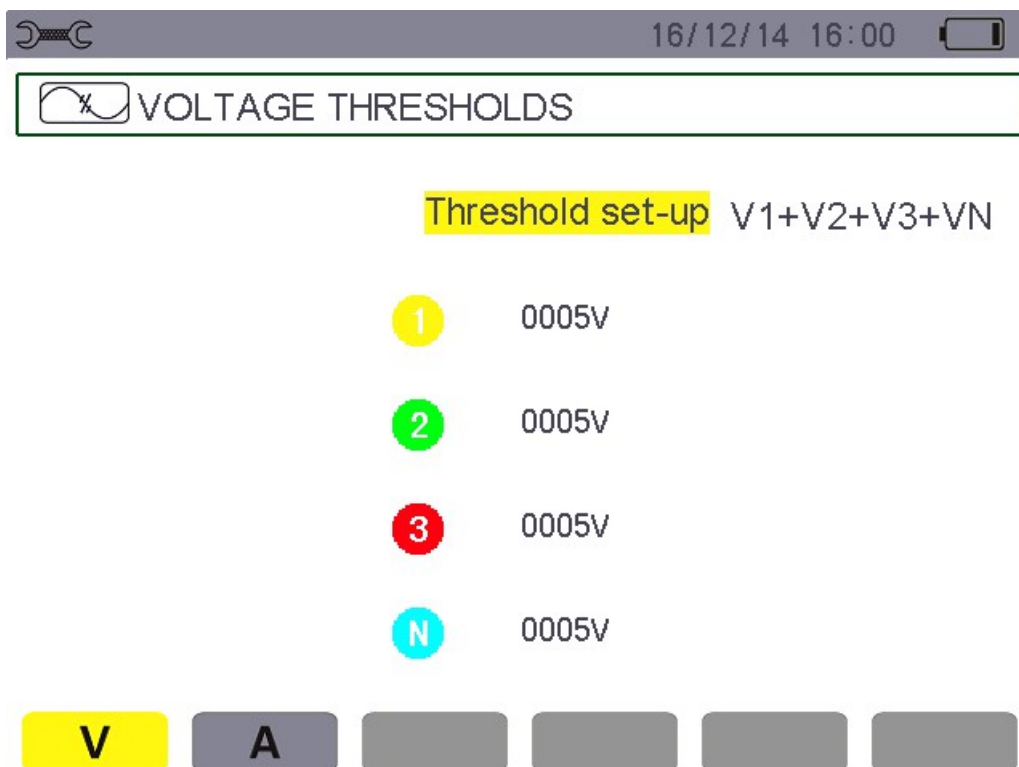











Figure 5-11: The Voltage thresholds screen in the Transient Mode menu

★ Press  to enter ratio configure, and the arrows appear. Use  or  to select the above 3 different threshold combinations, then press  to confirm.


★ To select the threshold, use the  or  key (highlighted in yellow).





★ To setting the threshold, press  , The arrows appear and start to change.

★ Press  or  select the change bit and threshold unit(V/kV), To increment or decrement a value, press  or  . Then press  to confirm.

To return to the Configuration main menu, press .

Trend mode

The device has a recording function – key  – (see § 10) for recording measured and calculated values (Urms, Vrms, Arms, etc.). Four independent configurations can be parameterized, depending on needs.

To select the desired configuration, press the yellow key corresponding to the , , ,  icon. The active configuration is identified by the icon with a yellow background.

A configuration example is shown below:

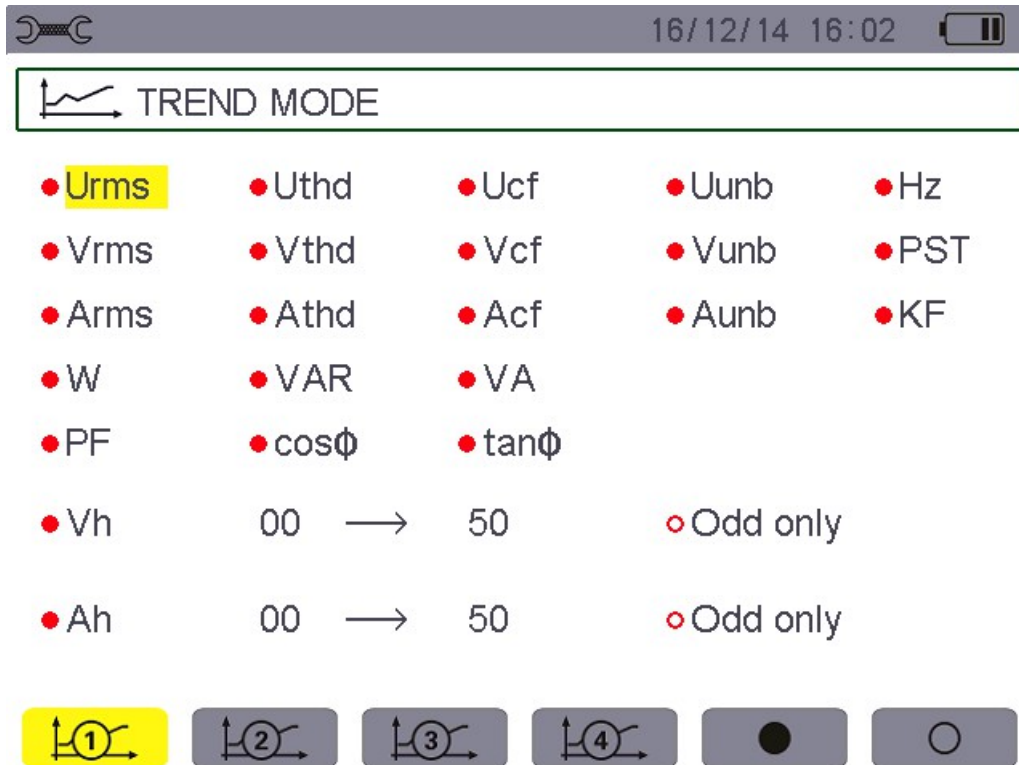







Figure 5-12: In this example, only the Urms values are recorded in configuration 1

★ To define configuration 1, press the yellow key on the keypad corresponding to the  icon. The icon appears on yellow ground.

★ To select the values, move the yellow cursor using the  or  and  or .

★ Press  to select/unselect, the red solid dot indicates is selected, the red hollow dot indicates is unselected.

The recordable values are:

Unit	Designation.
Terms	True RMS phase-to-phase voltage.
USD	Harmonic distortion of the phase-to-phase voltage(2φ, 3φ).
Ucf	Crest (peak) factor of phase-to-phase voltage(2φ, 3φ).
Uub	Phase-to-phase voltage unbalance(2φ, 3φ).
Hz	Network frequency.
Vrms	True RMS phase-to-neutral voltage.
Ltd	Total harmonic distortion of the phase-to-neutral voltage.
If	Crest factor of phase-to-neutral voltage.
Vung	Phase-to-neutral voltage unbalance(2φ, 3φ).
PST	Short-term flicker.
Arms	True RMS current.
Add	Total harmonic distortion of the current.
Act	Crest factor of current.
Aunt	Current unbalance (2φ, 3φ).
KF	K factor.
W	Active power.
VAR	Reactive power.
VA	Apparent power.
PF	Power factor.
PDF	Displacement power factor.
Tan	Tangent.
?	See the comment below.























Features specific to the last two lines. These are recalled below:



Figure 5-13: These two lines involve harmonics


These two lines involve the recording of the harmonics of VAh, Ah, Vh, and Uh. You can select a range of orders

of the harmonics to be recorded (between 0 and 50) for each of these quantities, and within this range, if desired, only odd harmonics. Proceed as follows:


- **To enter the value to be recorded:** with the line highlighted in the yellow, press . The arrows   appear. Select the value (VAh, Ah, Vh, and Uh) for which harmonics are to be recorded by pressing  or . "?" indicate is unselected. Confirm by pressing . The values field is highlighted in yellow.
Press  to go to the next field.
- **Select the starting harmonic order:** with the field highlighted in yellow. Press , and the arrows   appear. Press  or  to increment or decrement the harmonic order, then validate by pressing . Press  to go to the next field.
- **Select the last harmonic:** (greater than or equal to the starting harmonic order) highlighted in yellow. Press , and The arrows   appear. Press  or  to increment or decrement the harmonic order, then validate by pressing .
Press  to go to the next field.
- **Odd harmonics only:** to select or deselect this function, press . The solid red dot identifies your selection:
Selected, only odd harmonics between the two orders of harmonics specified in the previous points are recorded.
Not selected, all harmonics (even and odd) between the two orders of harmonics specified in the previous points are recorded.

• Vh	00	→	50	• Odd only
• Ah	00	→	50	• Odd only

Figure 5-14: record-setting harmonic order

To return to the Configuration main menu, press .
Proceed in the same way to define the other configurations.

Alarm mode

The  screen defines the alarms used by the Alarm Mode function (see § 9). You can configure 40 different alarms.

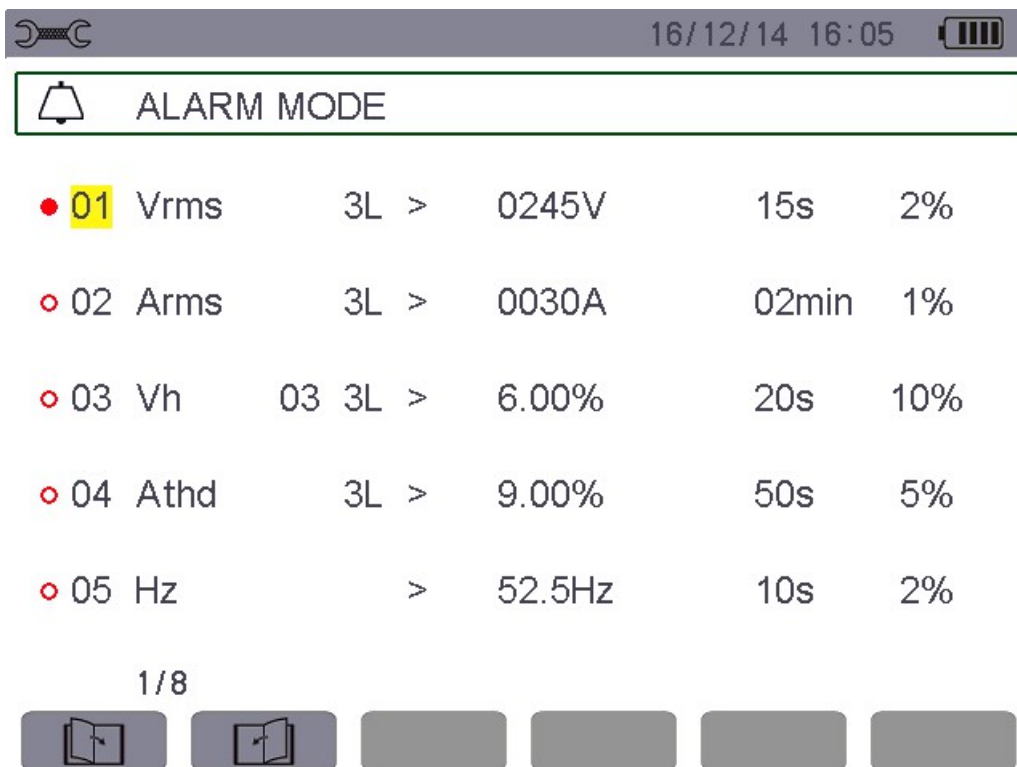


Figure 5-15: The Alarm mode menu

- Use the or key to select a different setting alarm parameter group.

To select the field, press . The arrows appear.

- To select the values (Vah, Ah, Uh, etc., see table in § 5.9), press or , then confirm with . The field is highlighted in yellow.

- To navigate horizontally in the fields, use the or keys, then confirm by pressing . The arrows appear. Enter the values by pressing or , then confirm by pressing . Do the same for all values to be entered in the fields.

For each alarm to be defined, select:

★ The type of alarm (Vah, Ah, Uh, Vh, Tan, PF, PDF, VA, VAR, W, Athd, Utd, Vthd, KF, Hz, Aunb, Vunb, Vrms, Acf, Ucf, Vcf, PST, Arms, Arms, and Vrms – see the table of abbreviations in § 3.9).

★ The orders of harmonics (between 0 and 50, for Vah, Ah, Uh, and Vh).

★ The alarm filter (3L: 3 phases, L1, L2, L3 can be triggered individually; N: neutral can be triggered).

★ The direction of the alarm (> or < for Arms, Urms, Vrms, Hz only; otherwise only one direction is possible).


★ The triggering threshold of the alarm (the prefix of the unit of the alarm can be set in the following cases: W, VAR, VA, Arms, Arms, Vrms).

★ The minimum duration above or below the threshold required for alarm validation (can be set from 0 seconds to 99 minutes).


★ The hysteresis (The percentage increase or decrease from the corresponding alarm threshold, optional values are 1%, 2%, 5%, or 10%. If more than this percentage will stop the alarm – See § 17.2).

- Press to select or cancel the alarm parameter set, the red solid dot indicate is selected, the red hollow dot indicates is unselected.

- To display different alarm screen pages, press the yellow buttons corresponding to the icons.

- To return to the Configuration menu, press .

Erase memory

The  menu partially or totally deletes the data recorded in the device (trend recording, transients recording, inrush current, alarm, screen snapshots, device setting, and monitoring parameter setting).

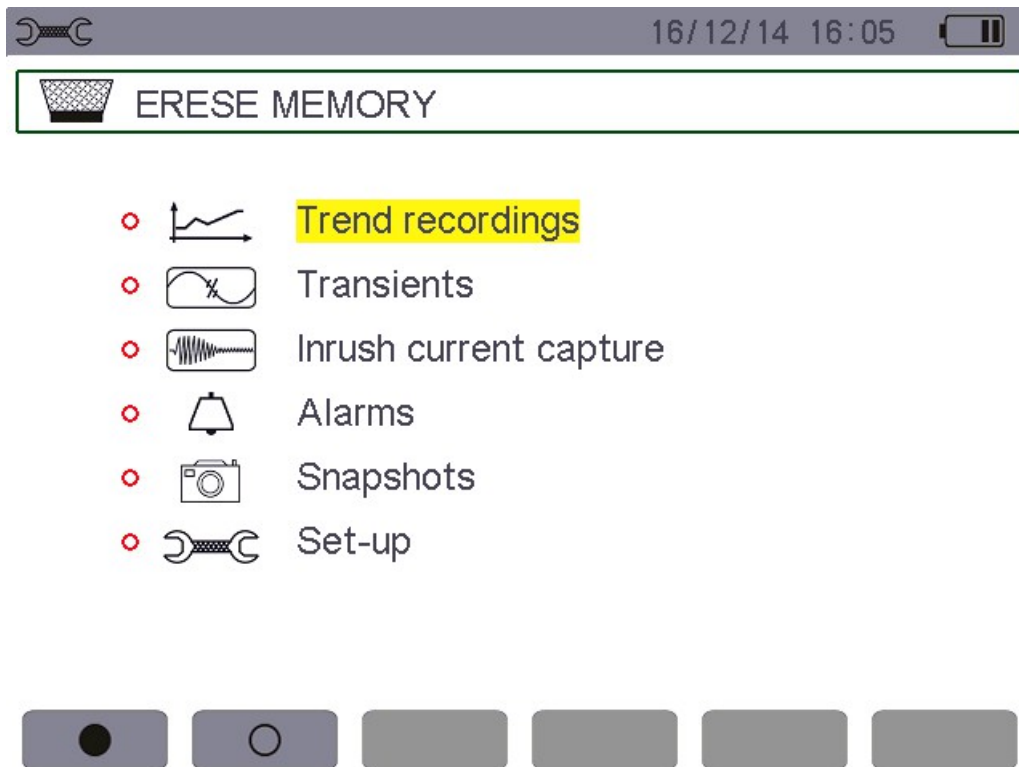









Figure 5-16: Erase memory menu


- For a partial deletion:
 - ★ Select the parameters you want to delete by pressing the  or  key. The selected field is highlighted in yellow.
 - ★ Press  to select/unselect, the red solid dot indicates is selected, and the red hollow dot indicates is unselected.
 - Note:** If the Configuration is selected, the message “after the configuration is deleted, the device will be turned off” appears on the screen.
 - ★ Select the submenu by pressing the yellow key corresponding to the  icon. The  icon displayed yellow indicates ready to delete, then press the yellow key corresponding to the icon to cancel the delete state.
 - ★ In the state of ready to delete, press  to confirm the deletion.

To return to the Configuration main menu, press .

- To delete everything:

★ Select All parameters by pressing the yellow key on the keypad corresponding to the  icon. The selection is identified by the red marks.

Note: Since the Configuration is selected, the message “after the configuration is deleted, the device will be turned off” appears on the screen.

★ To uncheck all items selected, press the yellow key on the keypad corresponding to the  icon, the red hollow dot indicates is unselected.

To return to the Configuration main menu, press  .

About

The screen displays the serial number of the device, the firmware version, the DSP software version, the icon version, and the SD card capacity.

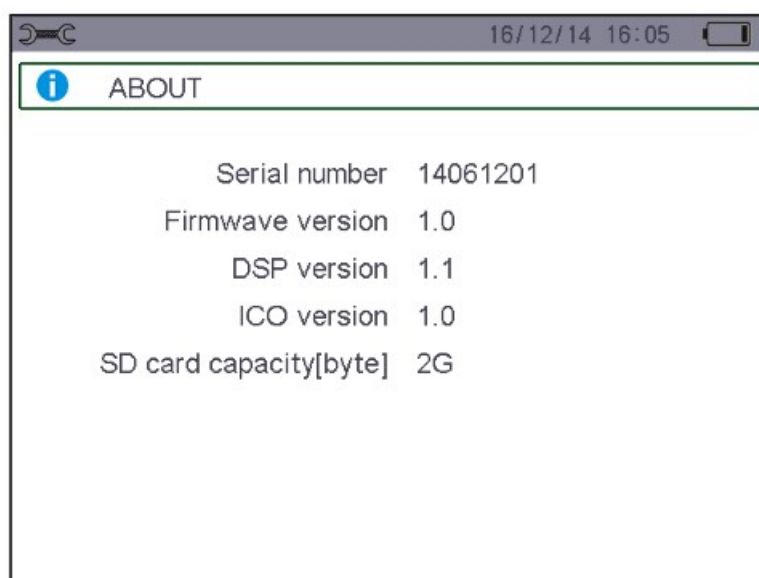


Figure 5-17: The About menu

To return to the Configuration menu, press .

WAVEFORM CAPTURE KEY

Available sub-modes

The sub-modes are listed on the screen below and covered individually in the paragraphs that follow.

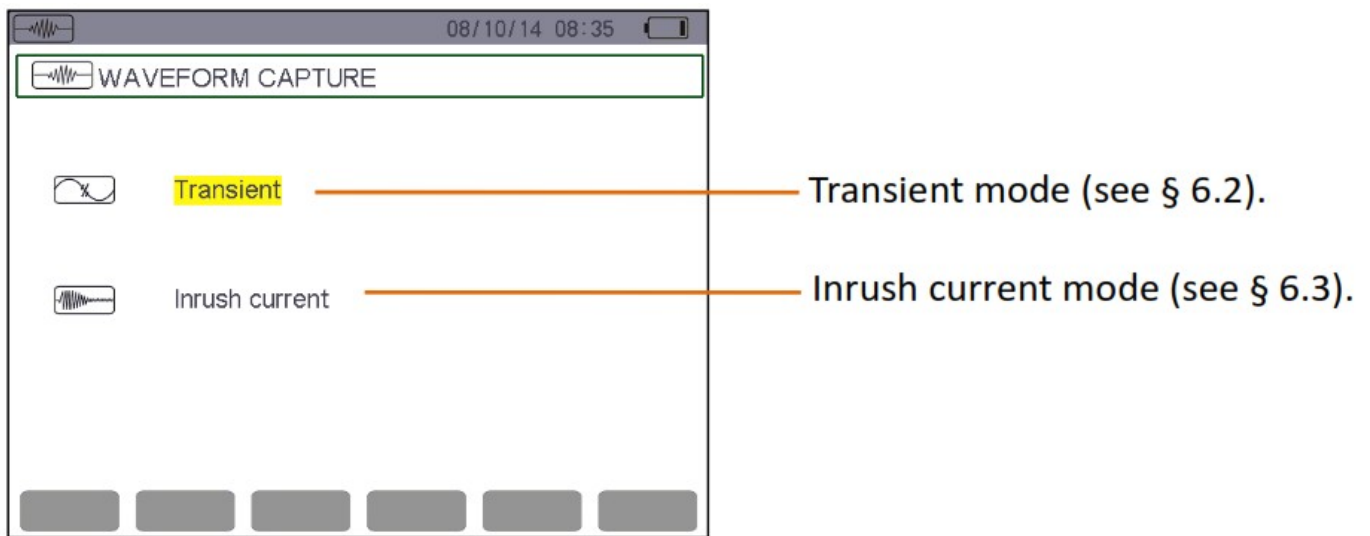


Figure 6-1: The screen when the Waveform Capture mode is entered

To enter the sub-modes, proceed as follows:

★ Select the mode by using the or key. The selected field is highlighted in yellow.

★ Confirm by pressing .

To return to the Waveform capture screen, press .

Transient mode

The model is used to record transients, view the list of recorded transients, and if necessary delete them. You can record up to 150 transients.

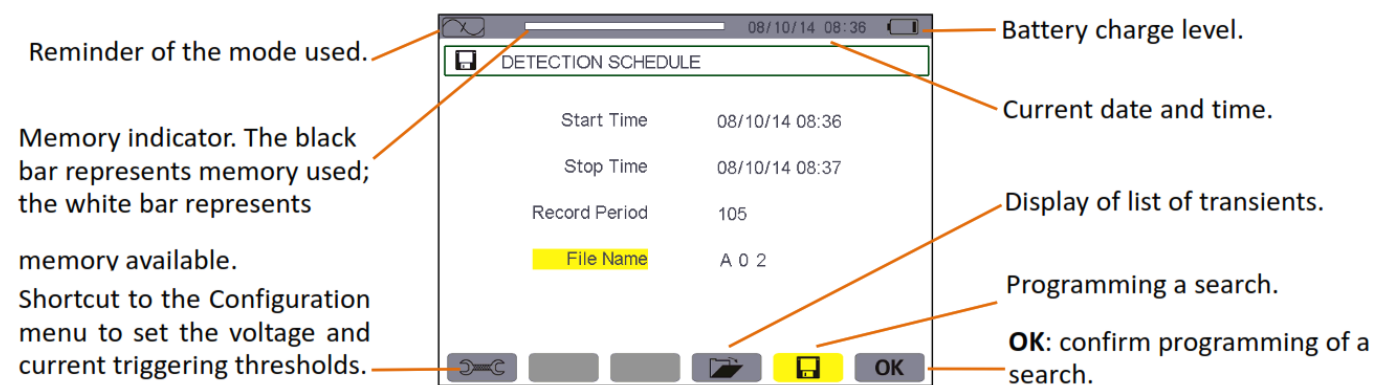


Figure 6-2: The Detection schedule screen in the Transients mod

6.2.1. Programming and starting a search

Pressing the yellow key corresponding to the icon. The Detection schedule screen is displayed

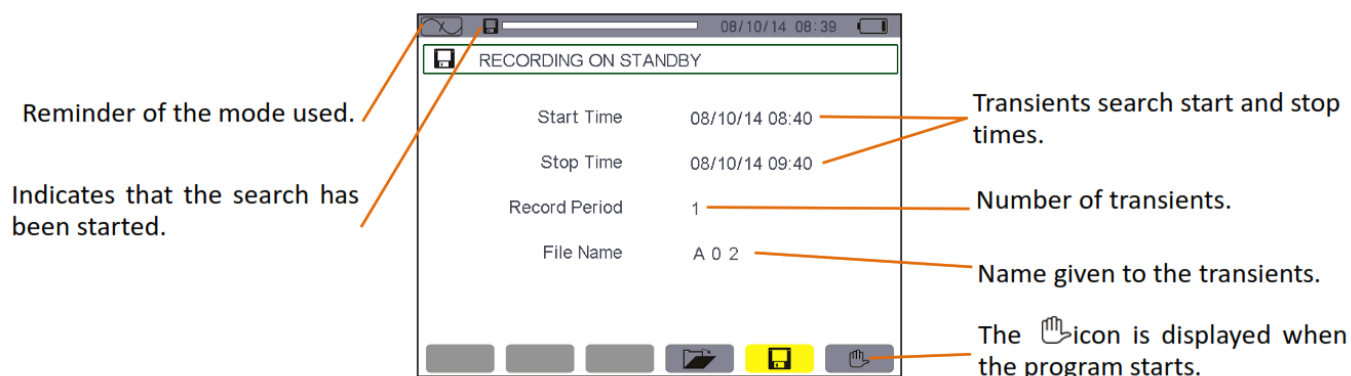


Figure 6-3: The Detection schedule screen in Transients mode

6.2.1.1. Stage 1: configuration of parameter

★ Select the Start field using the or key. The selected field is highlighted in yellow. Press to enter the values. The arrows appear in the start date and time field of the programming of a campaign.

★ Press or to increment or decrement a value and or to go to the next item.

Note: The start date and time must be later than the current date and time.

★ Press to validate the programmed **Start** date and time.

★ Select the **Stop** field using the or key. The selected field is highlighted in yellow. Press to enter the values. The arrows appear in the Stop date and time field of the programming of a campaign.

★ Press or to increment or decrement a value and or to go to the next item.

Note: The stop date and time must be later than the start date and time.

★ Press to validate the programming of the Stop date and time.

★ Instruments can store 150 sets of Transient records at the same time.

Proceed in the same way for the **Count**. The count can contain up to 150 transient records.

Proceed in the same way for **Series name** fields. The available alphanumeric characters are the uppercase letter from A to Z and the digits from 0 to 9. File name length up to eight characters.

★ To configure the voltage thresholds and current thresholds, press the yellow shortcut key to return to the Configuration menu.

To return to the Waveform capture screen, press .

6.2.1.2. Stage 2: starting the program

To begin monitoring the start and stop times you have defined, press the yellow key on the keypad corresponding to the **OK** icon.


- The **OK** icon disappears and the icon appears instead.
- The message Detection on standby is displayed until the start time is reached and the icon flashes in the screen's top display bar.
- When the start time is reached the message Detection in progress is displayed.
- When the stop time is reached, the Detection schedule screen with the OK icon (bottom right-hand corner of the screen) is displayed again. It is then possible to program another search.

Note: voltage and/or current transients are recorded according to the activation thresholds configured. If activation occurs on the current threshold, the current and voltage waveforms are recorded.

To return to the Waveform capture screen, press .

6.2.1.3 Intentional transients campaign stoppage

The search can be stopped deliberately before the stop date and time by pressing the yellow key on the keypad

corresponding to the  icon (bottom right corner of the screen). The OK icon then reappears in the same place.



6.2.2. Display a transient


To display the recorded transients, proceed as follows


Reminder of the mode

Memory indicator. The black bar represents memory used; the white bar represents memory available

The page number and the number of pages.

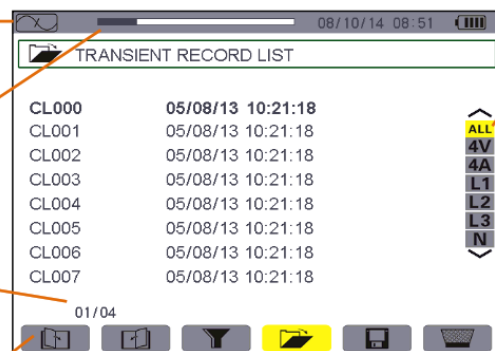The  icons let you browse through the previous and next screen pages. Press the  keys corresponding to these icons to display the pages.



The  icon is used to activate or deactivate the choice of a transient list display filter.

Selection of transients in the list to be displayed:




-**ALL**: all transients are displayed.

-**4V**: the transients triggered by an event in one of the 4 voltage channels are displayed.


-**4A**: the transients triggered by an event in one of the 3 current channels and 1 neutral current channel are displayed.

-**L1, L2, or L3**: the transients triggered by an event on a particular phase are



Figure 6-4: the Transient list screen

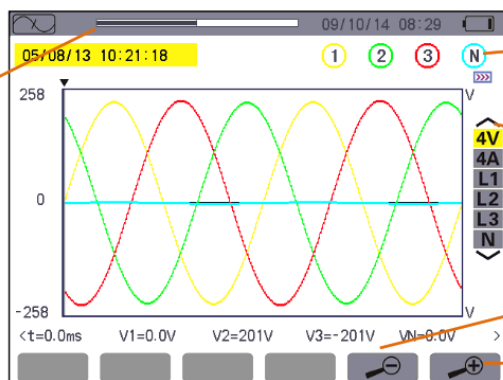
★ Select the line of the transient to be displayed using the  or  key. The selected field is bolded. Confirm by pressing . The screen displays the transients in the form of curves

Location in the record of the zone displayed.



Reminder of the number assigned to the curve

Selection of curves to be displayed using the  or  key.

: Zoom out.


: Zoom in.

Figure 6-5: transients in the form of curves

★ Select the curve to be displayed using the  or  key, and move the cursor using the  or  , long press can move quickly.

To return to the Transient list screen, press .

6.2.3. Delete a transient

The  icon is displayed only if a record has been made. To delete a transient, proceed as follows:

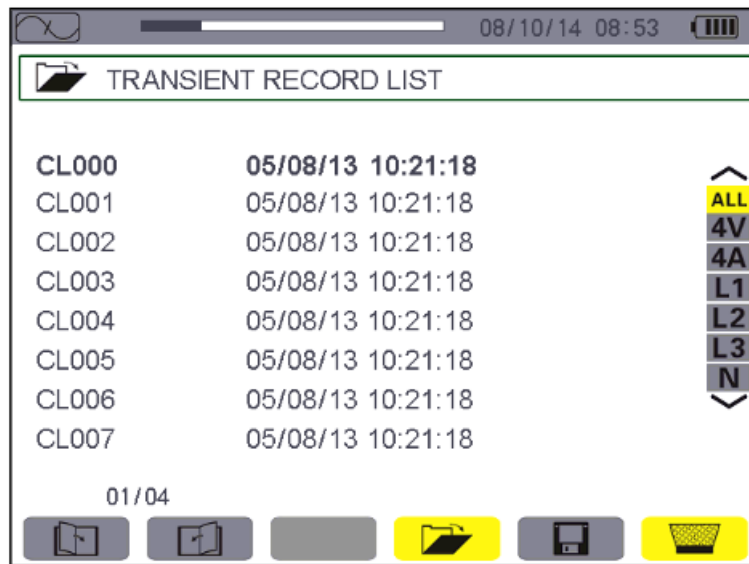


Figure 6-6: Delete transient screen

- ★ Select the transient to be deleted using the or key. The selected field is bolded.
- ★ Select the submenu by pressing the yellow key corresponding to the icon. The icon displayed yellow indicates ready to delete, then press the yellow key corresponding to the icon or to cancel the delete state.
- ★ In the state of ready to delete, press to confirm the deletion.

6.3. Starting current mode

This mode is used to capture (record) inrush currents (voltage and current waveforms). In capture display mode, two sub-menus, **RMS** and **PEAK**, are available (see § 6.3.2).

The device keeps in memory only a single current inrush capture.

6.3.1. Programming the capture

To program the capture of an inrush current, select the submenu by pressing the yellow key of the keypad corresponding to the icon. The Capture schedule screen is displayed.

Reminder of the mode

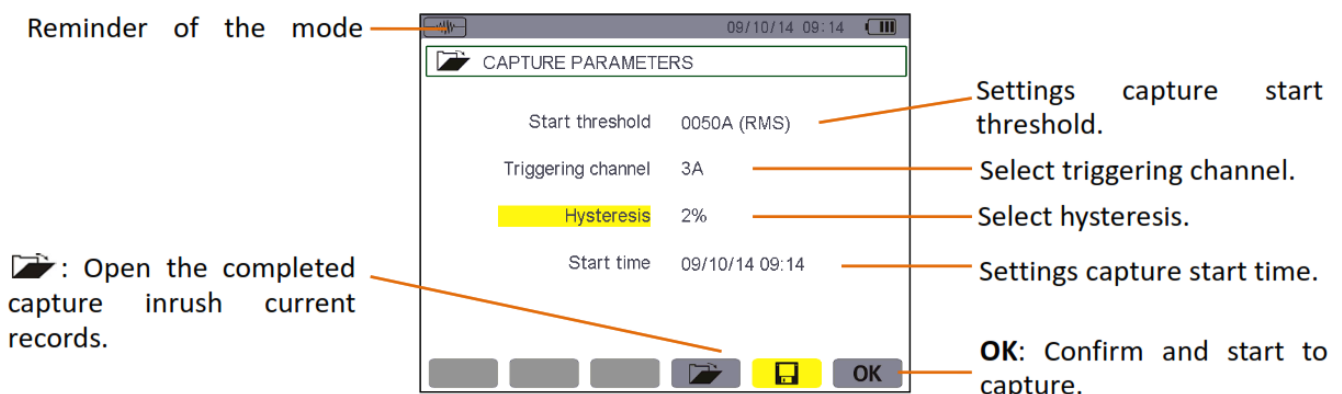







Figure 6-7: the Capture schedule screen in Inrush current mode

6.3.1.1. Stage 1: configuration of parameter

Proceed as follows:

- ★ Select the Start threshold field using the or key. The selected field is highlighted in yellow. Press to enter the type of values. The arrows appear in the Start threshold field.


★ Press  or  to increment or decrement a value and press  or  to go to the next item.


★ Press  to confirm Proceed in the same manner for the **Triggering filter, Hysteresis, and Start time.**

Note: for more information on hysteresis, refer to § 17.2.

6.3.1.2. Stage 2: starting the capture

To start the capture program at the start date and time you have defined press the yellow key on the keypad corresponding to the **OK** icon.


★ The OK icon disappears and the  icon appears instead.

★ The message capture pending is displayed until the start time is reached and the  icon flashes in the screen's upper display bar.

★ When the start conditions are met and the start time is reached, the message Capture in progress is displayed and the memory occupation indicator appears at the top of the creek. (The black bar represents memory used; the white bar represents memory available.) The indicator is displayed only during the capture and disappears when the capture is completed.

★ If the capture is completed with a stop event (see conditions in § 17.5) or if the recording memory of the device is full, the capture stops automatically. Programming the capture mode and OK icon reappear.

Note: the device can keep in memory only a single inrush current capture. If you wish to make another capture, first, delete the previous one.


To return to the Waveform capture screen, press .

6.3.1.3. Intentional stoppage of capture

A capture can be stopped deliberately by pressing the yellow key on the keypad corresponding to the icon (bottom right corner of the screen). **OK**, the icon will appear in the same place.

6.3.2. Displaying the parameter of the capture

To display the characteristics of the capture, proceed as follows:

- Select the submenu by pressing the yellow key corresponding to the  icon. The Capture parameters screen is displayed.

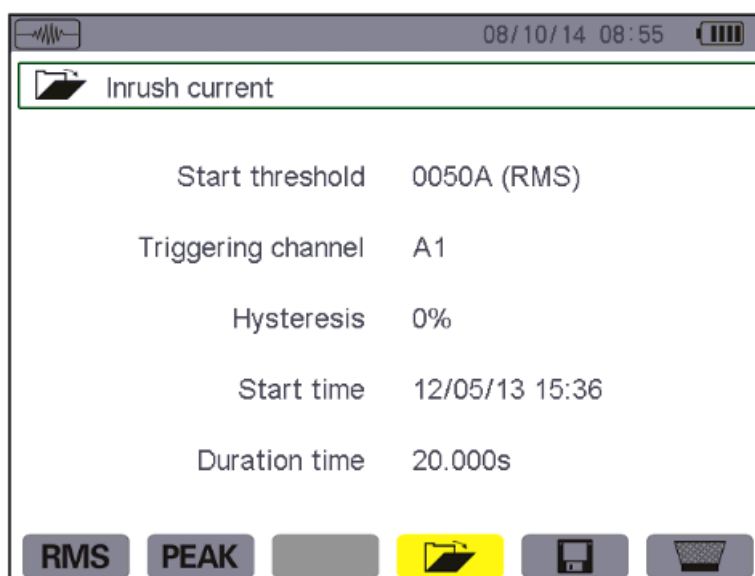


Figure 6-8: the Capture parameters screen

No.	Function	See
-1	RMS mode	§ 6.3.3
-2	PEAK mode	§ 6.3.4

- Choose the type of display, RMS or PEAK, by pressing the yellow key corresponding to the icon. The device displays waveforms (current and voltage) on which you can move the time cursor and zoom in and out.
 - ★ The instantaneous current and voltage at the time indicated by the cursor
 - ★ The maximum instantaneous current (over the entire capture).
 - ★ The **RMS** current in the half-cycle on which the cursor is positioned.
 - ★ The maximum half-cycle RMS current (over the entire capture).
 - ★ Maximum instantaneous value PEAK(over the entire starting time).
 - ★ The starting time and the motor starting period.

Caution: The voltage must be present before the inrush current is proper for a stable and correct frequency lock.

6.3.3. True RMS current and voltage

The **RMS** mode displays the record of the trend of the true half-cycle RMS current and voltage and the frequency trend curve.

6.3.3.1. The 3A RMS display screen

The following information is displayed:

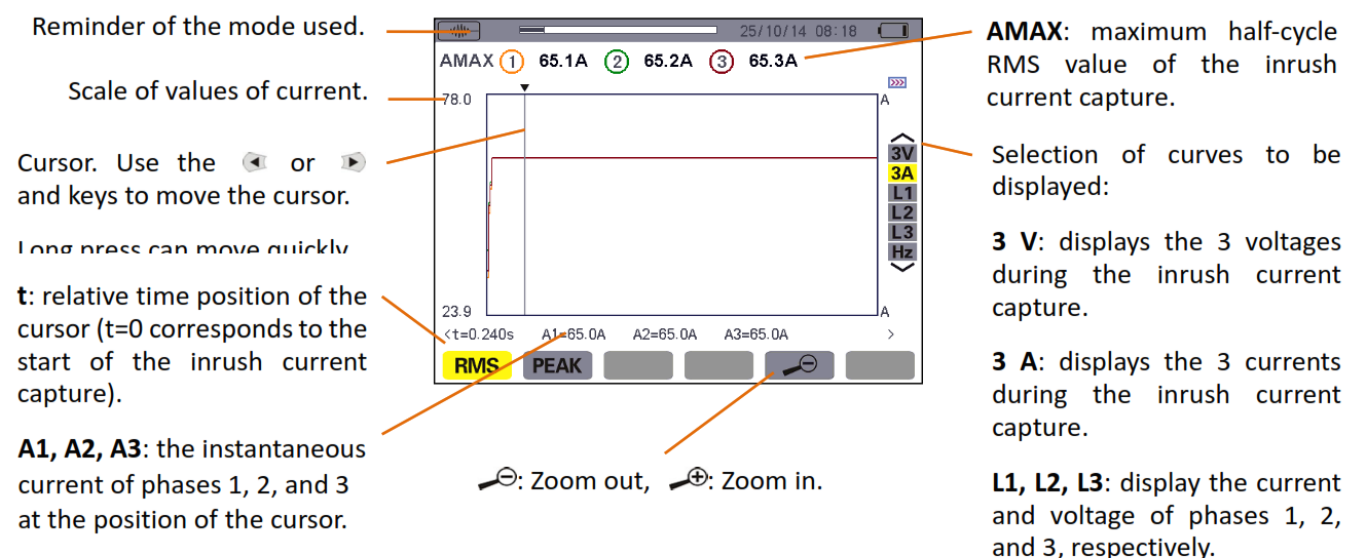


Figure 6-9: the 3A RMS display screen

6.3.3.2. The L1 RMS display screen

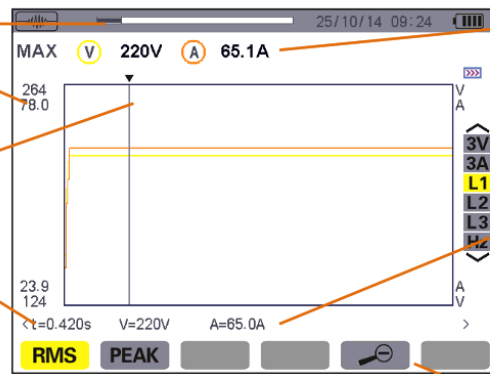
The following information is displayed:

Reminder of the mode used.

Scale of values of current and voltage.

Cursor. Use the ◀ or ▶ and keys to move the cursor.

Long press can move quickly.
t: relative time position of the cursor (t=0 corresponds to the start of the inrush current capture).



MAX: maximum half-cycle RMS value of the inrush current capture.

V: measured voltage.

V1: the instantaneous voltage of phase 1 at the position of the cursor.

A1: the instantaneous current of phase 1 at the position of the cursor.

⊖: Zoom out, ⊕: Zoom in.

Figure 6-10: the L1 RMS display screen

Note: Filters L2 and L3 display the trend of the true half-cycle RMS current and voltage of phases 2 and 3. The screen is identical to the one displayed for filter L1.

6.3.4. Instantaneous inrush current

The **PEAK** mode is used to display the envelopes and waveforms of the inrush current capture.

6.3.4.1. The 4A PEAK display screen

The following information is displayed:

Reminder of the mode used.

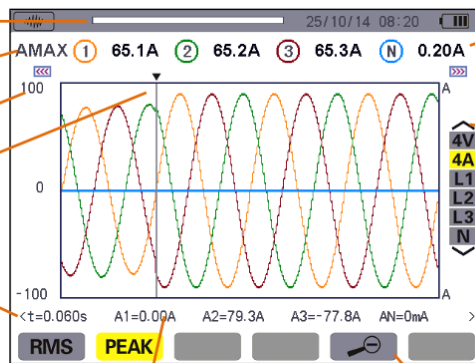
Peak absolute value.

Scale of values of current.

Cursor. Use the ◀ or ▶ and keys to move the cursor.

Long press can move quickly.

t: relative time position of the cursor (t=0 corresponds to the start of the inrush current capture).



AMAX: maximum half-cycle RMS value of the inrush current capture.

Selection of curves to be displayed:

4 V: display the 3 phase and neutral voltages.

4 A: display the 3 phase and neutral current.

L1, L2, L3: display the current and voltage of phases 1, 2, and 3, respectively.

⊖: Zoom out, ⊕: Zoom in.

A1, A2, A3: the instantaneous current in phases 1, 2, and 3 at the position of the cursor.

AN: the neutral instantaneous current at the position of the cursor.

Figure 6-11: the 4A PEAK display screen

6.3.4.2. The A1 PEAK display screen

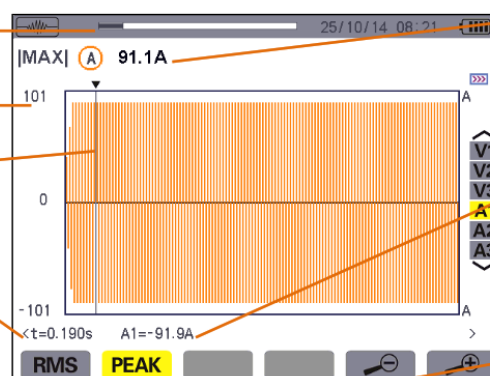
The following information is displayed:

Location of the zone displayed in the record.

Scale of values of current.

Cursor. Use the ◀ or ▶ and keys to move the cursor.

t: relative time position of the cursor (t=0 corresponds to the start of the inrush current capture).



MAX: maximum half-cycle RMS value of the inrush current capture.

A1: the instantaneous current of phase 1 at the position of the cursor.


⊖: Zoom out, ⊕: Zoom in.

Figure 6-12: the A1 PEAK display screen

Note: Filters A2 and A3 display the record of the current envelope of phases 2 and 3. The screen is identical to

the one displayed for filter A1.

HARMONICS MODE

The  key displays a representation of the harmonic ratios of the voltage, current, and apparent power, order by order. It can be used to determine the harmonic currents produced by nonlinear loads and analyze problems caused by harmonics according to their order (overheating of neutrals, conductors, motors, etc.).

7.1. Available sub-menus

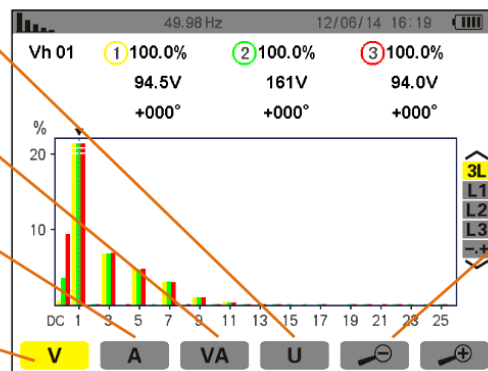
The submenus are listed on the screen below and described individually in the paragraphs that follow. The measurement type is selected using the yellow keys of the keypad below the screen.



Analysis of the harmonics of the phase-to-phase voltage.


Analysis of the apparent power of the harmonics.

Analysis of harmonics of the current.

Analysis of harmonics of the phase-to-neutral voltage.



Use the  or  key to select each phase and expert mode.

:Zoom out.


:Zoom in.

Figure 7-1: Harmonic mode screen

7.2. Phase-to-neutral voltage

The  sub-menu displays the harmonics of the phase-to-neutral voltage.

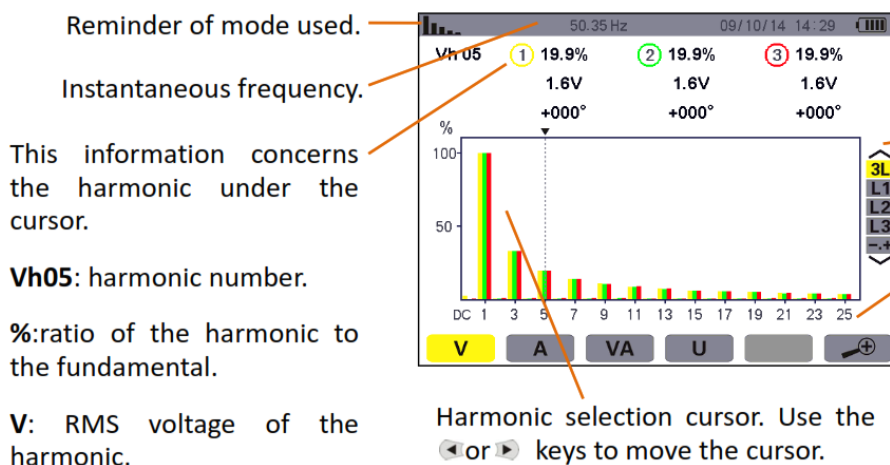
Note: The choice of curves to be displayed depends on the type of connection (see § 5.6):

- ★ Single-phase: no choice (L1).
- ★ Two-phase: 2L, L1, L2.
- ★ Three-phase, 3-, 4-, or 5-wire: 3L, L1, L2, L3, -, + (expert mode).

The screen snapshots shown as examples were obtained with a three-phase connection. This observation also applies to the other sub-menus.

7.2.1. The 3L phase-to-neutral harmonics display screen

The following information is displayed:



Reminder of mode used.



Instantaneous frequency.



This information concerns the harmonic under the cursor.

Vh05: harmonic number.

%:ratio of the harmonic to the fundamental.

V: RMS voltage of the harmonic.

Harmonic selection cursor. Use the  or  keys to move the cursor.

Use the  or  key to select each phase and expert mode.

The horizontal axis indicates the orders of the harmonics (odd marking). Display of the level of the harmonics as a percentage of the fundamental (order 1).

DC: DC component.

1 to 25: harmonics of order 1 to 25. When the cursor

Figure 7-2: example of 3L phase-to-neutral voltage harmonics display

Display in expert mode (three-phase connection only – See § 7.6) of the 3 phases (3×3L) or of L1, L2, or L3(*).

7.2.2. The L1 phase voltage harmonics display screen


The following information is displayed:

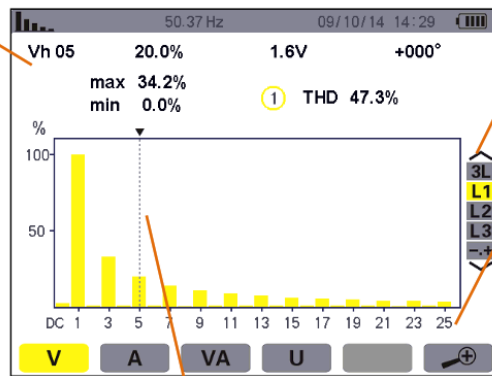
This information concerns the harmonic under the cursor.



Vh 05: harmonic number. %: ratio of the harmonic to the fundamental.



V: RMS voltage of the harmonic.

+000°: phase shift with respect to the fundamental (order 1).

max – min: ratio of maximum and minimum harmonic (reset when the  key is pressed).



Harmonic selection cursor. Use the  or  keys to move the cursor.

Use the  or  key to select each phase and expert mode.

The horizontal axis indicates the orders of the harmonics (odd marking). Display of the level of the harmonics as a percentage of the fundamental (order 1).

DC: DC component.

1 to 25: harmonics of order 1 to 25. When the cursor exceeds order 25, order 26 to

Figure 7-3: example of display of harmonics of L1 phase-to-neutral voltage

Note: Filters L2 and L3 display the harmonics of the phase-to-neutral voltage for phases 2 and 3, respectively. The screen is identical to the one displayed for filter L1.

7.3. Current

The **A** sub-menu displays the harmonics of the current.

7.3.1. The 3L current harmonics display screen

The following information is displayed:

Reminder of mode used.

Instantaneous frequency.


This information concerns the harmonic under the cursor.



Ah03: harmonic number.



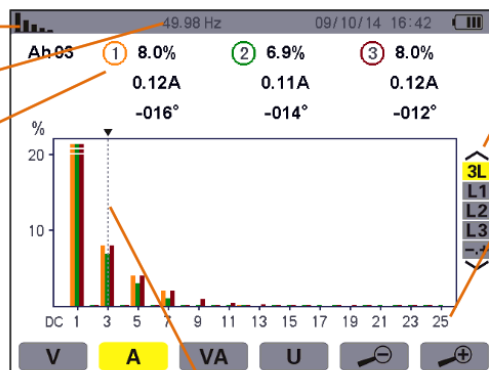%: ratio of the harmonic to the fundamental.

A: RMS current of the harmonic.

+000°: phase shift with respect



Harmonic selection cursor. Use the  or  keys to move the cursor.

Use the  or  key to select each phase and expert mode.

The horizontal axis indicates the orders of the harmonics (odd marking). Display of the level of the harmonics as a percentage of the fundamental (order 1).

1 to 25: harmonics of order 1 to 25. When the cursor exceeds order 25, order 26 to 50 appears.

Figure 7-4: example of 3L display of current harmonics

7.3.2. The L1 current harmonics display screen

The following information is displayed:

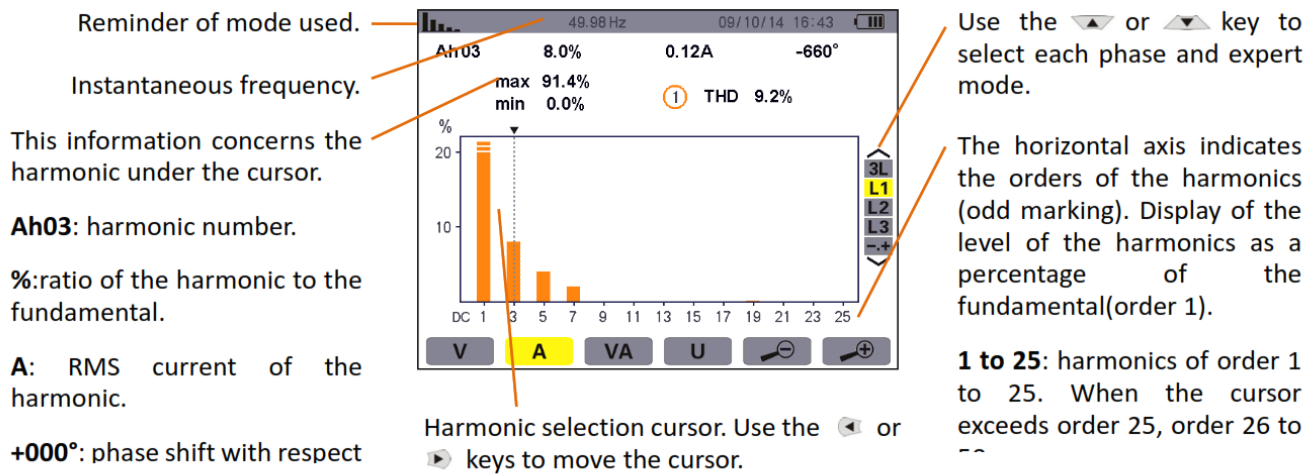


Figure 7-5: example of L1 display of current harmonics

Note: Filters L2 and L3 display the current harmonics of phases 2 and 3, respectively. The screen is identical to the one displayed for filter L1.

7.4. Apparent power

The **VA** sub-menu displays the harmonics of the apparent power.

7.4.1. The 3L apparent power harmonics display screen

The information is:

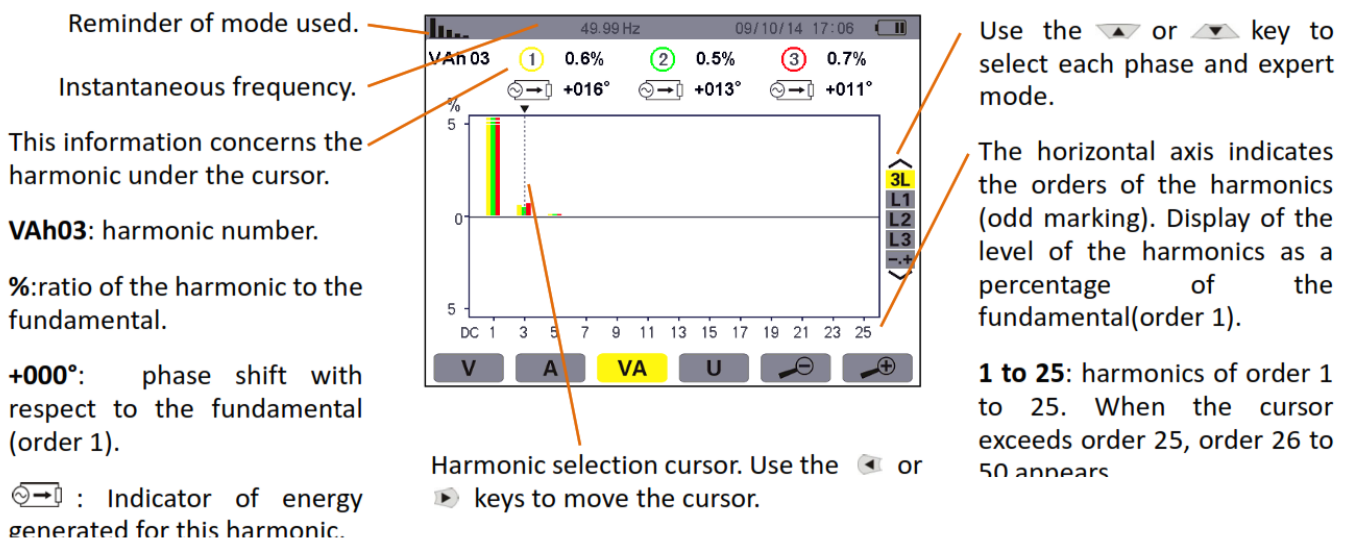


Figure 7-6: example of 3L apparent power harmonics display

7.4.2. The L1 apparent power harmonics display screen

The information is:

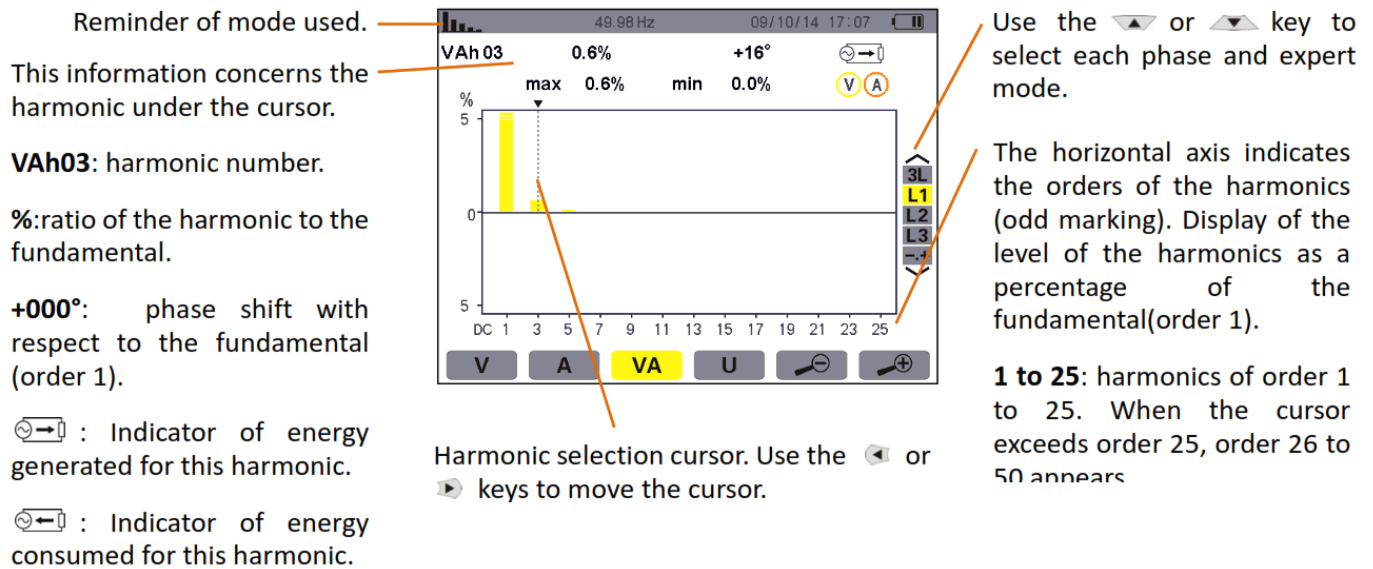


Figure 7-7: example of L1 apparent power harmonics display

Note: Filters L2 and L3 display the apparent power of the harmonics for phases 2 and 3, respectively. The screen is identical to the one displayed for filter L1.

7.5. Phase-to-phase voltage

The **U** sub-menu is available only for three-phase connections when the voltage ratios of phases 1, 2, and 3 are equal. This sub-menu displays the harmonics of the phase-to-phase voltage.

7.5.1. The 3L phase-to-phase voltage harmonic display screen

The following information is displayed:

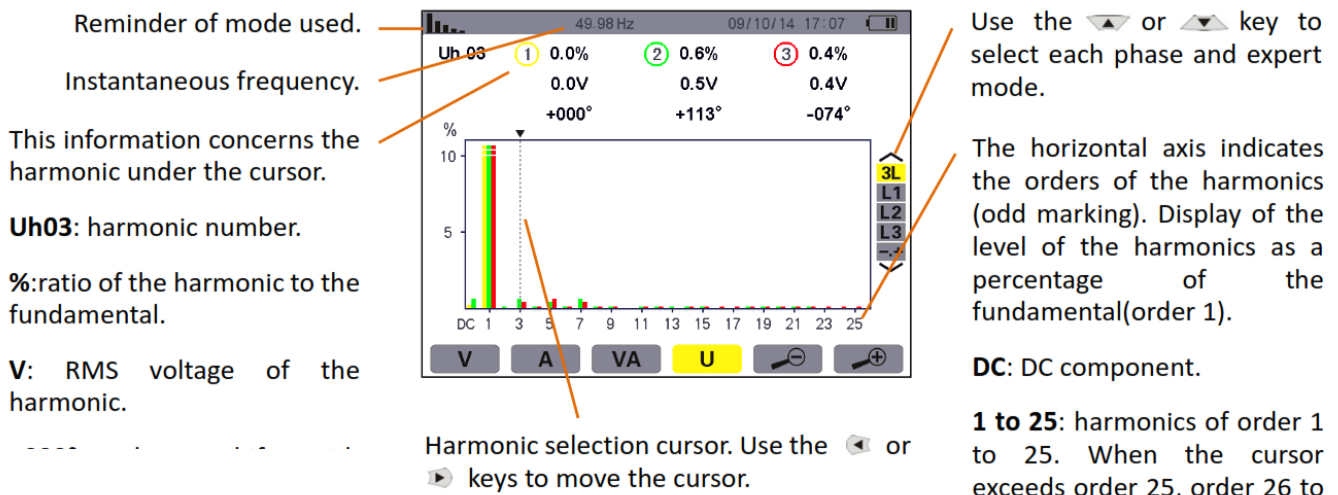


Figure 7-8: example of 3L phase-to-phase voltage harmonics display

7.5.2. The L1 phase-to-phase voltage harmonics display screen

The following information is displayed:


This information concerns the harmonic under the cursor.

Uh 03: harmonic number. %: ratio of the harmonic to the fundamental.

V: RMS voltage of the harmonic.

+000°: phase shift with respect to the fundamental (order 1).

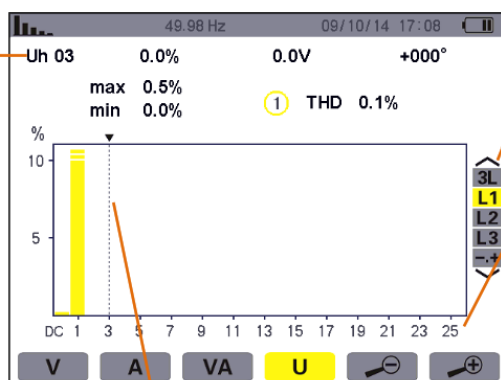max – min: ratio of maximum and minimum harmonic(reset



Use the or key to select each phase and expert mode.

The horizontal axis indicates the orders of the harmonics (odd marking). Display of the level of the harmonics as a percentage of the fundamental(order 1).

DC: DC component.

1 to 25: harmonics of order 1 to 25. When the cursor exceeds order 25. order 26 to

Harmonic selection cursor. Use the or keys to move the cursor.

Figure 7-9: example of L1 phase-to-phase voltage harmonics display

7.6. Expert mode

The model is available with a three-phase connection only when the ratios of the three phases are equal. It is used to display the influence of the harmonics on the heating of the neutral and rotating machines. To display expert mode press the or keys of the keypad. The selection is highlighted in yellow and the screen simultaneously displays the expert mode.

From this screen, two sub-menus, and , are available (see next page).

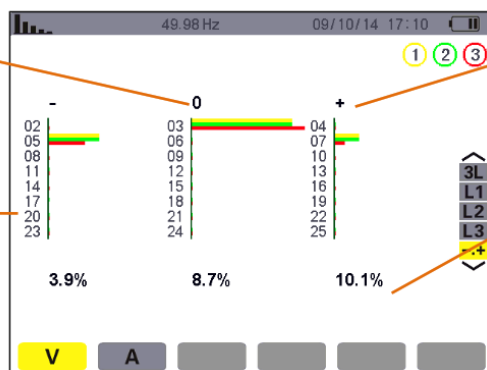
7.6.1. The phase-to-phase voltage expert mode display screen

The sub-menu displays the influence of the harmonics of the phase-to-neutral voltage on the heating of the neutral and rotating machines.

The following information is displayed:

Harmonics inducing a zero sequence.

Harmonics inducing a negative sequence.



Harmonics inducing a positive sequence.

%; ratio of the harmonic to the fundamental.

Figure 7-10: the phase-to-neutral voltage expert mode screen

7.6.2. The current expert mode display screen

The sub-menu displays the influence of the harmonics of the current on the heating of the neutral and rotating machines.

The following information is displayed:

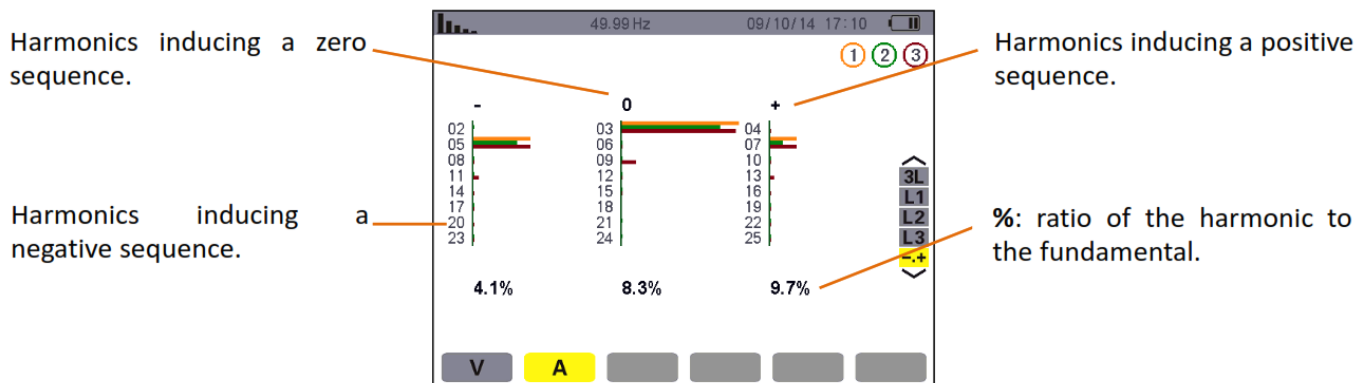



Figure 7-11: the current expert mode screen

WAVEFORM KEY

The  key is used to display the current and voltage curves, along with the values measured and those calculated from the voltages and currents (except for power, energy, and harmonics).

8.1. Available sub-menus

The sub-menus are listed on the screen below and described individually in the paragraphs that follow. The type of measurement is selected using the yellow keys on the keypad below the screen.

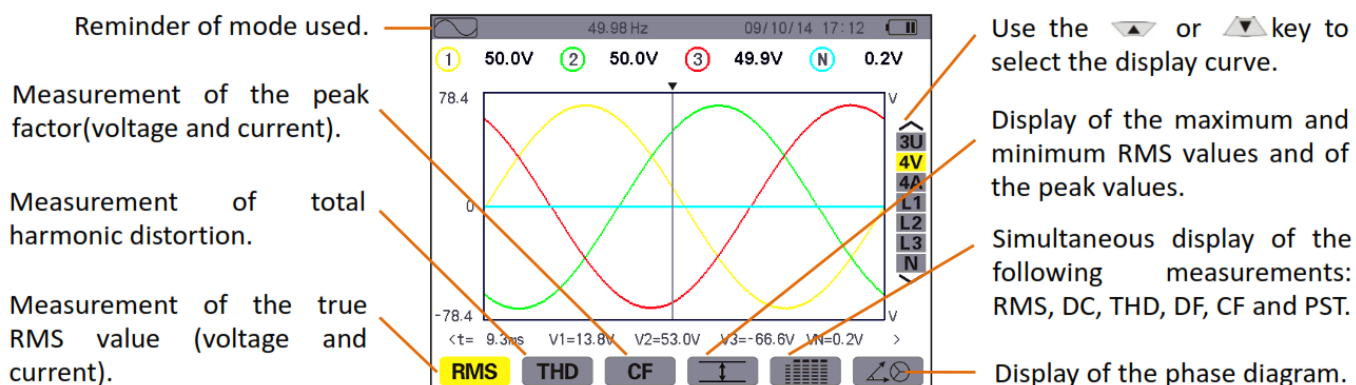


Figure 8-1: Waveform mode screen

8.2. Measurement of the true RMS value

The **RMS** sub-menu displays the waveforms over one period of the signals measured and the true RMS voltage and current.

Note: The choice of curves to be displayed depends on the type of connection (see § 5.6):

- Single-phase: no choice (L1)
- Two-phase: 2V, 2A, L1, L2
- Three-phase, 3- or 4-wire: 3U, 3V, 3A, L1, L2, L3
- Three-phase, 5-wire:

★ For **THD**, **CF** and : 3U, 3V, 3A, L1, L2, and L3

★ For **RMS**,  and : 3U, 4V, 4A, L1, L2, L3, and N

The screen snapshots shown as examples are those obtained with a three-phase 5-wire connection.

8.2.1. The 3U display screen

This screen displays the three phase-to-neutral voltages of a three-phase system.

The following information is displayed:

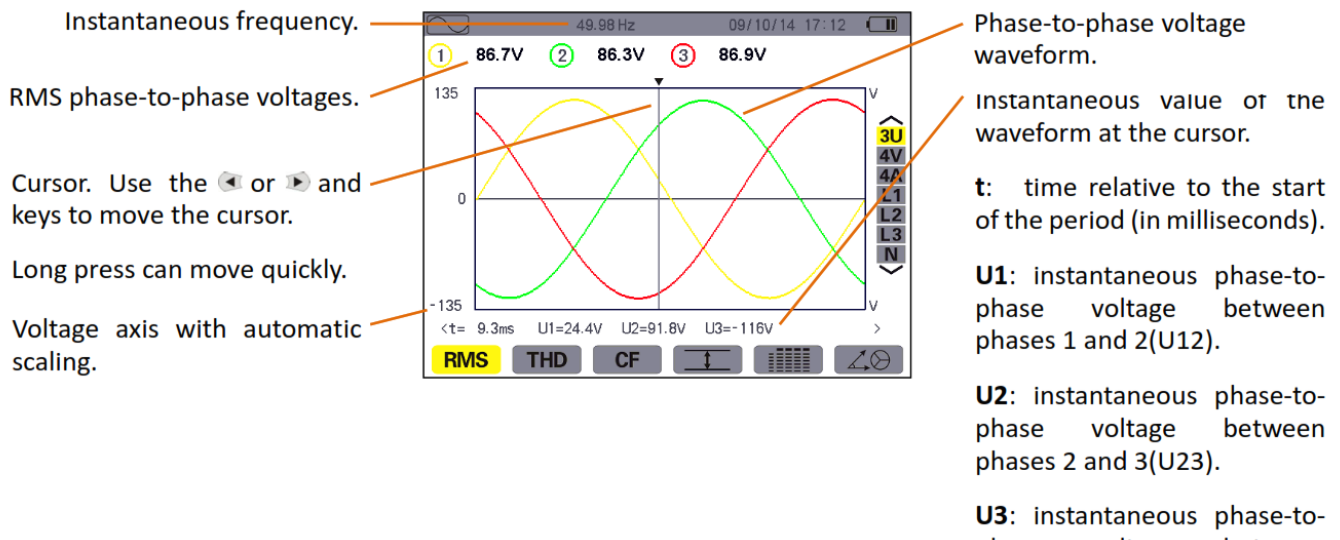


Figure 8-2: the 3U RMS display screen

8.2.2. The 4V RMS display screen

This screen displays the three phase-to-neutral voltages and the neutral-to-earth voltage of a three-phase system.

The following information is displayed:

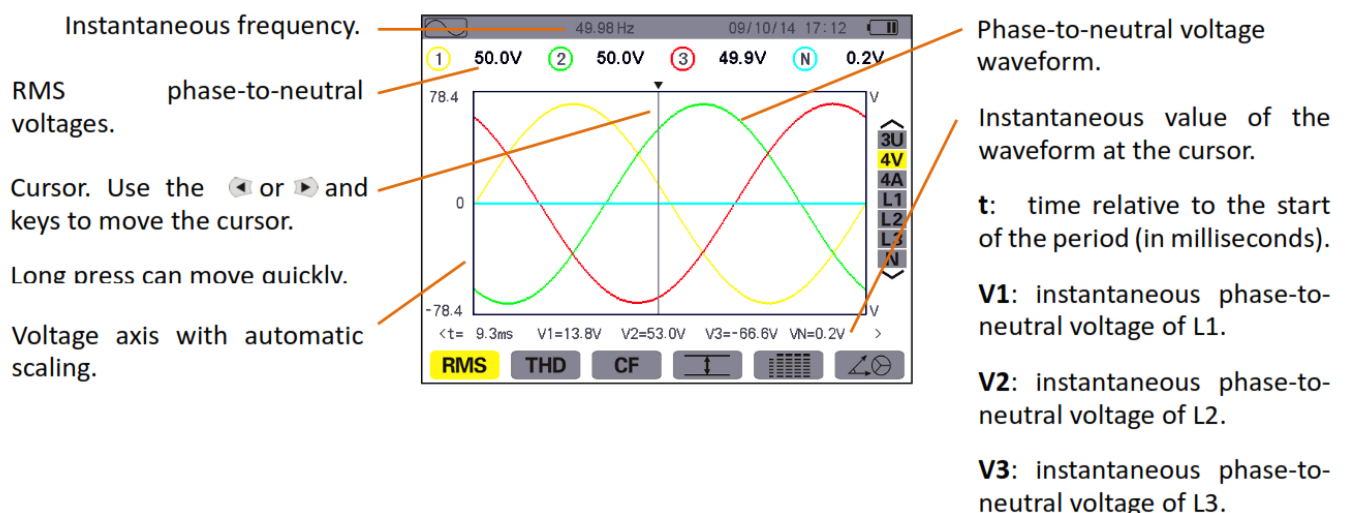


Figure 8-3: the 4V RMS display screen

8.2.3. The 4A RMS display screen

This screen displays the three-phase currents and the neutral current of a three-phase system.

The following information is displayed:

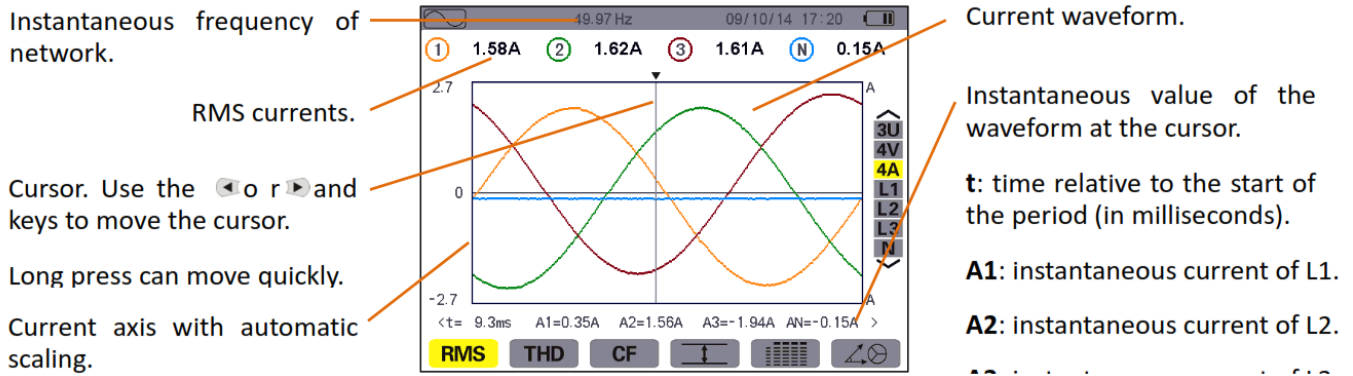


Figure 8-4: the 4A RMS display screen

8.2.4 The RMS display screen for neutral

This screen displays the neutral voltage with respect to the earth and the neutral current. The following information is displayed:

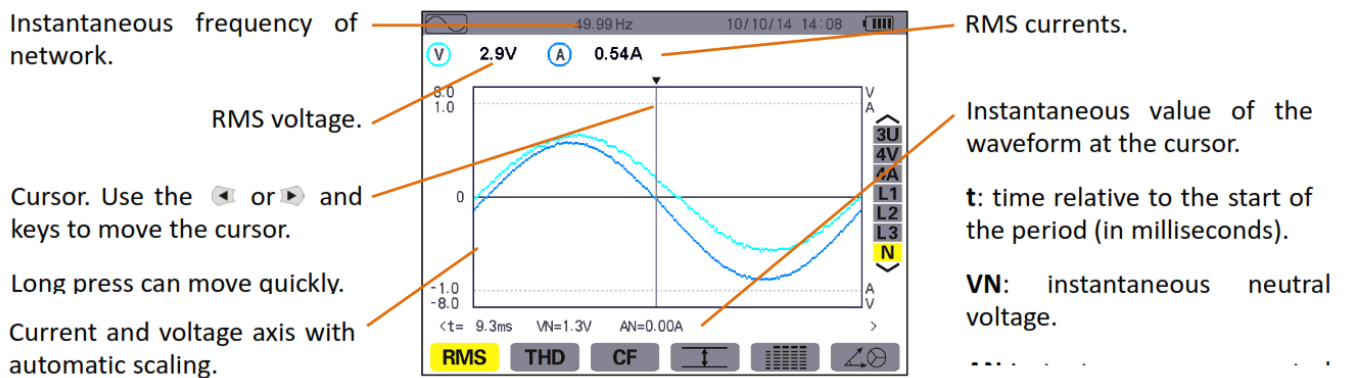


Figure 8-5: the RMS display screen for the neutral

Note: L1, L2, and L3 display the current and voltage in phases 1, 2, and 3, respectively. The screen is identical to the one displayed for the neutral.

8.3. Measurement of total harmonics distortion

The **THD** sub-menu displays the waveforms of the signals measured over one full cycle and the total voltage and current harmonic distortion.

8.3.1. The 3U display screen

This screen displays the phase-to-phase voltage waveforms for one period and the total harmonic distortion values.

The following information is displayed:

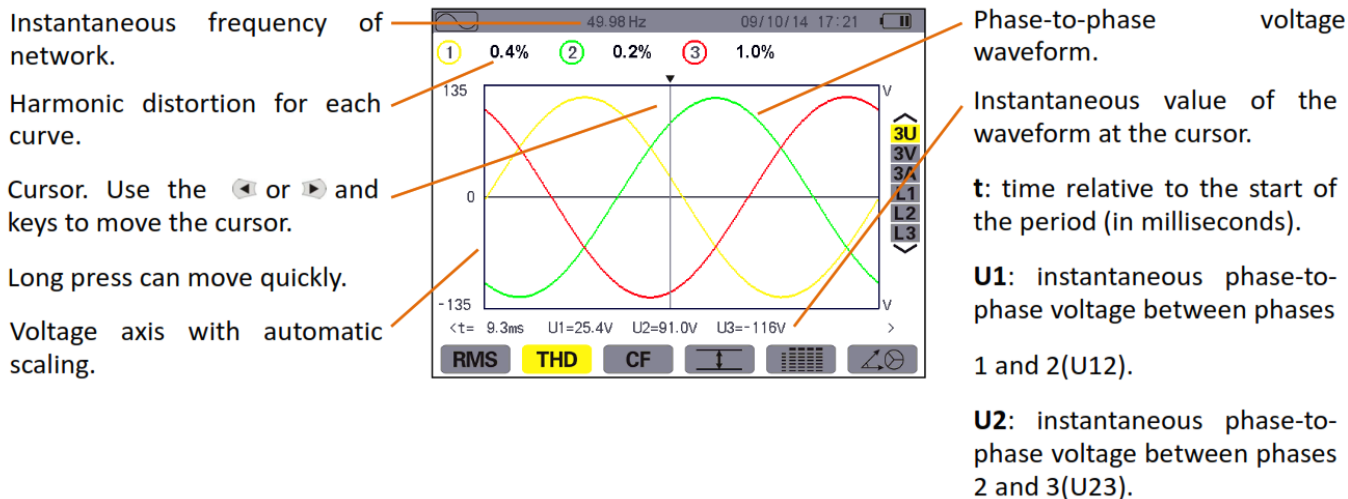


Figure 8-6: the 3U THD display screen

8.3.2. The 3V display screen

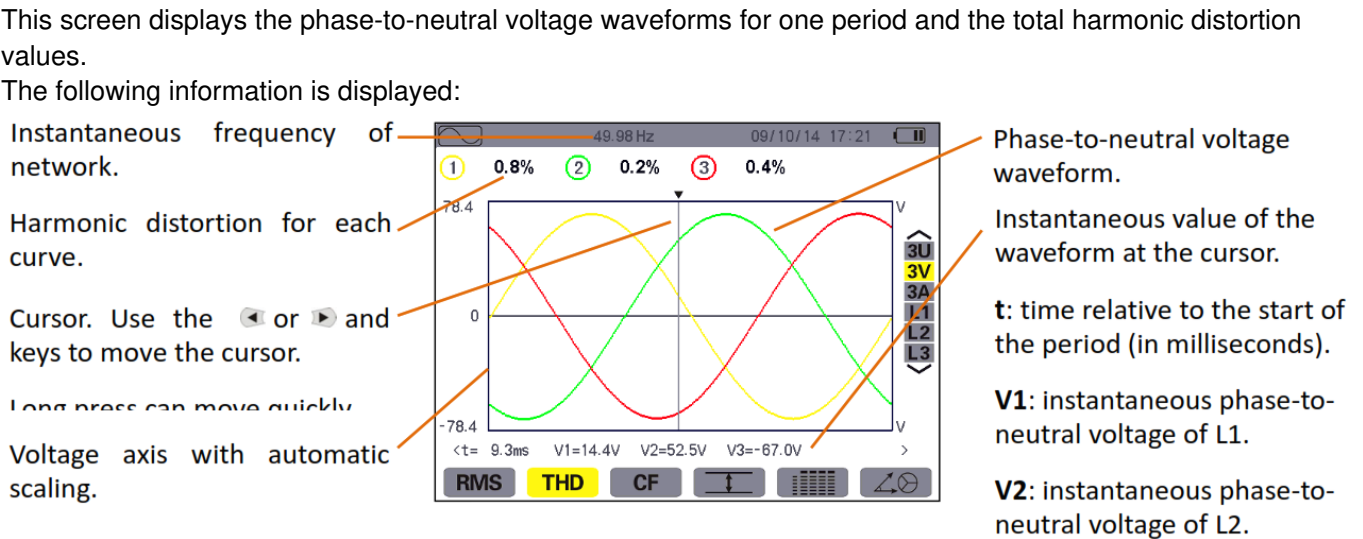


Figure 8-7: the 3V THD display screen

8.3.3. The 3A display screen

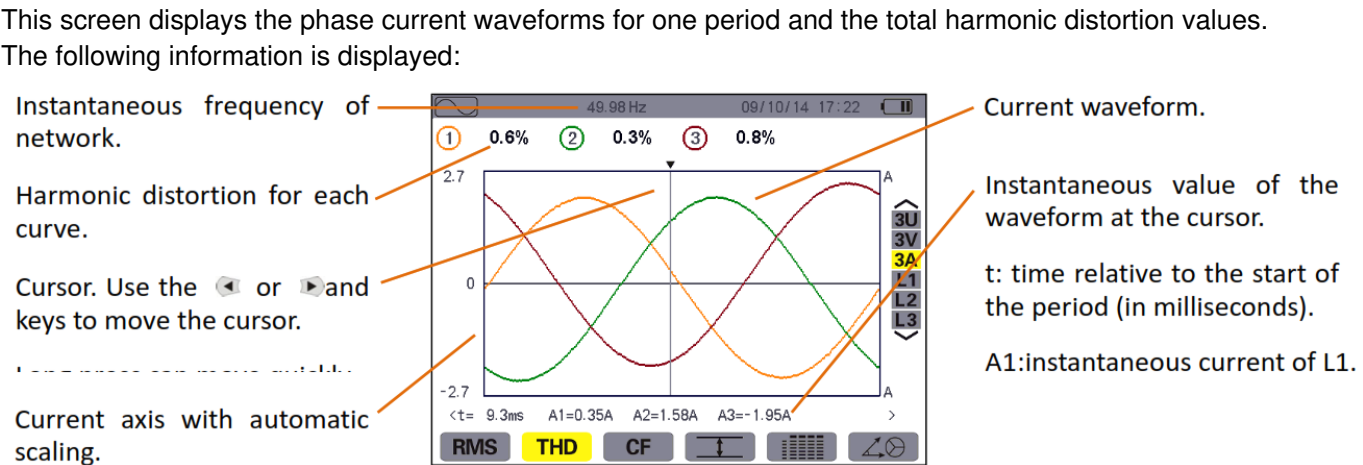


Figure 8-8: the 3A THD display screen

Note: L1, L2, and L3 display the total current and voltage harmonic distortion for phases 1, 2, and 3, respectively.

8.4. Measurement of the PEAK factor

CF

The **CF** sub-menu displays the waveforms of the signals measured over one period and the voltage and current peak factors.

8.4.1. The 3U CF display screen

This screen displays the phase-to-phase voltage waveforms of one period and the peak factors.

The following information is displayed:

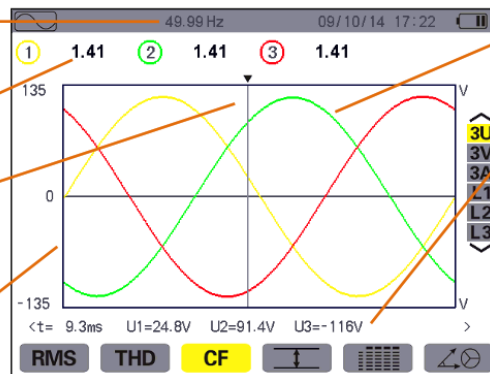
Instantaneous frequency of network.

Peak factor for each curve.

Cursor. Use the ◀ or ▶ and keys to move the cursor.

Long press can move quickly.

Voltage axis with automatic scaling.



Phase-to-phase voltage waveform.

Instantaneous value of the waveform at the cursor.

t: time relative to the start of the period (in milliseconds).

U1: instantaneous phase-to-phase voltage between phases 1 and 2 (U12).

U2: instantaneous phase-to-phase voltage between phases 2 and 3 (U23).

U3: instantaneous phase-to-

Figure 8-9: the 3U CF display screen

8.4.2. The 3V display screen

This screen displays the phase-to-neutral voltage waveforms of one period and the peak factors.

The following information is displayed:

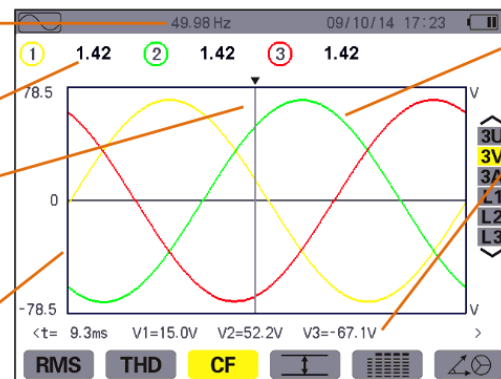
Instantaneous frequency of network.

Peak factor for each curve.

Cursor. Use the ◀ or ▶ and keys to move the cursor.

Long press can move quickly.

Voltage axis with automatic scaling.



Phase-to-neutral voltage waveform.

Instantaneous value of the waveform at the cursor.

t: time relative to the start of the period (in milliseconds).

V1: instantaneous phase-to-neutral voltage of L1.

V2: instantaneous phase-to-neutral voltage of L2.

V3: instantaneous phase-to-

Figure 8-10: the 3V CF display screen

8.4.3. The 3A CF display screen

This screen displays the current waveforms of one period and the peak factors.

The following information is displayed:

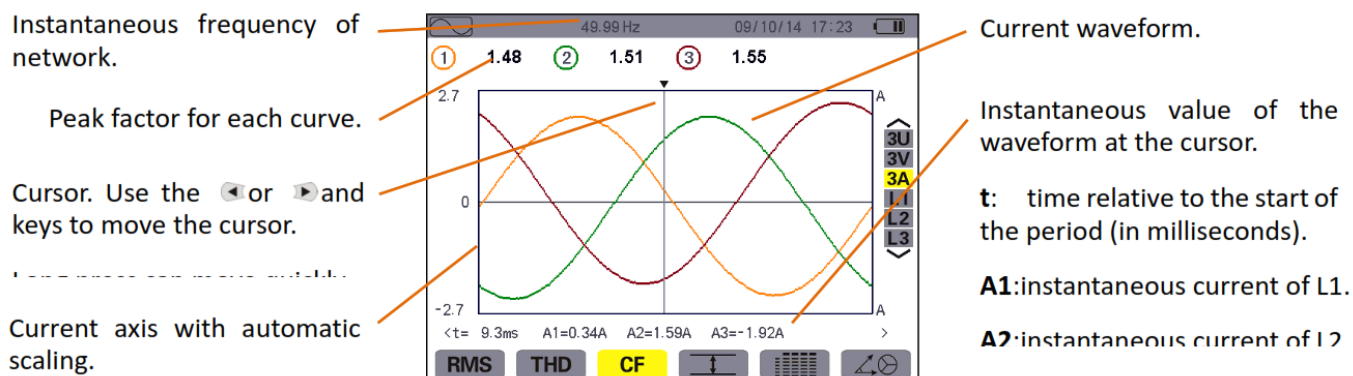



Figure 8-11: the 3A CF display screen

Note: L1, L2, and L3 display the current and voltage peak factors for phases 1, 2, and 3, respectively.

8.5. Measurement of extreme and mean voltage and current

The  sub-menu displays the maximum and minimum RMS voltage and current and the instantaneous positive and negative peak voltage and current.



8.5.1. The 3U Max.Min. -display screen

This screen displays the maximum and minimum RMS values and the instantaneous positive and negative phase-to-phase voltage peaks.

The following information is displayed:

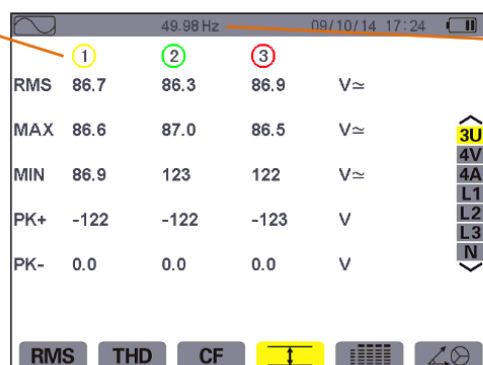
Columns of values for each curve (1, 2, and 3).

RMS: true RMS phase-to-phase voltage.

MAX: maximum RMS phase-to-phase voltage (since the switching on of the UT285C or since the last time the  or  key was pressed.)

MIN: maximum RMS phase-to-phase voltage (method as above).

PK+: maximum (positive) peak phase-to-phase voltage (method as above).



Instantaneous frequency of network.

Figure 8-12: the 3U Max.-Min. display screen

Note: The MAX. and MIN. RMS measurements are calculated every half cycle (i.e. every 10 ms for a 50-Hz signal).

The measurements are refreshed every 300 ms.



8.5.2. The 4V Max.-Min. display screen

This screen displays the maximum and minimum RMS values and the instantaneous positive and negative peaks of the phase-to-neutral voltages and of the neutral.

The following information is displayed:


Columns of values for each curve (1, 2, and 3).

RMS: true RMS phase-to-neutral voltage.

MAX: maximum RMS phase-to-neutral voltage (since the switching on of the UT285C or since the last time the  or  key was pressed.)

MIN: maximum RMS phase-to-neutral voltage (method as above).

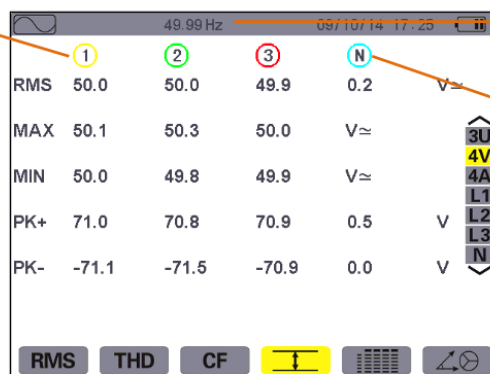PK+: maximum (positive) peak phase-to-neutral voltage (method as above).



Instantaneous frequency of network.

Column of values for the neutral: RMS, PK+, PK-.

Figure 8-13: the 4V Max.-Min. display screen

Note: The Max. and Min. RMS measurements are calculated every half cycle (i.e. every 10 ms for a signal at 50 Hz). The measurements are refreshed every 300 ms.



8.5.3. The 4A Max.-Min. display screen

This screen displays the maximum and minimum RMS values and the positive and negative instantaneous peak values of the phase and neutral currents.

The following information is displayed:


Columns of values for each curve (1, 2, and 3).

RMS: true RMS current.

MAX: maximum RMS current (since the switching on of the UT285C or since the last time the  or  key was pressed.)

MIN: maximum RMS current (method as above).

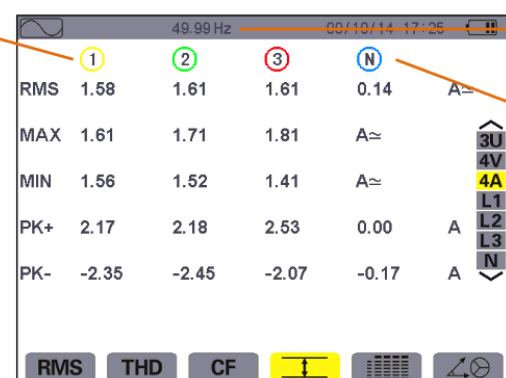PK+: maximum (positive) peak current (method as above).



Instantaneous frequency of network.

Column of values for the neutral: RMS, PK+, PK-.

Figure 8-14: the 4A Max.-Min. display screen

Note: The Max. and Min. RMS measurements are calculated every half cycle (i.e. every 10 ms for a signal at 50 Hz).

The measurements are refreshed every 300 ms.



8.5.4. The L1 Max.-Min. display screen

This screen displays the mean, maximum, and minimum RMS values and the instantaneous positive and negative peaks of the phase-to-neutral voltage and of the current of phase 1.

The following information is displayed:

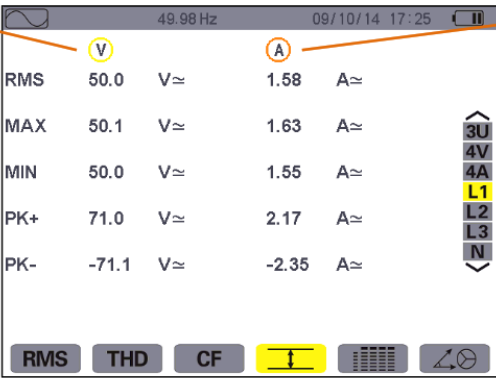
Column of voltage values.

RMS: true RMS phase-to-neutral voltage.

MAX: maximum RMS phase-to-neutral voltage (since the switching on of the UT285C or since the last time the  or  key was pressed.)

MIN: maximum RMS phase-to-neutral voltage (method as above).

PK+: maximum (positive) peak phase-to-neutral voltage (method as above).



The same information as for the phase-to-neutral voltage, but for the current.

Figure 8-15: the L1 Max.-Min. display

Note: The Max. and Min. RMS measurements are calculated every half cycle (i.e. every 10 ms for a signal at 50 Hz).

The measurements are refreshed every 300 ms.

L2, L3, and N display the maximum and minimum RMS values and the instantaneous positive and negative peaks of the phase-to-neutral voltage and of the current for phases 2, 3, and of the neutral-to-earth. The screen is identical to the one displayed for the L1.

8.6. Simultaneous display



The sub-menu displays all of the voltage and current measurements (RMS, DC, THD, DF, CF, PST, and KF).

8.6.1. 3U simultaneous display screen

This screen displays the RMS, DC, THD, DF, and CF values of the phase-to-phase voltages.

The following information is displayed:

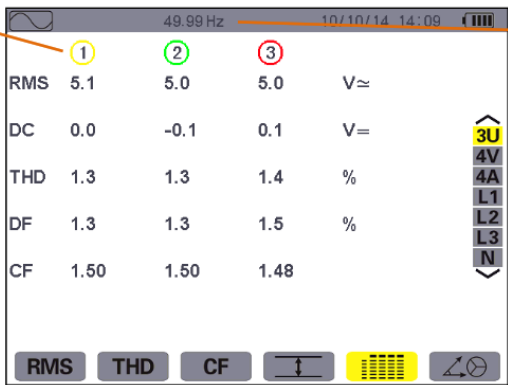
Column of phase-to-phase voltages (phases 1, 2, and 3).

RMS: true RMS value calculated over 1 second.

DC: DC component.

THD: total harmonic distortion.

DF: distortion factor



Instantaneous frequency of network.

Figure 8-16: 3U simultaneous display screen

8.6.2. 4V simultaneous display screen

This screen displays the RMS, DC, THD, DF, CF, and PST values of the phase-to-neutral voltages and of the neutral.

The following information is displayed:

Column of phase-to-phase voltages (phases 1, 2, and 3).

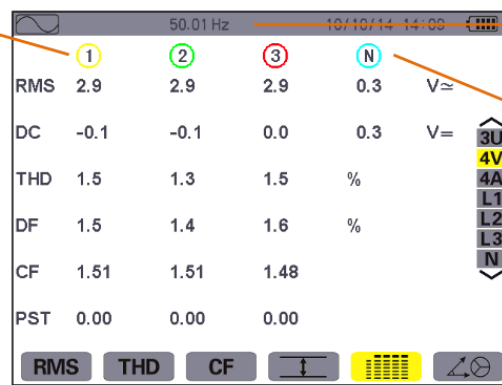
RMS: true RMS value calculated over 1 second.

DC: DC component.

THD: total harmonic distortion.

DF: distortion factor.

CF: peak factor calculated



Instantaneous frequency of network.

Column of values for the neutral: RMS, DC.

Figure 8-17: 4V simultaneous display screen

8.6.3. 4A simultaneous display screen

This screen displays the RMS, DC, THD, DF, CF, and KF values of the phase and neutral currents.

The following information is displayed:

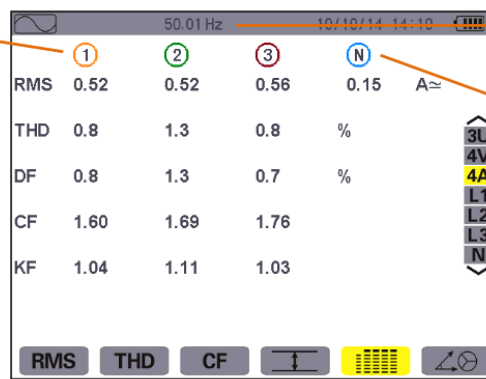
Column of phase-to-phase voltages (phases 1, 2, and 3).

RMS: true RMS value calculated over 1 second.

DC: DC component.

THD: total harmonic distortion.

DF: distortion factor.



Instantaneous frequency of network.

Column of values for the neutral: RMS.

Figure 8-18: 4A simultaneous display screen

8.6.4. L1 simultaneous display screen

This screen displays the RMS, DC, THD, DF, CF, and KF values of the phase and neutral currents.

The following information is displayed:

Column of voltage values.

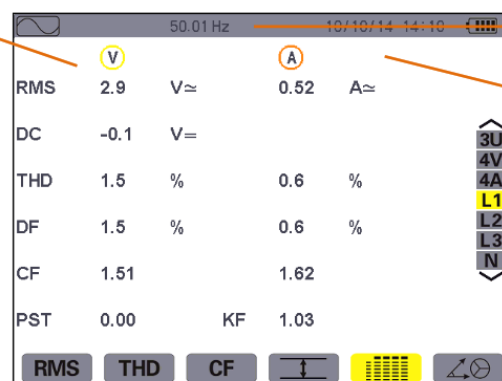
RMS: true RMS value calculated over 1 second.

DC: DC component.

THD: total harmonic distortion.

DF: distortion factor.

CF: peak factor calculated



Instantaneous frequency of network.

Column of current values.

RMS: true RMS value calculated over 1 second.

THD: total harmonic distortion.

DF: distortion factor.

CF: peak factor calculated

Figure 8-19: L1 simultaneous display screen

Note: L2 and L3 provide the simultaneous display of the current and voltage for phases 2 and 3, respectively.

8.6.5. Screen for simultaneous display of neutral

This screen displays the RMS voltage and current of the neutral, the DC component of the neutral voltage.

8.7. Display of phasor diagram



The sub-menu displays a vector representation of the fundamentals. It indicates their associated quantities: the modulus of the vectors, phases, and unbalances of the voltages and currents.

8.7.1. The 3V phasor diagram display screen

This screen displays a vector representation of the fundamentals. It indicates their associated quantities: the modulus of the vectors and unbalances of the phase-to-neutral voltages, the phase angle of phase-to-neutral voltage with respect to current.

The following information is displayed:


Column of values for each vector (1, 2, and 3).

|V1|, |V2| and |V3|: moduli of the vectors of the fundamentals of the phase-to-neutral voltages (phases 1, 2 and 3).

Φ 12: phase angle of the fundamental of phase 1 with respect to the fundamental of phase 2.

Φ 23: phase angle of the fundamental of phase 2 with respect to the fundamental of phase 3.

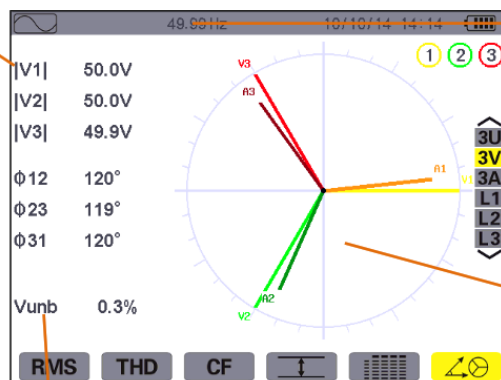Φ 31: phase angle of the fundamental of phase 3 with respect to the fundamental of phase 1.



Instantaneous frequency of network.

Channel number and color.

Vector diagram.

Vunb: voltage unbalance.

Figure 8-20: the screen Displaying the Vector diagram in 3V

8.7.2. The 3U phasor diagram display screen

This screen displays a vector representation of the fundamentals. It indicates their associated quantities: the modulus of the vectors, phase angle, and unbalances of the phase-to-phase voltages.

The displayed information is identical to that described in § 8.7.1 but relative to the phase-to-phase voltages.

8.7.3. The 3A phasor diagram display screen

This screen displays a vector representation of the fundamentals. It indicates their associated quantities: the modulus of the vectors, phase angle, and unbalances of the currents.

The displayed information is identical to that described in § 8.7.1 but relative to the current.

8.7.4. The L1 phasor diagram display screen

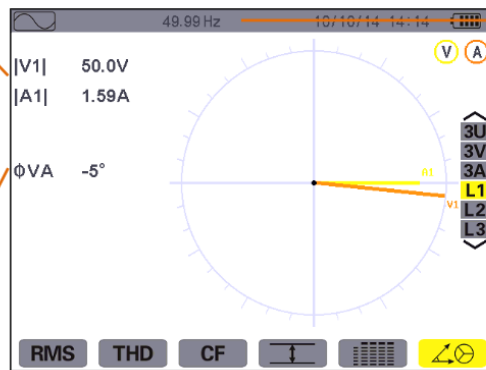
This screen displays a vector representation of the fundamentals. It indicates their associated quantities: the modulus of the vectors of voltage and current of phase 1, phase angle of voltage with respect to the current of phase

1. The following information is displayed:

V1: modulus of the vector of the fundamental of the phase-to-neutral voltage of phase 1.

A1: modulus of the vector of the fundamental of the phase-to-neutral current of phase 1.

ϕVA : phase angle of phase 1 with respect to current.




Instantaneous frequency of network.

Channel number and color.

Figure 8-21: the screen Displaying the Vector diagram in L1

Note: L2 and L3 display a vector representation of the fundamentals. It indicates their associated quantities: the modulus of the vectors of voltage and current of phases 2 and 3, respectively, and the phase angle of voltage with respect to the current of phases 2 and 3, respectively.

ALARM MODE KEY

The  mode detects overshoots of thresholds (Vrms, Arms, Arms, PST, Vcf, Ucf, Acf, Vunb, Aunb, Hz, KF, Vth, And, Add, |W|, |VAR|, VA, |cos Φ|, |PF|, |tan Φ| Vh, Uh, Ah, and |VAh|) programmed in the configuration mode. The user should program an alarm threshold (hysteresis) first and then start the alarm campaign. The values to be monitored:

- ★were defined by the Configuration / Alarm mode screen (see § 5.10).
 - ★select the setting parameters (the red solid dot indicates selected, and the red hollow dot indicates not selected).
- You can capture over 12,800 alarms. Stored alarms can subsequently be transferred to a PC to save (see the corresponding manual).

9.1. Available submenus

The submenus are listed on the screen below and described individually in the paragraphs that follow. The sub-menus are selected using the yellow keys on the keypad below the screen.

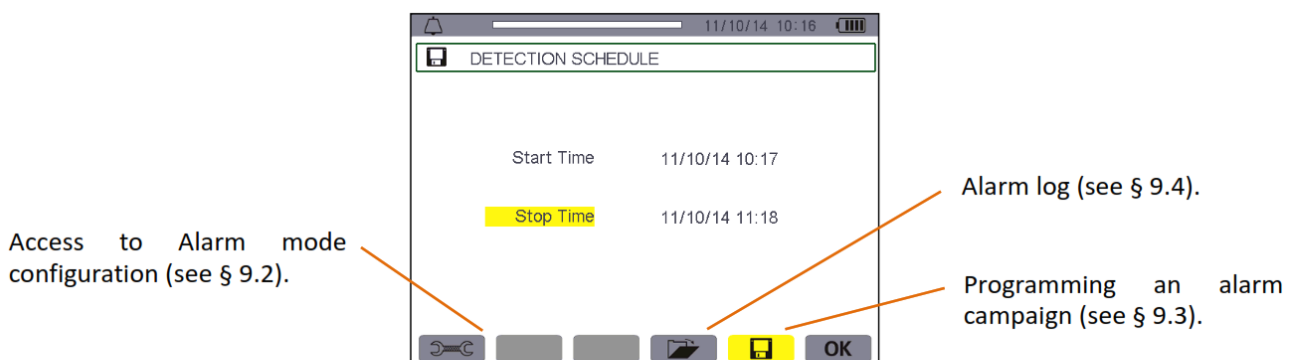




Figure 9-1: the Alarm Mode screen

The **OK** and  icons have the following functions:

- ★**OK:** Validating the programming of a campaign and starting the alarm campaign (see § 9.3.2).
- ★  : Voluntary stoppage of alarm campaign (see § 9.3.3).

9.2. Alarm mode configuration

The  submenu displays the list of alarms configured (see § 5.10). This shortcut key lets you define or change alarm configurations.

The following information is displayed:

Reminder of the mode used.

Selected (red solid dot) or cancel the alarm Type of alarm(VAh, Ah, Uh, Vh, Tan, PF, Cos, VA, VAR, W, Athd, Uthd, Vthd, KF, Hz, Aunb, Vunb, Acf, Ucf, Vcf, PST, Arms, Urms, Vrms).

Order of harmonics (between 0 and 50, for Vah, Ah, Uh and Vh).

Alarm filter (3L: 3 phases monitored individually, or N: monitoring of neutral, orΣ: monitoring of the sum (VA, VAR, W), or \bar{X} : monitoring of the mean(Tan, PF, Cos).

Alarm ID	Alarm Type	Filter	Direction	Threshold	Duration	Hysteresis
01	Vrms	3L	>	0110V	01s	1%
02	Urms	3L	>	0200V	10s	2%
03	Arms	N	>	0100mA	20min	5%
04	Vh	05 3L	>	0.00%	00s	1%
05	Vthd	3L	>	0.20%	02s	1%

The hysteresis (choice values: 1%,2%,5% or 10%).

The minimum duration above or below the threshold required for alarm validation(can set 0 second to 99 minutes).

Alarm triggering threshold.

Alarm direction (> or < triggered when the trigger threshold).

Icon for browsing pages. Press the yellow keys corresponding to these icons to display the pages.

Figure 9-2: Alarm mode configuration screen

Ac
Go

Reminder: Use the or keys to browse vertically in the fields. Use the or keys to browse horizontally in the fields.

Proceed as follows to configure an alarm:

★ Select the field by pressing . The arrows appear.

★ Enter values by pressing or, then validate via. The field is highlighted in yellow.

Do the same for all values to be entered in the fields.

★ Activate the configured alarm by placing the yellow cursor on the browsing column and pressing . The red solid dot indicates selected. When the condition is met the alarm can be triggered, generating the alarm log.

Note: To deactivate the alarm, repeat the last step.

★Press to return to the Programming a campaign screen.

9.3. Programming an alarming campaign

The submenu is used to specify the start and stop times for an alarming campaign.

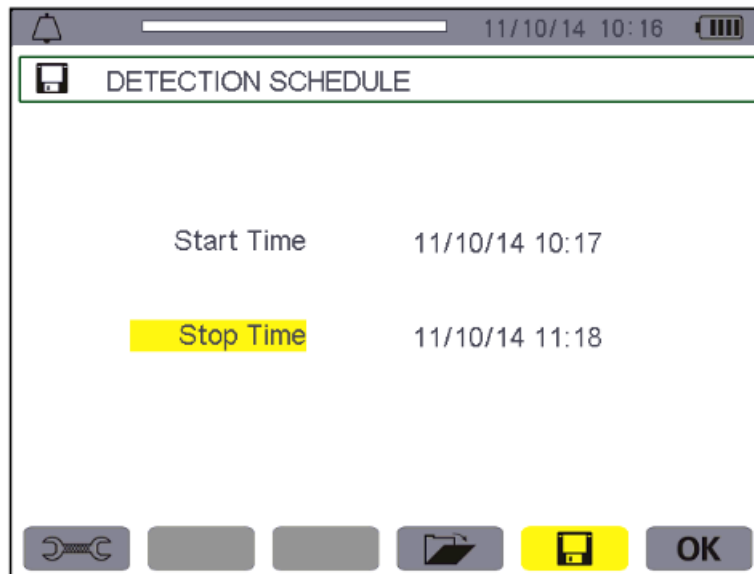











Figure 9-3: Example of an alarm campaign programming screen


9.3.1. Stage 1: programming the start/stop times










Proceed as follows:

★ Select the Start field using the  or  key. The selected field is highlighted in yellow. Press  to enter the values. The arrows   appear in the start date and time campaign programming field.

Press  or  to increment or decrement a value and  or  to move to the next item.

Note: The start date and time must be after the current date and time.

★ Press  to validate the programming of the Start date and time.



★ Select the Stop field using the  or  key. The selected field is highlighted in yellow. Press  to enter the values. The arrows   appear in the Stop date and time campaign programming field. Press  or  to increment or decrement a value and  or  to move to the next item.

Note: The Stop date and time must be after the start date and time.


★ Press  to validate the programming of the Stop date and time.

9.3.2. Stage 2: Starting the alarm campaign



Press the yellow key corresponding to the **OK** icon to start the alarm campaign between the start and stop times you specified.


- The OK icon disappears and the  icon appears in its place.
- The Campaign on standby message is displayed while awaiting the start time and the  icon blinks in the screen's top display bar.
- The Campaign running message is displayed when the Start time is reached.
- The Campaign schedule screen and **OK** icon are displayed when the Stop time is reached. You can then program another campaign.

9.3.3. Voluntary stoppage of alarm campaign

The alarm campaign can be voluntarily stopped before the Stop date and time by pressing the yellow key corresponding to the  icon (bottom right-hand corner of the screen). The **OK** icon then reappears in its place.

9.4. Viewing the alarm log

The  submenu displays the alarm log. The log can contain up to 12,800 alarms. Press the yellow key corresponding to the  icon to view this alarm log.

Note: the type of connection selected in the  mode does not affect which alarm filters can be chosen and which parameters are monitored. Users are responsible for these choices.
The following information is displayed:

Alarm log memory usage. The black part of the bar corresponds to the fraction of memory used.

Alarm date and time.

Target of the alarm detected.

Parameter of the alarm detected.

11/10/14 10:37

ALARM LIST

08/10/13 09:25	L2	Uthd	>0.2%	0.5%	3.00s
08/10/13 09:25	L3	Uthd	>0.2%	0.5%	3.00s
08/10/13 09:25	L1	Vthd	>0.2%	0.5%	3.00s
08/10/13 09:25	L2	Vthd	>0.2%	0.5%	3.00s
08/10/13 09:25	L3	Vthd	>0.2%	0.5%	3.00s
08/10/13 09:25	L1	KF	>0.20	0.50	3.00s
08/10/13 09:25	L2	KF	>0.20	0.50	3.00s
08/10/13 09:25	L3	KF	>0.20	0.50	3.00s

006/008

Trigger threshold and trigger direction > or <.

Extremum of the alarm detected (minimum or maximum).

Press  or  to select to display the alarm log corresponding trigger phase.

Alarm duration.

Figure 9-4: Alarm list screen

Reminder: At the alarm log, the default units of monitored parameters corresponding to the trigger threshold and trigger amplitude are as follows:
Table 9-1

Monitored parameters	Default units	Units with the suffix
Arms	A	m: express mA k: express kA
Vrms/Urms	V	k: express kV
W/VAR/VA	W/Var/VA	K: express kW/kVar/kVA M: express MW/MVar/MVA
Hz	Hz	

9.5. Deleting the alarm log







The  submenu is used to delete the whole log. To do this, proceed as follows:
Select the submenu by pressing the yellow key corresponding to the  icon. The icon displayed yellow indicates ready to delete, then press the yellow key corresponding to the  icon to cancel the delete state.
The  icon displayed in gray indicates don't delete.
In the state of ready to delete, press  to delete the whole alarm log. The log is empty.



Figure 9-5: Alarm list screen in delete mode

TREND MODE KEY

The  mode records changes to parameters previously specified in the Configuration/Trend mode screen (see § 5.9).

10.1. Available sub-menus

The sub-menus are listed on the screen below and described individually in the paragraphs that follow. The sub-menus are selected using the yellow keys on the keypad below the screen.

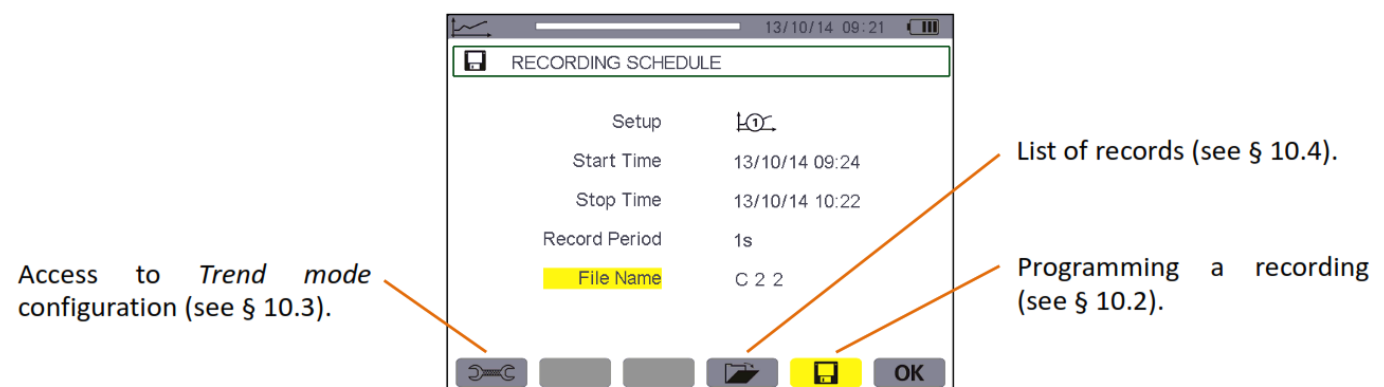



Figure 10-1 Trend mode screen

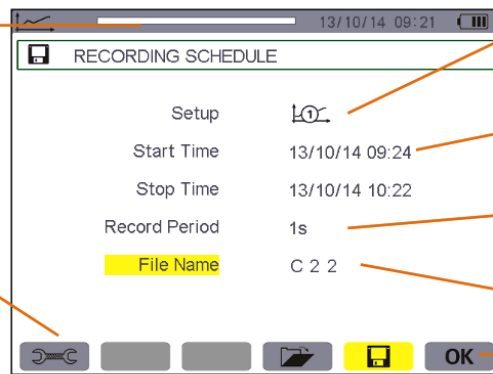
The **OK** icon confirms the programming of a recording (see § 10.2).

10.2. Programming and start recording

The  submenu specifies the parameters of a new recording campaign.

SD memory card usage. The black part of the bar corresponds to the fraction of memory used.

Access to *Trend mode* configuration (see § 10.3).



Select the recording parameters configuration (see § 10.3).

Start time and stop time of record.

Record period, that is the interval time.

File name.

Press yellow key corresponding to the OK to start record.

Figure 10-2: Example of preset recording screen

10.2.1. Stage 1: programming of parameters

Proceed as follows:

★ Select the Configuration field using the or keys. The selected field is highlighted in yellow. Press to enter the type of configuration. The arrows appear.

★ Select the configuration to be used by browsing using the or keys. Press to validate.

Reminder: Configurations were defined in the Configuration / Trend mode screen (see § 5.9). The configuration procedure is also described in § 10.3.

★ Select the Start field using the or keys. The selected field is highlighted in yellow. Press to enter the values. The arrows appear in the recording start date and time programming field. Press or to increment or decrement a value and or to switch year, month, day, hour, or minute.

Note: The start date and time must be later than the current date and time.

★ Press to validate the programming of the Start date and time.

★ Select the **Stop** field using the or keys. The selected field is highlighted in yellow. Press to enter the values. The arrows appear in the recording stop date and time programming field. Press or to increment or decrement a value and or to switch year, month, day, hour, or minute.

Note: The stop date and time must be later than the start date and time. The longest recording time can be programmed see § 10.6.4.

★ Press to validate the programming of the Stop date and time.

★ Select the Period field using the or keys and press to enter the value. The arrows appear.

★ Press or to increment or decrement the possible values (1 s, 5 s, 20 s, 1 min, 2 min, 5 min, 10 min, or 15 min).


★ Press to validate.

Note: The recording interval period is the time over which the measurements of each recorded value are averaged (arithmetic mean). That is how often a data record is.

★ Press or to highlight the Name box in yellow and press to enter edit mode. Enter the name of the recording (not more than 8 characters, records shall use a different name, file name intermediate cannot appear spaces).

The available alphanumeric characters are the uppercase letters from A to Z and the digits from 0 to 9. Use the


or keys to display a character and or to move to the adjacent character.

★Press  to validate the name.

10.2.2. Stage 2: starting a programmed recording

- Press the yellow key corresponding to the **OK** icon (bottom right-hand corner of the screen) to begin recording between your specified start and stop times.

The **OK** icon disappears and the  icon appears in its place.

- The Recording on standby message is displayed while awaiting the start time and the  icon blinks in the screen's top display bar.
- The Recording running message is displayed when the start time is reached.

Progress of active recording.

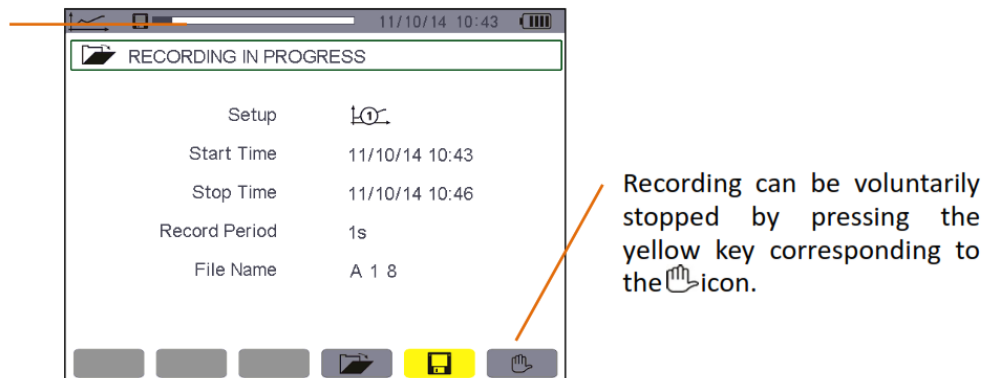



Figure 10-3: Display screen while recording is in progress


- The Recording schedule screen and **OK** icon (bottom right-hand corner of the screen) reappear when the stop time is reached. The **OK** icon then reappears in its place.

10.2.3. Voluntary stoppage of recording in progress

Recording can be voluntarily stopped before the stop date and time by pressing the yellow key corresponding to

the  icon (bottom right-hand corner of the screen). The **OK** icon then reappears in its place.

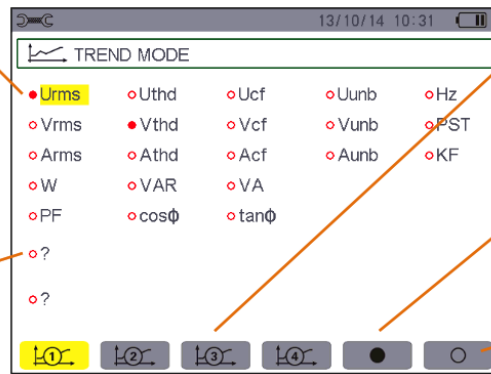
10.3. Trend mode configuration

The  submenu displays the list of trend recording configurations (see § 5.9). This shortcut key lets you specify or modify the trend recording configurations.

The following information is displayed:

List of monitoring parameters, press to move the cursor, then press to select or cancel select. Red solid dot indicates selected, red hollow dot indicates unselected.

VAh, Ah, Vh, and Uh harmonics recording configuration. "?" indicate not select any harmonic



Type of configuration icons (to).

Select all the parameters.

Cancel select all the parameters.

Figure 10-4: Trend mode monitoring parameter configuration screen

Proceed as follows to configure a recording:

Example for configuration 1:

★ Press the yellow key corresponding to the icon. It is displayed on a yellow ground.

★ Select values by moving the yellow cursor using the or and or keys, then press to validate. The red solid dot indicates validation.

Reminder: You can record the following values:

Unit	Designation
Terms	RMS phase-to-phase voltage(2 ϕ , 3 ϕ).
Utd	Total harmonic distortion of the phase-to-phase voltage(2 ϕ , 3 ϕ).
Ucf	Crest (peak) factor of phase-to-phase voltage(2 ϕ , 3 ϕ).
Uub	Phase-to-Phase voltage unbalance(2 ϕ , 3 ϕ).
Hz	Network frequency.
Vrms	RMS phase-to-neutral voltage.
Ltd	Total harmonic distortion of the phase-to-neutral voltage.
If	Crest factor of phase-to-neutral voltage.
Vung	Phase-to-neutral voltage unbalance(2 ϕ , 3 ϕ).
PST	Short-term flicker.
Arms	RMS current.
Add	Total harmonic distortion of the current.
Act	Crest factor of current.
Aunt	Current unbalance(2 ϕ , 3 ϕ).
KF	K factor.
W	Active power.
VAR	Reactive power.
VA	Apparent power.
PF	Power factor.
Cos ϕ	The phase shift of power factor.
Tan ϕ	Tangent.
?	See the comment below.


Features specific to the last two lines.
These are recalled below:



Figure 10-5: These two lines involve harmonics

The starting harmonic order to be selected.

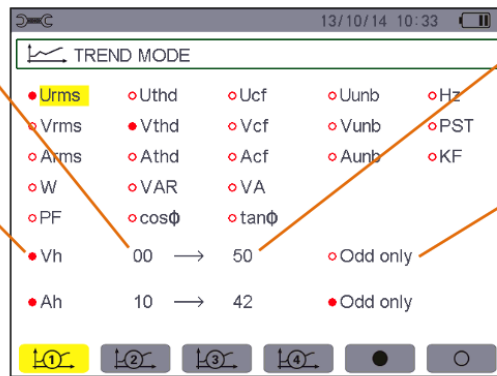VAh, Ah, Vh, and Uh harmonics monitoring configuration. "?" indicates not select any harmonic



The last harmonic order to be selected.

Select recording odd only harmonics.

Figure 10-6: Trend mode recording parameter configuration screen

These two lines involve the recording of Vah, Ah, Vh, and Uh variable harmonics. You can select the ranks of harmonics to be recorded (between 0 and 50) for each of these harmonics and odd-only harmonics within this range. Proceed as follows:

- **To enter the value to be recorded:** with line o? highlighted in yellow, press . The arrows appear. Select the value (Vah, Ah, Vh, and Uh) for which harmonics are to be recorded by pressing or . The red solid dot identifies your selection.

Confirm by pressing . The values field is highlighted in yellow.

- **To select the starting harmonic order:** with the field highlighted in yellow, press . The arrows appear.

Select the order in which the harmonics are to be recorded by pressing or , then validate by pressing . Press or go to the next field.

- **To select the last harmonic:** with the second field (greater than or equal to the starting harmonic order) highlighted in yellow, press . Select the highest harmonic order to be recorded by pressing or , then validate by pressing . Press or go to the next field.

For the odd harmonics only:

To select or deselect this function, press . The red solid dot identifies your selection:

★ selected, only odd harmonics between the two orders of harmonics specified in the previous points are recorded.

★ not selected, all harmonics (even and odd) between the two orders of harmonics specified in the previous points are recorded.

10.4. Viewing the recording list

The submenu displays recordings already made. Press the yellow key corresponding to the icon to see the list.

The following data is displayed:

Alarm log memory usage. The black part of the bar corresponds to the fraction of memory used.

Recording name.



Recording stop time.



Recording start time.


Figure 10-7: Recording list display screen


10.5. Deleting recordings

The  submenu is used to delete recordings. Proceed as follows:

★Select the recording to be deleted using the  or  keys. The selected field is bolded.

★Select the submenu by pressing the yellow key corresponding to the  icon. The  icon displayed yellow indicates ready to delete, then press the yellow key corresponding to the icon to cancel the delete state.

The icon displayed in gray  indicate doesn't delete.

★In the state of ready to delete, press  to validate the deletion.

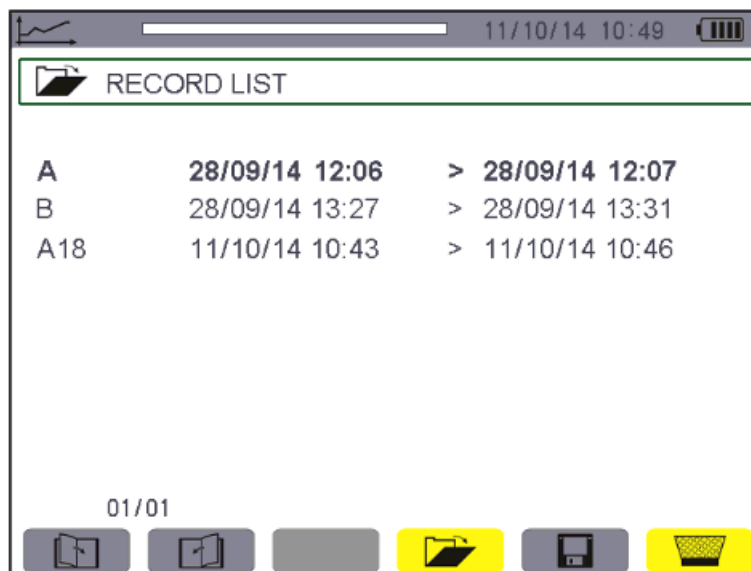



Figure 10-8: Recording list screen in delete mode.

10.6. Viewing the records

10.6.1. Characteristics of the record

Record parameters: name, start time, stop time, record period.

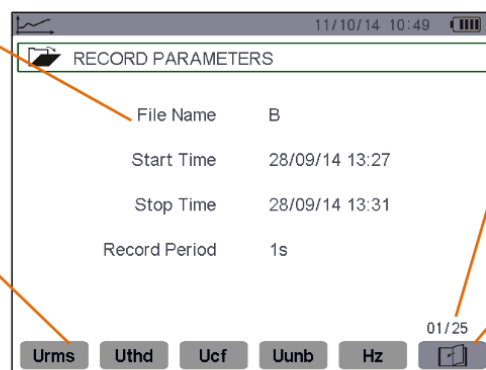Monitoring parameters of selected records. Press the yellow key corresponding to the parameter icon to open the corresponding curve.




The page number and the number of pages.

Press the yellow key corresponding to the icon to navigate in the following screen pages. It is also possible to use the and

Figure 10-9: Recording list sub-menu screen in trend mode

10.6.2. Trend curves

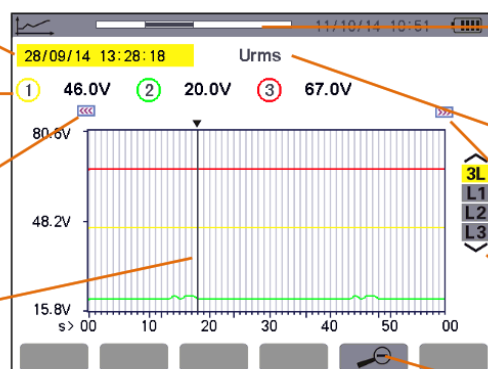Date of cursor.
Recorded values of the cursor.
There are trend curve on the left of the visible part.
Cursor. Use the or and keys to move the cursor.
Long press can move quickly



Position of the viewing window in the record, black represents the current screen.

Parameter name of trend chart curves.

There are trend curve on the right of the visible part.

To select the display curve, press the or key.

Zoom out, switch the time scale.


Figure 10-10: Vrms without MIN-AVG-MAX

Remark: Values of the cursor are dashes “—” indicate errors or missing values in the record.

The display period of this curve is 20 seconds. Since the period of the record is one second, each point of this curve corresponds to a value recorded in a one-second window once 20 seconds. There is therefore a substantial loss of information (19 values out of 20), but the display is rapid.

With the increase in the display period, the loss values will be more. In this case, the user can select to activate the MIN-AVG-MAX mode. After the MIN-AVG-MAX mode is activated, each point of the curve represents the mean of the total sampling points every period(such as the display period is 20 seconds, the sampling period is 1 second, each display point of the curve represents the mean of 20 values recorded every second.).

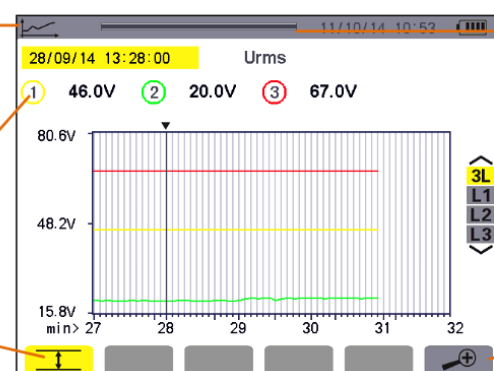Date of cursor.
Arithmetic mean of the display period of the cursor.
The MIN-AVG-MAX mode has been activated.



Parameter name of trend chart curves.

To select the display curve, press the or key.

Zoom in, switch the time scale.

Figure 10-11: Vrms with MIN-AVG-MAX

With the MIN-AVG-MAX mode activated, each point of this curve represents the arithmetic mean of 60 values recorded. This display is therefore more precise because there is no loss of information, but it is slower(display time

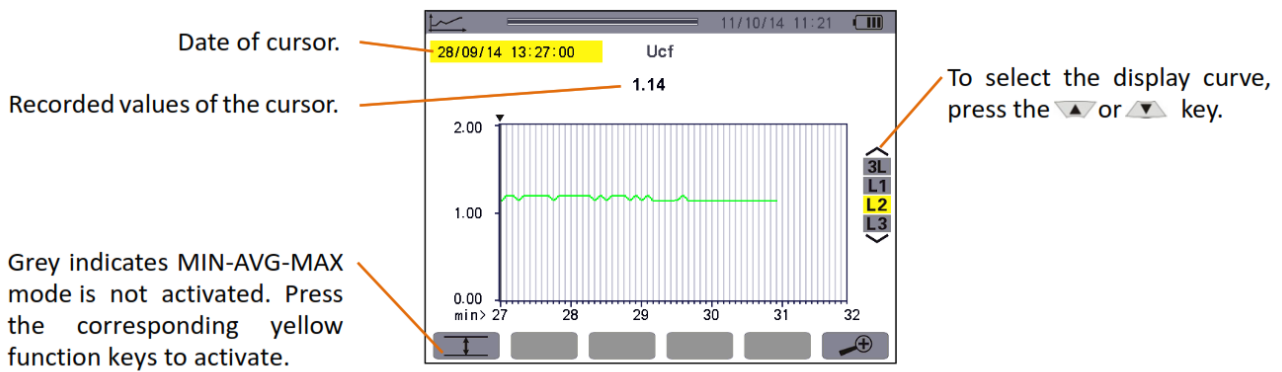


Figure 10-12: Ucf (L2) without MIN-AVG-MAX

With the MIN-AVG-MAX mode not activated, display the curve of 60 values recorded by the cursor, the display is rapid.

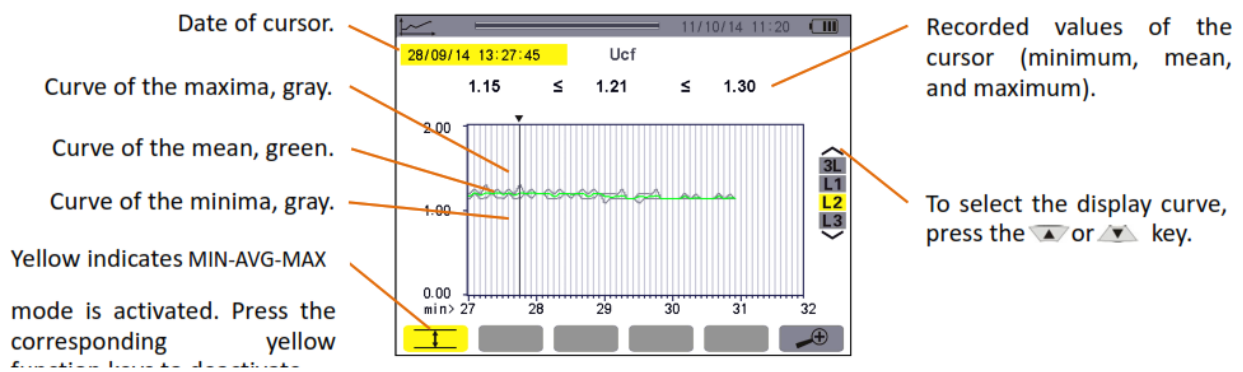


Figure 10-13: Ucf (L2) with MIN-AVG-MAX

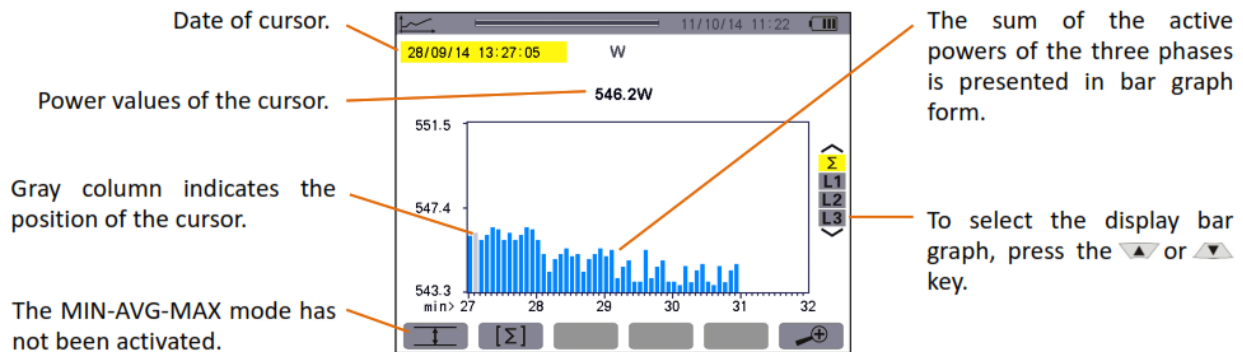


Figure 10-14: total active power without MIN-AVG-MAX

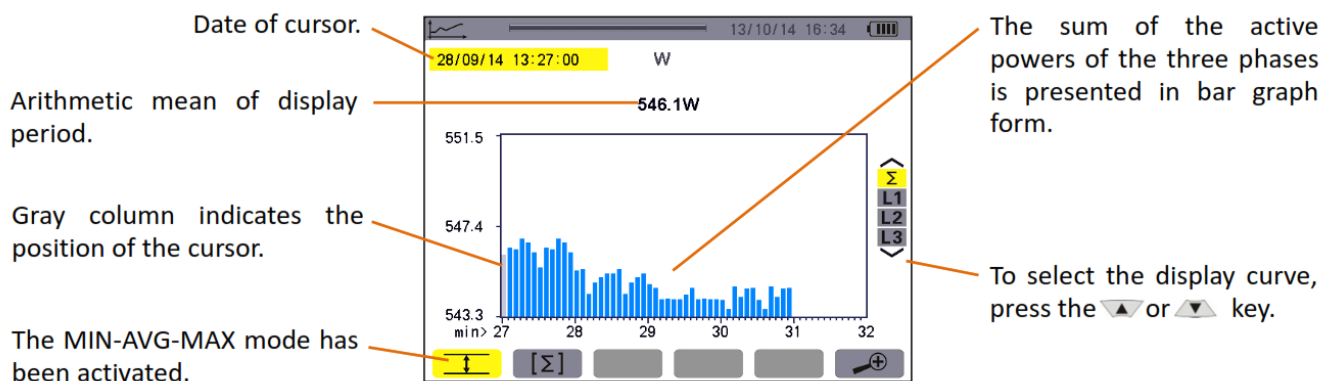


Figure 10-15: total active power with MIN-AVG-MAX

This curve differs slightly from the previous one because, with the MIN-AVG-MAX mode, there is no loss of information.

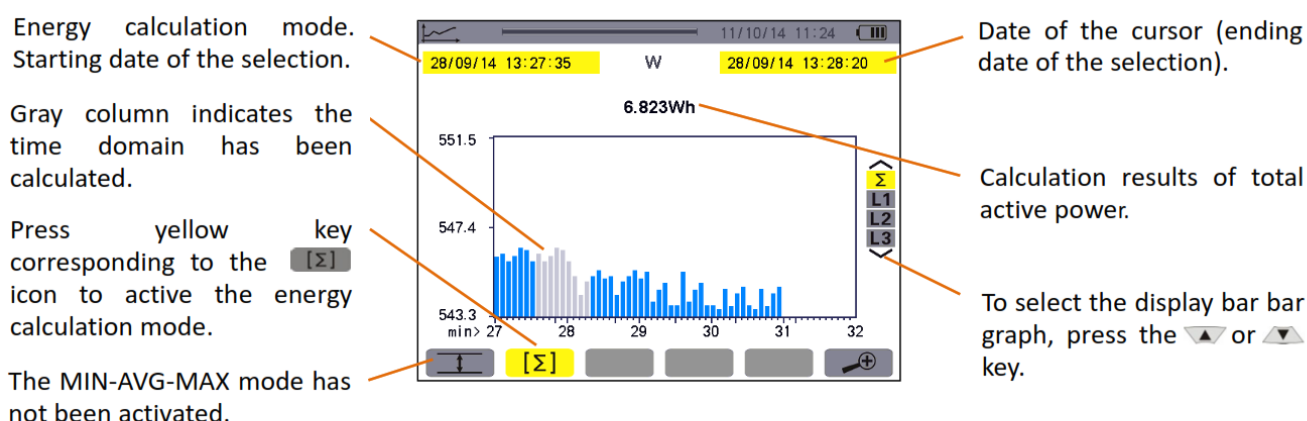


Figure 10-16: total active energy without MIN-AVG-MAX

Energy calculation steps:

★ Press the yellow key corresponding to the [Σ] icon to activate the energy summation mode. The current cursor time is the starting time of the energy calculation.



★ Press the [L1] or [L2] key to move the cursor. The stopping time of the energy calculation points to the cursor time, the device calculates the energy between the start time and stop time automatically.

Note: the cursor moves left and cannot exceed the location of the starting time.



10.6.3. The needing time for display the curve in the different scales.

The following table indicates the time needed to display the curve on the screen as a function of the width of the display window for a recording period of one second:

width of the display window 60 points or increments)	Grid increment	Typical waiting time
5 days	2 hours	30 seconds
2.5 days	1 hour	15 seconds
15 hours	15 minutes	4 seconds
10 hours	10 minutes	2 seconds
5 hours	5 minutes	1 second
1 hour	1 minute	1 second
20 minutes	10 seconds	1 second
5 minutes	5 seconds	1 second
1 minute	1 second	1 second

★ to press the  or  key to change the scale of the display

★ press the  or  key to move the cursor

★ press the  or  key to change the display phase curve.

But note that this may restart the loading/calculation of the values from the beginning.


10.6.4. The longest recording time can be programmed

The longest time is based on the number of recording parameters selected and the sampling period, the typical condition is as follows:

parameter of selected	sampling period	The typical longest time can be programmed
All parameters (total 123)	1 second	10 days
1~20 parameters	1 second	62 days
All parameters (total 123)	5 seconds	50 days
1~20 parameters	5 seconds	300 days
All parameters (total 123)	1 minute	600 days
1~20 parameters	1 minute	3600 days

The above table indicates that the selected parameters are fewer, the sampling period is greater, and the longest recording time is longer.

POWER AND ENERGY KEY

The  key displays power- and energy-related measurements.

11.1. Available sub-menus

The sub-menus are listed on the screen below and described individually in the paragraphs that follow. The sub-menus are selected using the yellow keys on the keypad below the screen.

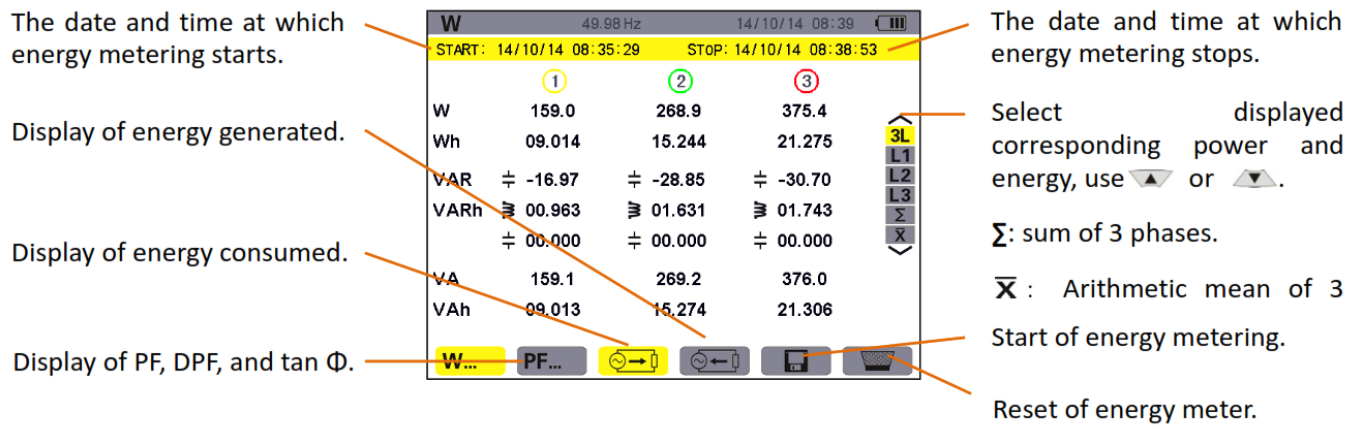



Figure 11-1: the Power and energy mode screen

11.2. Energy consumed

The  sub-menu displays the active power, the reactive powers (capacitive and inductive), and the apparent power.

11.2.1. The energies consumed screen for the 3 phases (3L)

This screen displays the following information:

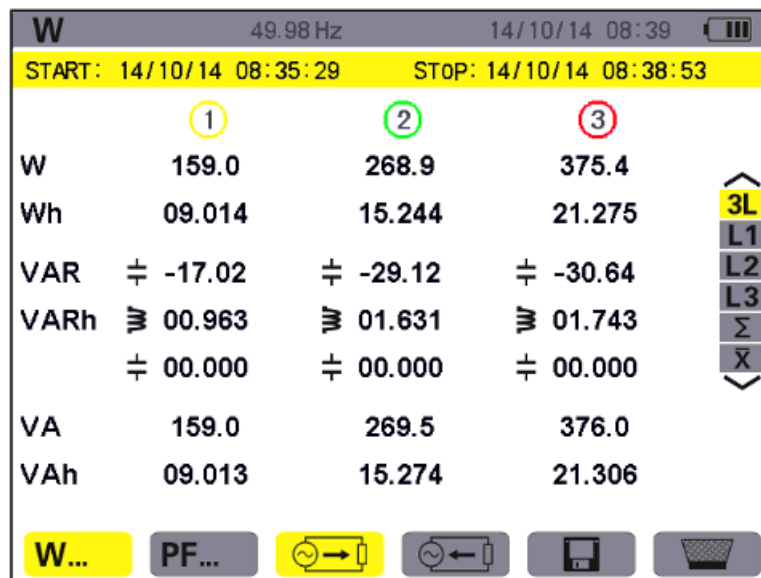






Figure 11-2: the energies consumed screen for the 3 phases (3L)

Unit	Designation
W	Active power.
Wh	Active energy consumed.
VAR	Reactive power (inductive  or capacitive ).
with	Reactive energies consumed (inductive  or capacitive ).

VA	Apparent power.
VA	Apparent energy consumed.

11.2.2. The energies consumed screen for phase L1

This screen displays the following information:

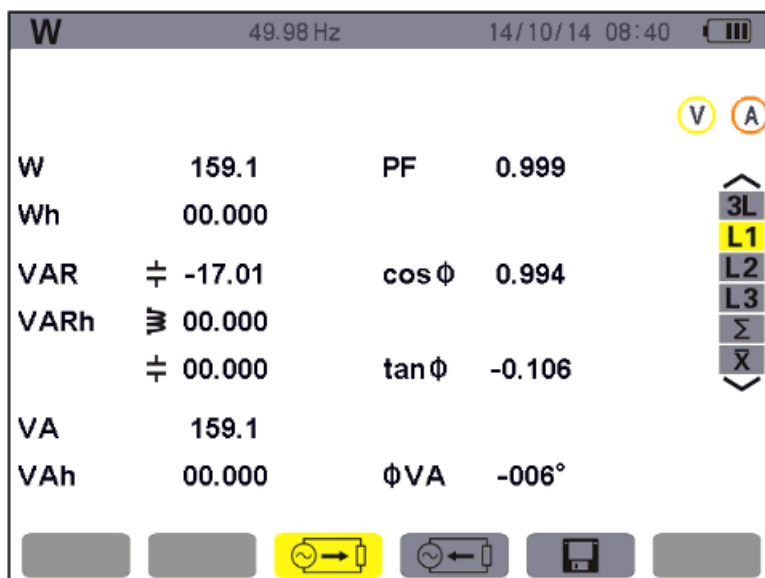


Figure 11-3: the energies consumed screen for phase L1

Unit	Designation
W	Active power.
Wh	Active energy consumed.
VAR	Reactive power (inductive \equiv or capacitive \equiv).
with	Reactive energies consumed (inductive \equiv or capacitive \equiv).
VA	Apparent power. (Σ : sum of 3 phases)
VA	Apparent energy consumed.
PF	Power factor.
Cosφ	The phase shift of the power factor
Tanφ	Tangent factor
φVA	The phase shift of phase-to-neutral voltage with respect to current.

Note: Filters L2 and L3 display the same information for phases 2 and 3. Σ screen displays total power and energy consumed values for the 3 phases.

11.3. Power factor display screen

This screen page is available only with the 3L filter. To display the information, press the yellow key on the keypad corresponding to the **PF...** icon.

The following data is displayed:

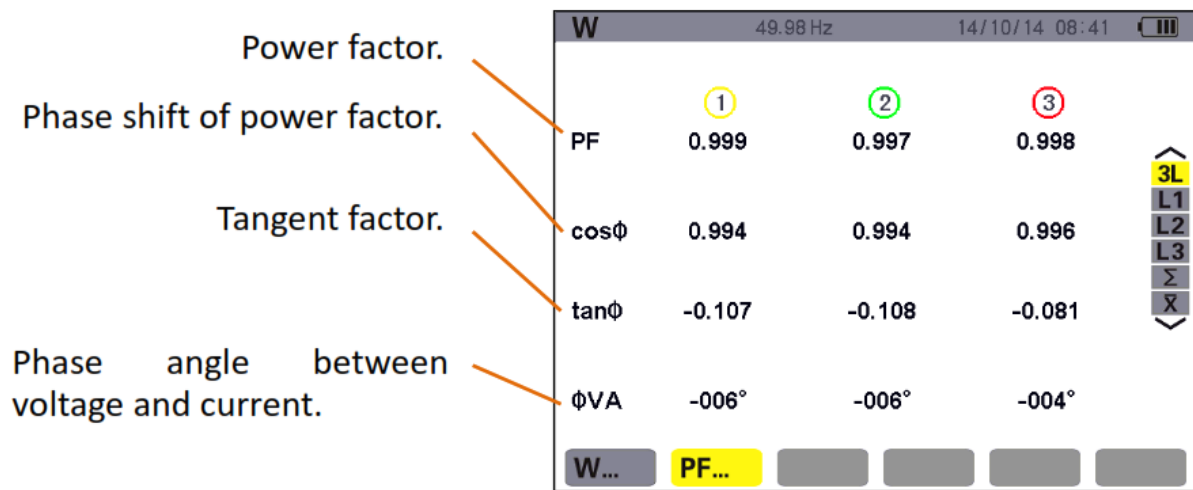


Figure 11-4: the Power factor screen for the 3 phases (3L)

11.4. The sum of energies consumed display screen

To display the information, select the Σ icon of the right-hand filter. This screen displays the following information:

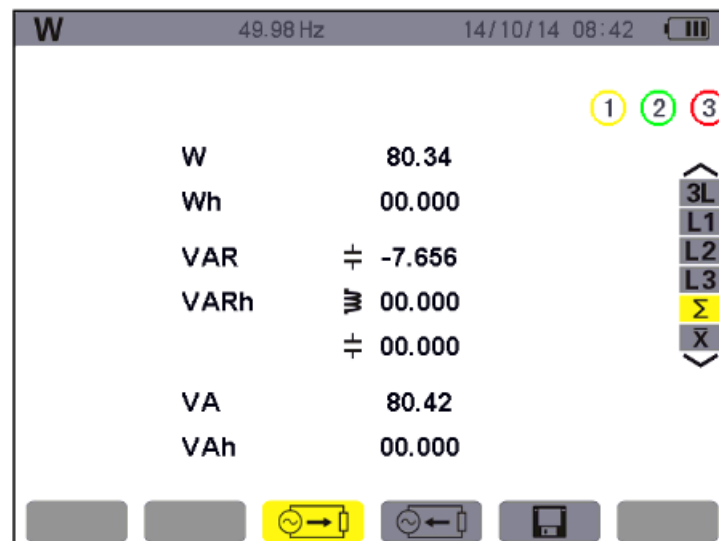


Figure 11-5: the sums of energies consumed display screen

Unit	Designation
D	Total active power.
W	Total active energy consumed.
T	Total reactive power, inductive ⏏ or capacitive ⏏ .
Wh	Total reactive energies consumed, inductive ⏏ or capacitive ⏏ .
T	Total apparent power.
VAR	Total apparent energy consumed.

11.5. The arithmetic mean values of the power factor display screen

To display the arithmetic mean values for the 3 phases (for power factor, the phase shift of power factor, and tangent), select the icon of the right-hand button.

This screen displays the following information:

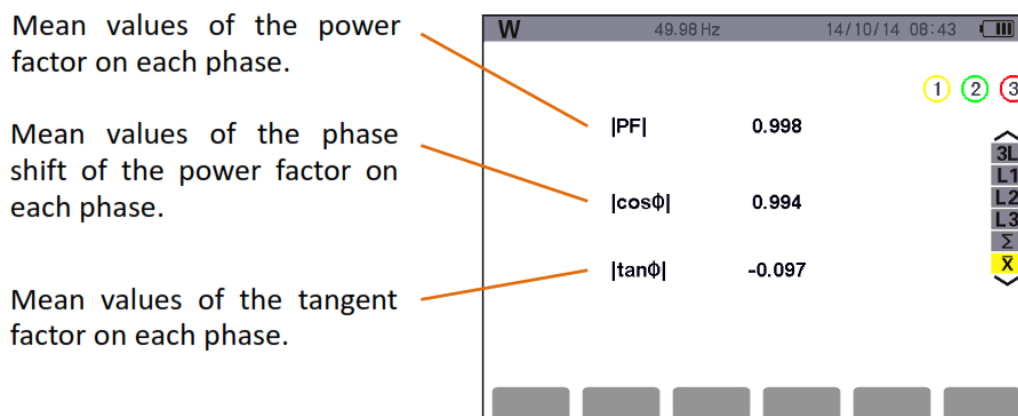



Figure 11-6: the Arithmetic mean values screen for the 3 phases

11.6. Energies generated

The  sub-menu displays the active power, the reactive powers (capacitive and inductive), the apparent power, and all associated energies generated.

11.6.1. The energies generated screen for the 3 phases (3L)

This screen displays the following information:

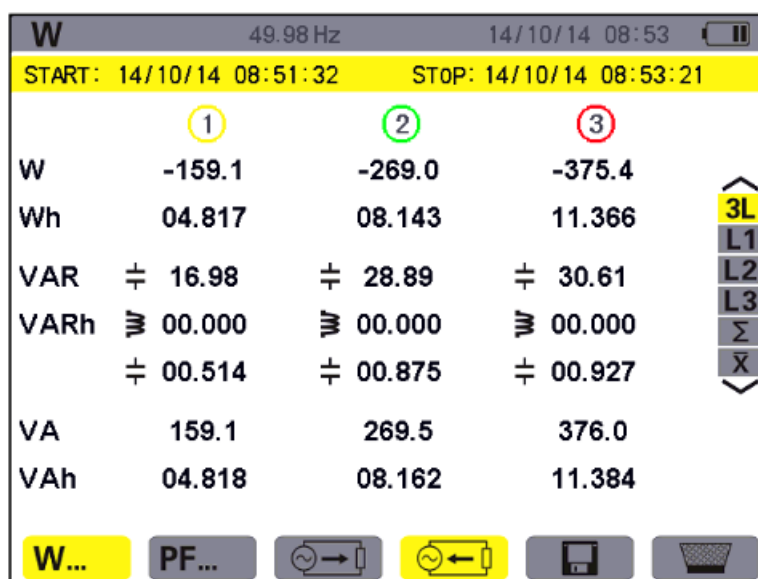






Figure 11-7: the Energies generated screen for the 3 phases (3L)

Unit	Designation
W	Active power.
Wh	Active energies are generated.
VAR	Total reactive power, inductive  or capacitive 
with	Total reactive energies generated, inductive  or capacitive 
VA	Total apparent power.
V	Total apparent energy generated.
PF	Power factor.
Cos ϕ	The phase shift of power factor.
Tan ϕ	Tangent factor.
ϕ VA	The phase angle between voltage and current.

11.6.2. The energies generated display for phase L1

This screen displays the following information:








Figure 11-8: the energies generated display for phase L1

Unit	Designation
W	Active power.
Wh	Active energies are generated.
VAR	Total reactive power, inductive  or capacitive  .
with	Total reactive energies generated, inductive  or capacitive  .
VA	Total apparent power.
VA	Total apparent energy generated.
PF	Power factor.
Cosφ	The phase shift of power factor.
Tanφ	Tangent factor.
φVA	The phase angle between voltage and current.

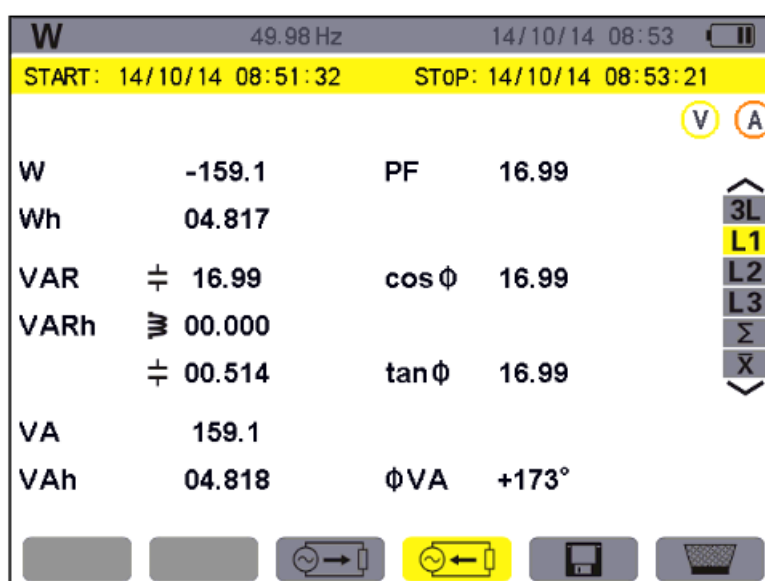

Note: Filters L2 and L3 display the same information for phases 2 & 3. Σ screen displays total power and energy generated values for the 3 phases.



11.6.3. The sums of energies generated display screen

To display the information, select the Σ icon.

This page displays:

- ★The total active power,
- ★The total active energy generated,

- ★The total reactive power, inductive  or capacitive  ,

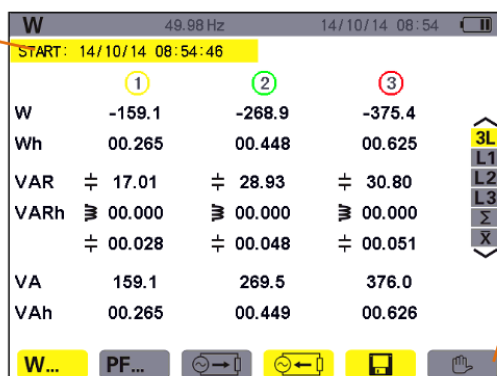
- ★The total reactive energies generated (inductive  and capacitive ),

- ★The total apparent power,
- ★The total apparent energy generated.

11.7. Starting energy metering

To start metering, press the yellow key on the keypad corresponding to the icon:

The date and time at which energy metering starts.







The  icon appears after metering starts, To stop energy metering, press the yellow key on the keypad corresponding to the  icon.


Figure 11-9: the Power and energies mode screen when energy metering is started


11.8. Stopping energy metering

To stop energy metering, press the yellow key on the keypad corresponding to the  icon.

The date and time at which energy metering starts.

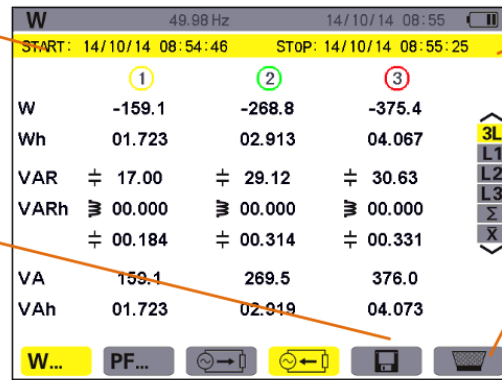After stop metering, if no reset, press the yellow key corresponding to the  icon to continue metering.



Display the date and time at which metering stops after press the  icon.






The  icon appear after stop metering, press the yellow key corresponding to the  icon to reset metering.

Figure 11-10: the Power and energies mode screen when energy metering is stop


11.9. Reset of energy metering

To reset metering, press the yellow key on the keypad corresponding to the  icon, The  icon displayed yellow indicates ready to delete, then press the yellow key corresponding to the  icon to cancel the delete state.

In the state of ready to delete, press the key to confirm. All energy values (consumed and generated) are reset.

Note: refer to the 4-quadrant power diagram in § 17.3.

SCREEN SNAPSHOT KEY









The  key can be used to:










★Capture a maximum of 60 screens for future reference (see § 12.1).

★display previously saved screen snapshots (see § 12.2).

Saved screens may then be transferred to a PC using the USB.

12.1. Screen snapshots

Press  for approx. 3 seconds to shoot any screen (including the , , , , ,  and  mode screens).

During the capture, the  icon appears in the top left corner of the screen instead of the icon for the active mode (, , , , , , ). The active mode  icon reappears when you release the key: the device has saved the image.

Reminder: the device can save a maximum of 60 screen snapshots. If the user attempts to take the 61st screen snapshot, first, upload the pictures you need to the computer through USB, then delete the device's snapshots before capturing new pictures.

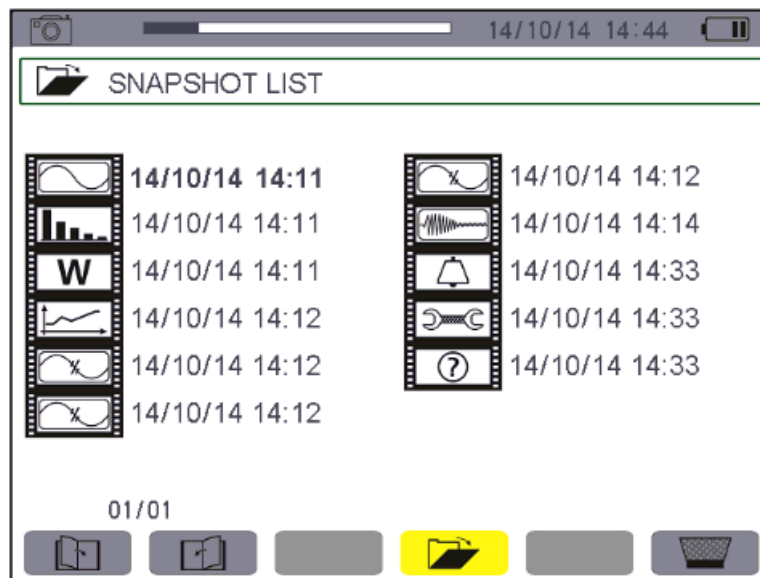



Figure 12-1: the snapshot list display screen


12.2. Handling of screen snapshots

This handling concerns stored screen snapshots, i.e.:

- ★ Display the list of screen snapshots (see § 12.2.2).
- ★ Viewing of one of the screen snapshots (see § 12.2.3).
- ★ Deletion of one or more of the screen snapshots (see § 12.2.4).


12.2.1. Available functions

To enter screen snapshot mode, briefly press the  key.


Reminder: holding the  key down for approximately 3 seconds triggers the screen snapshot function (See § 12.1).

Indicator of available image memory. The black bar represents memory used.

List of saved snapshots:

The icons identify the type of snapshot saved (such as :harmonic mode).

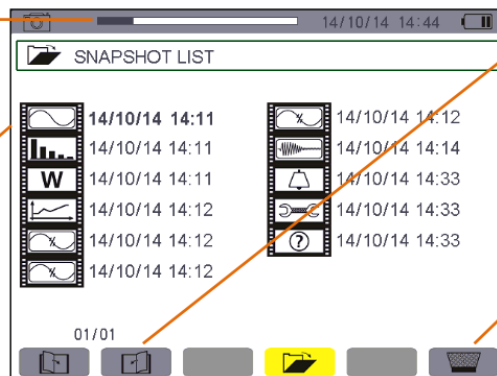The date and time of each



Screen page, the current page / total number of

Delete the snapshots of cursor.








Figure 12-2: example of the snapshot list display screen

12.2.2. Viewing the list of snapshots


Press briefly to display this list. The screen presents the list of snapshots (see figure 12-2).

12.2.3. Viewing a snapshot from the list

To view a snapshot, proceed as follows:





- ★ Press . The  icon is active and the snapshot list screen is displayed (see figure 12-2).
- ★ Select the snapshot to be viewed using the  or  and  or  keys. The date and time of the selected snapshot are bolded.
- ★ Press  to display the selected snapshot. The top left corner of the screen displays the icon, alternating with




the icon corresponding to the active mode (such as harmonic mode).


★ Press  to return to the list of screen snapshots.


12.2.4. Deleting a snapshot from the list

To delete a snapshot, proceed as follows:
From the list of snapshots (see Figure 12-2 for example).


★ Select the snapshot to be deleted using the  or  and  or  keys. The date and time of the selected snapshot are bolded.

★ Press the yellow key on the keypad corresponding to the  icon, The  icon displayed yellow indicates ready to delete, then press the yellow key corresponding to the  icon to cancel the delete state.

★ In the state of ready to delete, press the  key to confirm.

Press  to delete the selected snapshot. The snapshot is deleted from the list.

HELP KEY

The  key provides information about the functions and symbols used in the current display mode.
The following information is displayed:

The current mode and help mode icon.

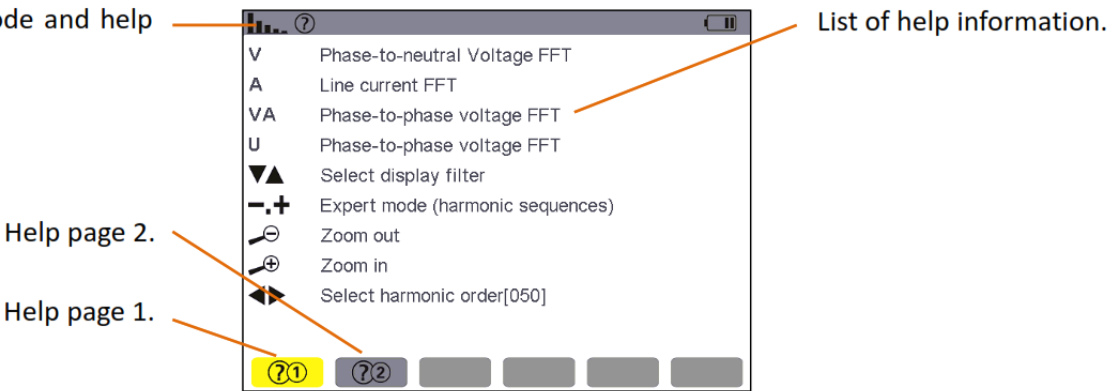


Figure 13-1: example of the help page for the powers and energies mode, page 1

DATA UPLOADED TO THE COMPUTER

To install a program, use the CD, then follow the on-screen instructions. Then connect the device to the PC using the USB cord supplied with the device, start the device, then open the data software to click on the computer's Power Quality Analyzer.exe. Wait for the software to automatically search and connect the device. For directions for using the data export software, refer to its user manual.

Note: Note: The transfer does not delete the data, just copy it to the PC. At alarm/trend chart record/transient capture mode (pending or ongoing), the PC cannot read the data.

GENERAL SPECIFICATIONS

15.1. Housing

Housing	Rigid shell over-molded with a red thermo-adhesive elastomer.
Connectors	5 voltage measurement sockets.
	4 special current connectors.
	One connector for the specific mains power unit.
	One connector for the USB link.
	One connector for the SD memory card. This connector is located in the battery compartment on the back of the device.
Keys	Function, navigation, and mode. Can be used with gloves on.
Hand strap	Located on the side of the device, use to operate more conveniently.
Stand	To hold the device in an inclined position.
Battery cover	To access the battery, on the back of the instrument.
dimensions	Overall: 240×170×68mm Screen: 640×480 pixels W×H: 118mm×90mm; Diagonal: 148mm
Weight	Host: 1600 g (with battery).

15.2. Power supply

15.2.1. External mains power supply

Range for use	Input AC100V-240V, 50Hz/60Hz, Output DC12V, Maximum output current 3 A.
Maximum input power	36VA

15.2.2. Battery supply

The device can be used without a connection to mains power. The battery also makes it possible to use the device during power outages.

Battery	Rechargeable lithium-ion battery pack 9.6V
Capacity	4500 mAh
Life	at least 500 charge-discharge cycles.
Charging current	approx. 0.6A
Charging time	approx. 8 hours
Service T°	[0 °C ; 50 °C].
Charging T°	[10 °C ; 35 °C].
Storage T°	Storage ≤30 days:[-20 °C; 50 °C]
	storage for 30 to 90 days:[-20 °C ; 40 °C].
	storage for 90 days to 1 year: [-20 °C ; 30 °C].

15.2.3. Consumption


At 10% luminosity	410 mA
At 50% luminosity	490 mA
At 100% luminosity	590 mA

15.3. Range for use

15.3.1. Environmental conditions

15.3.1.1. Climatic conditions

The following chart shows conditions relating to ambient temperature and humidity

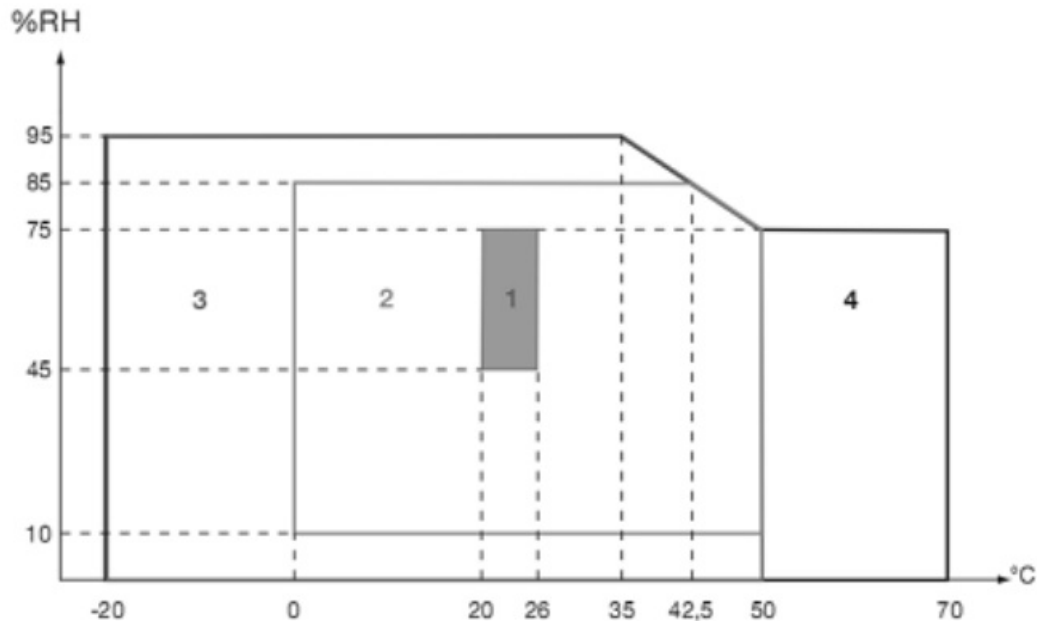

Caution: at temperatures above 40°C, the device must be powered by the battery alone OR by the mains power unit alone; use of the device with both the battery AND the mains power unit is prohibited.

15.3.1.2. Altitude

Use: [0 m; 2 000 m]

Storage: [0 m; 10 000 m]

15.3.2. Mechanical conditions

Under IEC 61010-1, the device is regarded as a **PORTABLE DEVICE (HAND-CARRIED)**.

- Operating position: any position.
- Reference position in operation: on a horizontal plane, resting on its stand or lying flat.
- Rigidity (IEC 61010-1): the force of 30 N applied to any part of the housing, the device is supported (at 40°C).
- Fall (IEC 61010-1): 1 m in presumed worst-case position; the requirement is no permanent mechanical damage and functional degradation.
- Tightness: IP 50 as per NF EN 60529 A1 (IP2X electrical protection for the terminals).

15.3.3. EMC electromagnetic compatibility

15.3.3.1. Immunity as per IEC 61326:1-2006

- Immunity to electrostatic discharges (as per IEC 61000-4-2)

1st level:	Severity:	4 kV in contact
	Requirements:	CRITERION A
2nd level:	Severity:	8 kV in air
	Requirements:	CRITERION A

Immunity to radiated fields (as per IEC 61000-4-3 and IEC 61000-4-8)

Severity:	10V.m
Requirements	CRITERION B

Immunity to rapid transients (IEC 61000-4-4)

Severity:	2 kV on voltage inputs and power supply
	1 kV on current input
Requirements:	CRITERION A

Immunity to electric shocks (as per IEC 61000-4-5)

Severity	2 kV on voltage inputs in differential mode
	1 kV on voltage inputs in common mode
Requirements:	CRITERION A

Conducted RF interference (as per IEC 61000-4-6)

Severity:	3 V on voltage inputs an
Requirements:	CRITERION A


Voltage interruption (as per IEC 61000-4-11)


Severity:	100% loss over one period of the power supply
Requirements:	CRITERION A

15.3.3.2. Emissions as per IEC 61326:1-2006

Class A equipment.

15.4. User safety

- Application of safety rules as per IEC standard 61010-1 (protective impedances on voltage inputs).
- Pollution type 2.
- Double insulation on /O with respect to earth (symbol).

- Double insulation between the voltage inputs and power supply and the other  /O (symbol).

FUNCTIONAL CHARACTERISTICS

16.1. Reference conditions

This table indicates the reference conditions of the quantities to be used by default in the characteristics.

Ambient temperature	(23±2)°C
Humidity (relative humidity)	40%~ 60%
Atmospheric pressure	[860hPa~ 1060hPa]
Phase-to-neutral voltage	[(50±1%) Vrms; (500±1%) Vrms] without DC (< 0.5 %)
Frequency of electrical network	50Hz±0.1Hz, 60Hz±0.1Hz
Phase shift	0° (active power), 90° (reactive power)
Harmonics	<0.1%
Voltage unbalance	<10%
Voltage ratio	1
Current ratio	1
Power supply	Battery only
Electric field	<1V/m
Magnetic field	<40A/m

16.2. Electrical characteristics

16.2.1. Voltage input characteristics

0 Vrms to 1000 Vrms AC+DC phase-to-neutral and neutral-to-earth.

0 Vrms to 2000 Vrms AC+DC phase-to-phase. (on condition of compliance with 1000 Vrms with respect to earth in CAT III).

16.2.2. Current input range

008B current clamp: 10mA~ 10A.

040B current clamp: 0.10A~ 100A.

068B current clamp: 1.0A~ 1000A.

Optional current transformer: device input current 1mA~ 500mA.

16.2.3. Characteristics of the device alone (excluding the current sensor)

Respectively introduce the following data (on the basis of base conditions and the ideal current sensors, perfectly linear, no phase shift).

Measurement	Range	Display resolution	The maximum error in the range of the reference
Frequency	40Hz~ 70Hz	0.01Hz	±(0.03)Hz

True RMS phase-to-neutral voltage	1.0V~ 1000V	Min resolution 0.1V	$\pm(0.5\%+5\text{dgt})$
True RMS phase-to-phase voltage	1.0V~ 2000V	Min resolution 0.1V	$\pm(0.5\%+5\text{dgt})$
DC voltage	1.0V~ 1000V	Min resolution 0.1V	$\pm(1.0\%+5\text{dgt})$
True RMS current	10mA~ 1000A	Min resolution 1mA	$\pm(0.5\%+5\text{dgt})$
The peak of phase-to-neutral voltage	1.0V~ 1414V	Min resolution 0.1V	$\pm(1.0\%+5\text{dgt})$
The peak of phase-to-phase voltage	1.0V~ 2828V	Min resolution 0.1V	$\pm(1.0\%+5\text{dgt})$
Current peak	10mA~ 1414A	Min resolution 1mA	$\pm(1.0\%+5\text{dgt})$
Peak factor	1.00~ 3.99	0.01	$\pm(1\%+2\text{dgt})$
	4.00~ 9.99	0.01	$\pm(5\%+2\text{dgt})$
Active power	0.000W~ 9999.9kW	Min resolution 0.001W	$\pm(1\%+3\text{dgt}) \cos\varphi \geq 0.8$
			$\pm(1.5\%+10\text{dgt}) 0.2 \leq \cos\varphi < 0.8$
Reactive power, inductive or capacitive	0.000VAR~9999.9kVAR	Min resolution 0.001VAR	$\pm(1\%+3\text{dgt}) \sin\varphi \geq 0.5$
			$\pm(1.5\%+10\text{dgt}) .2 \leq \sin\varphi < 0.5$
Apparent power	0.000VA~9999.9kVA	Min resolution 0.001VA	$\pm(1\%+3\text{dgt})$
Power factor	-1.000~ 1.000	0.001	$\pm(1.5\%+3\text{dgt}) \cos\varphi \geq 0.5$
			$\pm(1.5\%+10\text{dgt}) 0.2 \leq \cos\varphi < 0.5$

Active energy	0.000Wh~9999.9MWh	Min resolution 0.001Wh	$\pm(1\%+3\text{dgt}) \cos\varphi \geq 0.8$
			$\pm(1.5\%+10\text{dgt}) 0.2 \leq \cos\varphi < 0.8$
Reactive energy, inductive or capacitive	0.000VARh~9999.9MVARh	Min resolution 0.001VARh	$\pm(1\%+3\text{dgt}) \sin\varphi \geq 0.5$
			$\pm(1.5\%+10\text{dgt}) 0.2 \leq \sin\varphi < 0.5$
Papparent energy	0.000VAh~ 9999.9MVAh	Min resolution 0.001VAh	$\pm(1\%+3\text{dgt})$
Phase angle	-179°~ 180°	1°	$\pm(2^\circ)$
Tanφ (VA≥50VA)	-32.76~ 32.76	Min resolution 0.001	$\varphi: \pm(1^\circ)$
The phase shift of power factor(PDF)	-1.000~ 1.000	0.001	$\varphi: \pm(1^\circ)$
Harmonic ratio (order 1 to 50) (Vrms>50V)	0.0%~ 99.9%	0.1%	$\pm(1\%+5\text{dgt})$
Harmonic angle (Vrms>50V)	-179°~ 180°	1°	$\pm(3^\circ)$ harmonics of order 1 to 25
			$\pm(10^\circ)$ harmonics of order 26 to 50
Total harmonic ratio (THD or THD-F)≤50	0.0%~ 99.9%	0.1%	$\pm(1\%+5\text{dgt})$
Distortion factor (DF or THD-R)≤50	0.0%~ 99.9%	0.1%	$\pm(1\%+10\text{dgt})$
Transformer K factor	1.00~ 99.99	0.01	$\pm(5\%)$

3 phases unbalance	0.0%~ 100%	0.1%	$\pm(1\%)$
---------------------------	------------	------	------------

16.2.4. Current sensor characteristics (after linearization)

Sensor errors are offset by a typical correction inside the device. This typical correction, applied to the phase and amplitude, depends on the type of sensor connected and detected automatically) and the gain in the current acquisition channel used.

Type of current sensor	True RMS current	Max error of true RMS current	Max error of phase angleφ
008B current clamp	10mA~ 99mA	±(1%+3dgt)	±(1.5°), Arms≥20mA
	100mA~ 10.0A	±(1%+3dgt)	±(1°)
040B current clamp	0.10A~ 0.99A	±(1%+3dgt)	±(1.5°)
	1.00A~ 100A	±(1%+3dgt)	±(1°)
068B current clamp	1.0A~ 9.9A	±(2%+3dgt)	±(3°)
	10.0A~ 1000A	±(2%+3dgt)	±(2°)
Optional transformer	Instrument input current 1mA~ 500mA	The selected transformer error:±1%	The selected transformer error:±(1°)

APPENDICES

17.1. Mathematic formulae

17.1.1. Network frequency and sampling

Sampling is controlled by (locked to) the network frequency so as to deliver 256 samples per cycle from 40 Hz to 70 Hz. This locking is essential for the calculations of reactive power, unbalance, and harmonic ratio and angles. The frequency is measured by analyzing ten consecutive positive-going zero crossings in the first voltage channel (V1) or first current channel (I1) after digital low-pass filtering and digital suppression of the DC component. The time of the zero crossing is determined precisely by linear interpolation between two samples to achieve a resolution better than 0.002%.

The signals are acquired using a 16-bit converter and (for current acquisition) dynamic gain switches.

17.1.2. RMS values of half-cycle voltage and current (excluding neutral)

Half-cycle RMS phase-to-neutral voltage of phase (i+1)

$$V_{dem}[i] = \sqrt{\frac{1}{NechDemPer} \cdot \sum_{n=Zéro}^{(Zéro\ suivant)-1} V[i][n]^2}$$

Half-cycle RMS phase-to-phase voltage of phase (i+1)

$$U_{dem}[i] = \sqrt{\frac{1}{NechDemPer} \cdot \sum_{n=Zéro}^{(Zéro\ suivant)-1} U[i][n]^2}$$



Half-cycle RMS current of phase (i+1)

$$A_{dem}[i] = \sqrt{\frac{1}{NechDemPer} \cdot \sum_{n=Zéro}^{(Zéro\ suivant)-1} A[i][n]^2}$$

Note: these values are calculated for each half-cycle so as not to miss any fault. NechDemPer is the number of samples in the half cycle.

17.1.3. Minimum and maximum half-cycle RMS values (excluding neutral)

$$\begin{aligned}V_{\max}[i] &= \max(V_{\text{dem}}[i]), & V_{\min}[i] &= \min(V_{\text{dem}}[i]) \\U_{\max}[i] &= \max(U_{\text{dem}}[i]), & U_{\min}[i] &= \min(U_{\text{dem}}[i]) \\A_{\max}[i] &= \max(A_{\text{dem}}[i]), & A_{\min}[i] &= \min(A_{\text{dem}}[i])\end{aligned}$$

Note: The duration of the evaluation is left to the user's discretion (reset by pressing the  or  key).

17.1.4. Short-term flicker (excluding neutral)

A method based on the IEC 61000-4-15 standard.

The input values are half-cycle phase-to-neutral voltages. The value is updated every 10 minutes.

17.1.5. Peak values (voltage and current)

$i = 3 \Leftrightarrow$ neutral(except Upp and Upm)

$$\begin{aligned}V_{\text{pp}}[i] &= \max(V[i][n]), & V_{\text{pm}}[i] &= \min(V[i][n]) & n \in [0 ; N] \\U_{\text{pp}}[i] &= \max(U[i][n]), & U_{\text{pm}}[i] &= \min(U[i][n]) & n \in [0 ; N] \\A_{\text{pp}}[i] &= \max(A[i][n]), & A_{\text{pm}}[i] &= \min(A[i][n]) & n \in [0 ; N] \quad i+1\end{aligned}$$

$$V_{\text{cf}}[i] = \frac{\max(|V_{\text{pp}}[i]|, |V_{\text{pm}}[i]|)}{\sqrt{\frac{1}{N_{\text{echPer}}} \cdot \sum_{n=0}^{N_{\text{echPer}}-1} V[i][n]^2}}$$

Peak factor of phase-to-phase voltage of phase (i+1)

$$U_{\text{cf}}[i] = \frac{\max(|U_{\text{pp}}[i]|, |U_{\text{pm}}[i]|)}{\sqrt{\frac{1}{N_{\text{echPer}}} \cdot \sum_{n=0}^{N_{\text{echPer}}-1} U[i][n]^2}}$$

Peak factor of current of phase (i+1)

$$A_{\text{cf}}[i] = \frac{\max(|A_{\text{pp}}[i]|, |A_{\text{pm}}[i]|)}{\sqrt{\frac{1}{N_{\text{echPer}}} \cdot \sum_{n=0}^{N_{\text{echPer}}-1} A[i][n]^2}}$$

Note: NechPer is the number of samples in the half cycle.

17.1.7. RMS value (voltage and current)

$i = 3 \Leftrightarrow \text{neutral (except Urms)}$

RMS phase-to-neutral voltage of phase (i+1)

$$V_{rms}[i] = \sqrt{\frac{1}{NechSec} \cdot \sum_{n=0}^{NechSec-1} V[i][n]^2}$$

RMS phase-to-phase voltage of phase (i+1)

$$U_{rms}[i] = \sqrt{\frac{1}{NechSec} \cdot \sum_{n=0}^{NechSec-1} U[i][n]^2}$$

RMS current of phase (i+1)

$$A_{rms}[i] = \sqrt{\frac{1}{NechSec} \cdot \sum_{n=0}^{NechSec-1} A[i][n]^2}$$

Note: NechSec is the number of samples in the second.

17.1.8. Unbalances (voltage and current)

These are calculated from the filtered RMS vector values (over one second) VFrms and AFrms (ideally the fundamental vectors of the signals).

Note: The formulas in complex notation with $a = e^{j\frac{2\pi}{3}}$

$$V_{rms+} = \frac{1}{3} (VFrms[0] + a \cdot VFrms[1] + a^2 \cdot VFrms[2])$$

$$V_{rms-} = \frac{1}{3} (VFrms[0] + a^2 \cdot VFrms[1] + a \cdot VFrms[2])$$

$$V_{unb} = \frac{|V_{rms-}|}{|V_{rms+}|}$$

$$A_{rms+} = \frac{1}{3} (AFrms[0] + a \cdot AFrms[1] + a^2 \cdot AFrms[2])$$

$$A_{rms-} = \frac{1}{3} (AFrms[0] + a^2 \cdot AFrms[1] + a \cdot AFrms[2])$$

$$A_{unb} = \frac{|A_{rms-}|}{|A_{rms+}|}$$

17.1.9. Harmonic calculations (excluding neutral)

These calculations are carried out by FFT (16 bits), 1024 points over four cycles, with a rectangular window (see IEC 1000-4-7). From the real parts bk and the imaginary parts ak, the harmonic factor is calculated for each order and for each phase (Vharm[3][51], Uharm[3][51], and Aharm[3][51]) with respect to the fundamental and the angles Vph[3][51], Uph[3][51], and Aph[3][51] with respect to the fundamental.

This calculation is carried out according to the following principle:

The factor in percent [%]: $\tau_k = \frac{c_k}{c_4} 100$

The angle in degrees [°]: $\varphi_k = \arctan\left(\frac{a_k}{b_k}\right) - \varphi_4$

$$\begin{cases} c_k = |b_k + ja_k| = \sqrt{a_k^2 + b_k^2} \\ b_k = \frac{1}{512} \sum_{s=0}^{1024} F_s \cdot \sin\left(\frac{k\pi}{512} s + \varphi_k\right) \\ a_k = \frac{1}{512} \sum_{s=0}^{1024} F_s \cdot \cos\left(\frac{k\pi}{512} s + \varphi_k\right) \\ c_0 = \frac{1}{1024} \sum_{s=0}^{1024} F_s \end{cases}$$

c_k : is the amplitude of the component of order $j = \frac{k}{4}$ with a frequency $f_k = \frac{k}{4} f_4$.

F_s : is the sampled signal at the fundamental frequency.

c_0 : c_0 : is the DC component.

K : is the number of the frequency spectrum (the order of the harmonic component is $j = \frac{k}{4}$)

17.1.10. Harmonic distortions (excluding neutral)

Two global values giving the relative quantity of harmonics are calculated: the THD as a proportion of the fundamental ("THD-F") and the DF as a proportion of the RMS value ("THD-R").

$$V_{thd}[i] = \frac{\sqrt{\sum_{n=2}^{50} V_{harm}[i][n]^2}}{V_{harm}[i][1]}, U_{thd}[i] = \frac{\sqrt{\sum_{n=2}^{50} U_{harm}[i][n]^2}}{U_{harm}[i][1]}, A_{thd}[i] = \frac{\sqrt{\sum_{n=2}^{50} A_{harm}[i][n]^2}}{A_{harm}[i][1]}$$

$$V_{df}[i] = \frac{\sqrt{\sum_{n=2}^{50} V_{harm}[i][n]^2}}{\sqrt{\sum_{n=1}^{50} V_{harm}[i][n]^2}}, U_{df}[i] = \frac{\sqrt{\sum_{n=2}^{50} U_{harm}[i][n]^2}}{\sqrt{\sum_{n=1}^{50} U_{harm}[i][n]^2}}, A_{df}[i] = \frac{\sqrt{\sum_{n=2}^{50} A_{harm}[i][n]^2}}{\sqrt{\sum_{n=1}^{50} A_{harm}[i][n]^2}}$$

Voltage harmonic distortion multiplied by current harmonic distortion equals apparent power harmonic ratio ($VA_{harm}[3][51]$), voltage harmonic angle minus current harmonic angle equals power harmonic angle ($VA_{ph}[3][51]$)

17.1.11. K factor

K factor for phase (i+1).

$$Akf[i] = \frac{\sum_{n=1}^{n=50} n^2 \cdot Aharm[i][n]^2}{\sum_{n=1}^{n=50} Aharm[i][n]^2}$$

17.1.12. Sequence harmonics

Negative-sequence harmonics

$$V_{harm-} = \frac{1}{3} \sum_{i=0}^2 \frac{\sum_{j=0}^7 V_{harm}[i][3j+2]}{V_{harm}[i][1]}, A_{harm-} = \frac{1}{3} \sum_{i=0}^2 \frac{\sum_{j=0}^7 A_{harm}[i][3j+2]}{A_{harm}[i][1]}$$

Zero-sequence harmonics

$$V_{harm_0} = \frac{1}{3} \sum_{i=0}^2 \frac{\sum_{j=0}^7 V_{harm}[i][3j+3]}{V_{harm}[i][1]}, A_{harm_0} = \frac{1}{3} \sum_{i=0}^2 \frac{\sum_{j=0}^7 A_{harm}[i][3j+3]}{A_{harm}[i][1]}$$

Positive-sequence harmonics

$$V_{harm+} = \frac{1}{3} \sum_{i=0}^2 \frac{\sum_{j=0}^7 V_{harm}[i][3j+4]}{V_{harm}[i][1]}, A_{harm+} = \frac{1}{3} \sum_{i=0}^2 \frac{\sum_{j=0}^7 A_{harm}[i][3j+4]}{A_{harm}[i][1]}$$

17.1.13. LS powers (excluding neutral)

Active power of phase (i+1.)

$$W[i] = \frac{1}{NechSec} \cdot \sum_{n=0}^{NechSec-1} V[i][n] \cdot A[i][n]$$

Apparent power of phase (i+1).

$$VA[i] = V_{rms}[i] \cdot Arms[i]$$

Reactive power (without harmonics) of phase (i+1).

$$VAR[i] = \frac{1}{NechSec} \cdot \sum_{n=0}^{NechSec-1} VF[i][n - \frac{NechPer}{4}] \cdot AF[i][n]$$

Reactive power (with harmonics) of phase (i+1).

$$VAR[i] = \sqrt{VA[i]^2 - W[i]^2}$$

Reactive powers are calculated using the filtered signals (without harmonics) in accordance with EDF (French national electricity company) rules or from the apparent and active powers (with harmonics). The choice of calculation is left up to the user.

Total active power.

$$W[3] = W[0] + W[1] + W[2]$$

Total apparent power.

$$VA[3] = VA[0] + VA[1] + VA[2]$$

Total reactive power.

$$VAR[3] = VAR[0] + VAR[1] + VAR[2]$$

17.1.14. Power ratios

Power factor.

$$PF[i] = \frac{W[i]}{VA[i]}$$

Displacement power factor.

$$DPF[i] = \cos(\phi[i]) = \frac{\sum_{n=0}^{NechSec-1} VF[i][n] \cdot AF[i][n]}{\sqrt{\sum_{n=0}^{NechSec-1} VF[i][n]^2} \cdot \sqrt{\sum_{n=0}^{NechSec-1} AF[i][n]^2}}$$

Tangent.

$$\tan[i] = \tan(\phi[i]) = \frac{\sum_{n=0}^{NechSec-1} VF[i][n - \frac{NechPer}{4}] \cdot AF[i][n]}{\sum_{n=0}^{NechSec-1} VF[i][n] \cdot AF[i][n]}$$

Mean of 3 phase power factor.

$$PF[3] = \frac{|PF[0]| + |PF[1]| + |PF[2]|}{3}$$

Mean of 3 phase shift power factor.

$$DPF[3] = \frac{|DPF[0]| + |DPF[1]| + |DPF[2]|}{3}$$

Mean of tangent.

$$\tan[3] = \frac{|\tan[0]| + |\tan[1]| + |\tan[2]|}{3}$$

17.1.15. Energies (excluding neutral)

◆ Consumed energies ($w[i] \geq 0$)

Consumed active energy of phase (i+1)

Consumed active energy of phase (i+1)

$$Wh[0][i] = \sum_{T_{int}} \frac{W[i]}{3600}$$

Consumed apparent energy of phase (i+1)

$$VAh[0][i] = \sum_{T_{int}} \frac{VA[i]}{3600}$$

Consumed inductive reactive energy of phase (i+1)(VAR[i]>=0)

$$VARhL[0][i] = \sum_{T_{int}} \frac{VAR[i]}{3600}$$

Consumed capacitive reactive energy of phase (i+1)(VAR[i]<=0)

$$VARhC[0][i] = \sum_{T_{int}} \frac{-VAR[i]}{3600}$$

Total consumed active energy

$$Wh[0][3] = Wh[0][0] + Wh[0][1] + Wh[0][2]$$

Total consumed apparent energy

$$VAh[0][3] = VAh[0][0] + VAh[0][1] + VAh[0][2]$$

Total consumed capacitive reactive energy

$$VARhL[0][3] = VARhL[0][0] + VARhL[0][1] + VARhL[0][2]$$

Total consumed inductive reactive energy

$$VARhC[0][3] = VARhC[0][0] + VARhC[0][1] + VARhC[0][2]$$

♦ generated energies (w[i] < 0)

Generated active energy of phase(i + 1).

$$Wh[1][i] = \sum_{T_{int}} \frac{W[i]}{3600}$$

Generated apparent energy of phase (i+1)

$$VAh[1][i] = \sum_{T_{int}} \frac{VA[i]}{3600}$$

Generated inductive reactive energy of phase (i+1)(VAR[i]>=0)

$$VARhL[1][i] = \sum_{T_{int}} \frac{-VAR[i]}{3600}$$

Generated capacitive reactive energy of phase (i+1)(VAR[i]<=0)

$$VARhC[1][i] = \sum_{T_{int}} \frac{VAR[i]}{3600}$$

Total generated active energy

$$Wh[1][3] = Wh[1][0] + Wh[1][1] + Wh[1][2]$$

Total generated apparent energy

$$VAh[1][3] = VAh[1][0] + VAh[1][1] + VAh[1][2]$$

Total generated inductive reactive energy

$$VARhL[1][3] = VARhL[1][0] + VARhL[1][1] + VARhL[1][2]$$

17.2. Hysteresis

Hysteresis is a screening principle that is often used after the detection of a threshold stage in Alarm mode (See § 5.10) and in Inrush current mode (see § 6.3). A correct hysteresis setting avoids repeated changes of state when the measurement oscillates about the threshold.

17.2.1. Surge detection

With a hysteresis of 2%, for example, the return level for surge detection is equal to (100% – 2%) or 98% of the reference voltage threshold.

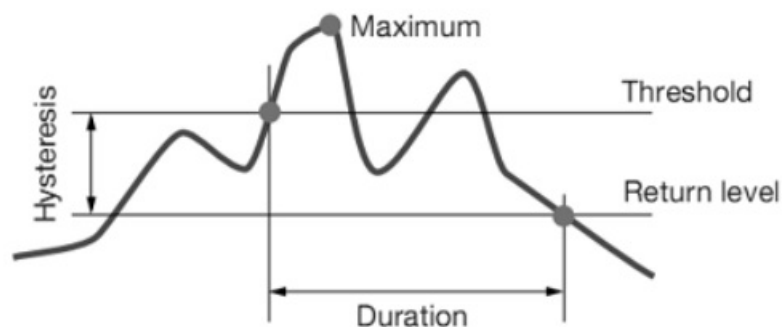


Figure 17-1: an example of return level for surge detection

17.2.2. Undervoltage or blackout detection

With a hysteresis of 2%, for example, the return level for Undervoltage detection is equal to $(100\% + 2\%)$ or 102% of the Reef voltage threshold.

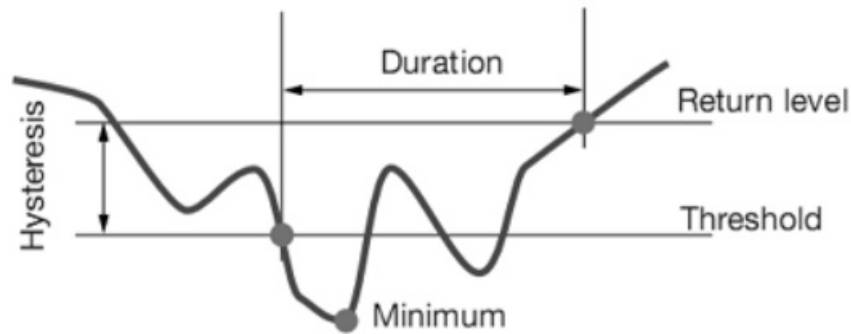


Figure 17-2: an example of return level for undervoltage detection

17.3. Four-quadrant diagram

This diagram is used for power and energy measurements

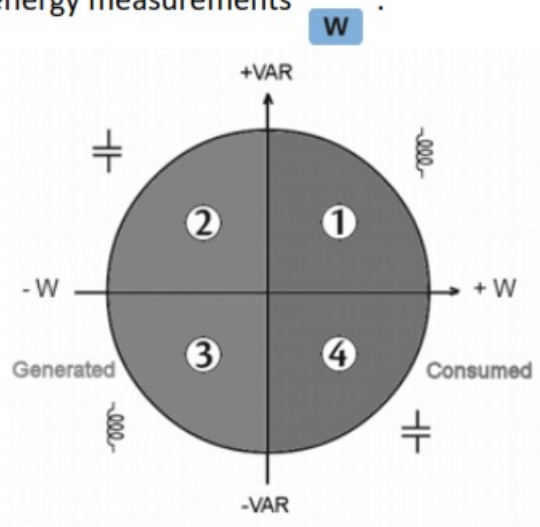


Figure 17-3: Four-quadrant diagram for power and energy

17.4. Mechanism for triggering transient captures

The sampling rate is a constant of 256 samples per cycle. When a transient capture is started, each sample is compared to the sample from the preceding cycle. The preceding cycle defines the mid-point of the trigger envelope and is used as a reference. As soon as a sample is outside the envelope, the triggering event occurs; the representation of the transient is then captured by the device. The cycle preceding the event and the three following cycles are saved to memory.

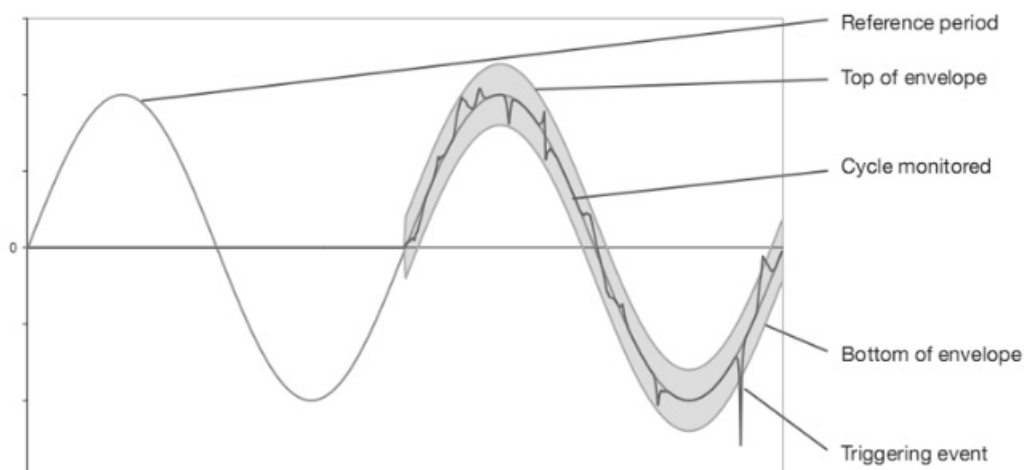


Figure 17-4: a graphic representation of the transient capture triggering mechanism

17.5. Capture conditions in inrush current mode

Reminder: The capture depends on a triggering (start) event and a stop event. If a capture ends with a stop event or if the recording memory of the device is full, the capture stops automatically.

The capture stop threshold is calculated as follows:

$$[\text{Stop threshold [A]}] = [\text{Start threshold [A]}] \times (100 - [\text{stop hysteresis [\%]}]) \div 100$$

Here are the conditions for triggering and stopping captures:

Triggering channel	Triggering and stop conditions
AI	Triggering condition \Leftrightarrow [AI half-cycle RMS value] > [Triggering threshold] Stop condition \Leftrightarrow [AI half-cycle RMS value] < [Stop threshold]
A2	Triggering condition \Leftrightarrow [A2 half-cycle RMS value] > [Triggering threshold] Stop condition \Leftrightarrow [A2 half-cycle RMS value] < [Stop threshold]
A3	Triggering condition \Leftrightarrow [A3 half-cycle RMS value] > [Triggering threshold] Stop condition \Leftrightarrow [A3 half-cycle RMS value] < [Stop threshold]
3A	Triggering condition \Leftrightarrow [[the half-cycle RMS value of one current channel] > [Triggering threshold] Stop condition \Leftrightarrow [the half-cycle RMS values of all current channels] < [Stop threshold]

MAINTENANCE

18.1. Important recommendation

For maintenance, use only the spare parts specified. The manufacturer cannot be held liable for any accident that occurs following a repair not performed by its customer service department or by an approved repairer.

18.2. Recharging the battery

The battery charge is managed by the device when connected to the AC network via the mains power unit supplied.

★ For safety reasons and to ensure the correct operation of the charger, the storage battery must be replaced with power off.

★ Do not throw the battery into a fire.

★ Do not expose the battery to a temperature in excess of 75°C.

★ Do not short-circuit the terminals of the battery.

★ When the battery is fully recharged, please remove the power adapter(if do not use an external power supply).

18.3. Replacing the battery

For safety reasons, advice that replaces the battery only with the original model

To replace the battery, proceed as follows:

★ To eliminate all risks of electric shock, disconnect the power supply cord and connected devices.

★ Turn the device over.

★ Use a cross screwdriver to unscrew the two quarter-turn screws on the back of the housing. Then open the battery cover.

★ Gently remove the old battery, and replace a new original battery (To avoid damaging the battery connection, do not pull on the wires).

★ Put the battery compartment cover back in place and screw the 2 quarter-turn screws back in.

★ Reboot the device to confirm.

Note: If the battery is disconnected, it must then be fully recharged, even if it is not replaced, so that the device will know the battery charge condition (this information is lost when the battery is disconnected).





[UNI-T UT285C Power Quality Analyzer](#) [pdf] User Manual
UT285C Power Quality Analyzer, Power Quality Analyzer, Quality Analyzer

Manuals+.