



# uniview EZTools Software User Manual

[Home](#) » [uniview](#) » uniview EZTools Software User Manual 

## uniview EZTools Software User Manual

Thank you for purchasing our product. If there are any questions, or requests, please do not hesitate to contact the dealer.

### Notice

- The contents of this document are subject to change without prior notice.
- Best effort has been made to verify the integrity and correctness of the contents in this document, but no statement, information, or recommendation in this manual shall constitute formal guarantee of any kind, express or implied.
- The product appearance shown in this manual is for reference only and may be different from the actual appearance of your device.
- The illustrations in this manual are for reference only and may vary depending on version or model.
- This manual is a guide for multiple product models and so it is not intended for any specific product.
- Due to uncertainties such as physical environment, discrepancy may exist between the actual values and reference values provided in this manual. The ultimate right to interpretation resides in our company.
- Use of this document and the subsequent results shall be entirely on the user's own responsibility.

### Conventions

The following conventions apply in this manual:

- EZTools is referred to as the software for short.
- Devices that the software manages, such as IP camera (IPC) and network video recorder (NVR), are referred to as device.

Convention	Description
<b>Boldface font</b>	Commands, keywords, parameters and GUI elements such as window, tab, dialog box, menu, button, etc.
<i>Italic font</i>	Variables for which you supply values.
>	Separate a series of menu items, for example, <b>Device Management &gt; Add Device</b> .

Symbol	Description
<b>WARNING!</b>	Contains important safety instructions and indicates situations that could cause bodily injury.
<b>CAUTION!</b>	Means reader be careful and improper operations may cause damage or malfunction to product.
<b>NOTE!</b>	Means useful or supplemental information about the use of product.

## Contents

- [1 Introduction](#)
- [2 Upgrade](#)
- [3 Functions](#)
  - [3.1 Preparation](#)
  - [3.2 Management and Configuration](#)
  - [3.3 Tips for Usage](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

## Introduction

This software is a tool used to manage and configure devices on a local area network (LAN) including IPC and NVR. Major functions include:

	Function
Device Configuration	Configure the device name, system time, DST, network, DNS, port and UNP of an I PC or NVR. Besides, Change Device Password and Change Device IP Address are also included.
Channel Configuration	Configure channel settings including image, encoding, OSD, audio and motion detection.
Upgrade Device	<ul style="list-style-type: none"> <li>Local Upgrade: Upgrade device(s) using an upgrade file on your computer.</li> <li>Online Upgrade: Check the device firmware version, download upgrade files and upgrade the device with Internet connection.</li> </ul>
Maintenance	Includes Configuration Import/Export, Export Diagnosis Info, Restart Device, and Restore Default Settings.
NVR Channel Management	Includes adding NVR channel and deleting NVR channel.
Calculation	Calculate recording time allowed or disks needed.
APP Center	Provides a portal through which users can download, install and upgrade other software.

## Upgrade

Check for updates, download and install the latest version.

1. A "New Version" prompt appears in the upper right corner if a new version is detected.



2. Click **New Version** to view details and download the new version.



Name: EZTools 2.0

Version: [B1103.2.0.0.190413](#)
[Updates Available\(B1103.2.0.0\)](#)



3. You can choose to install immediately or later when the new version is downloaded. Clicking the upper right corner will cancel the installation.
- **Install Now:** Close the software and start installation immediately.
  - **Install Later:** The installation will start after the user closes the software.

Functions

Preparation

Search Devices

The software automatically searches for devices on the LAN where the PC resides and lists the discovered. To search a specified network, follow the steps as shown below:

Refresh

Search Setup 1

Search Setup

Search Mode

Automatic Search

2 Specified Search

From 3

192 . 168 . 0 . 1

To

192 . 168 . 0 . 255

List Items

☒ Version
☐ MAC
☐ Serial No.
☐ Subnet Mask

☐ Gateway
☒ Device Status

OK

Cancel

Log in to Devices

You need to log in to a device before you can manage, configure, upgrade, maintain or restart a device. Choose the following methods to log in to your device:

- Log in to device in the list: Select the device(s) in the list and then click the Login button on the top.

Login 1

Manage Device Password

IP


Modify IP

Device Config

Export

Device Name	IP	Model	Version	Device Status	Operation	Operation Status
IPC-E616-IR@DU-X...	192.168.4.123	IPC-E616-IR	QIPC-B1203.13.2.201010	Not logged in	IP	...
IPC-B301-IR1@P-F36	192.168.4.178	IPC-B301-IR1	IPC_D1201-B5022P12D1702	Not logged in	IP	...
TIC6831-IR@F50-4...	192.168.4.164	TIC6831-IR	QIPC-B2201.9.3.210426H01	Not logged in	IP	...

- Log in to device not in the list: Click Login, and then enter the IP, port, username and password of the device you want to log in to.

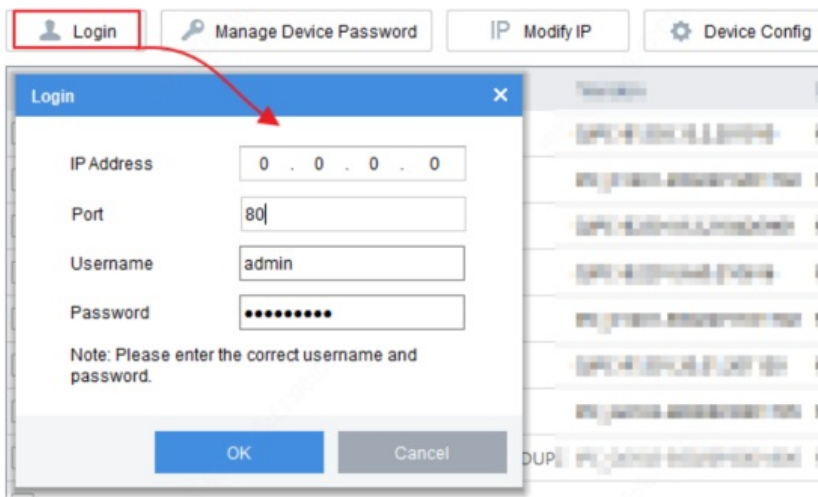

## Management and Configuration

### Manage Device Password


- Complete verification info

The email address will be used to retrieve the password in case you forget it.

- **a.** Click Device Cfg. on the main menu.
- **b.** Select device(s), then click Manage Device Password > Verification Info on the top toolbar.
- **c.** Enter an email address, then click OK.

- Change device password


The default password is only intended for the first login. For security, please change the password when logged in. You can only change the admin's password.

- **a.** Click Device Cfg. on the main menu.
- **b.** Choose the following methods to change device password:
  - For a single device: Click  in the Operation column.
  - For multiple devices: Select devices, then click Manage Device Password > Change Password on the top toolbar.

Device Name	IP	Model	Version	Device Status	Operation	Operation Status
IPC3634ER3-DP228	192.168.4.102	IPC3634ER3-DP228	QIPC-86102.26.36.200909	Logged in		Login succeeded
HIC6881-IR@X3B-L...	192.168.4.98	HIC6881-IR	QIPC-82201.8.0.201013	Logged in		Login succeeded

### Change Device IP Address


1. Click **Device Cfg.** on the main menu.
2. Choose the following methods to change device IP:
  - For a single device: Click **IP** in the **Operation** column.
  - For multiple devices: Select the devices, and then click **Modify IP** on the top toolbar. Set the start IP in the **IP Range** box, and the software will automatically fill in other parameters according to the number of devices. Please make sure the username and password are correct.

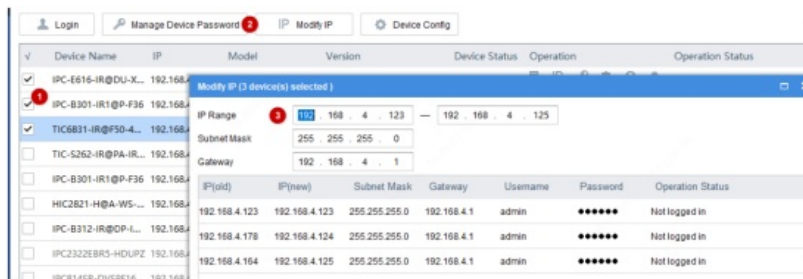

## Configure Device

Configure the device name, system time, DST, network, DNS, port and UNP of an IPC or NVR.

1. Click Device Cfg. on the main menu.

2. Click  in the Operation column.




### NOTE!

You may select multiple devices to batch configure device system time, DST, DNS, port and UNP. Device name and network settings cannot be configured in batches.

3. Configure device name, system time, DST, network, DNS, port and UNP as needed.


- Configure device name.

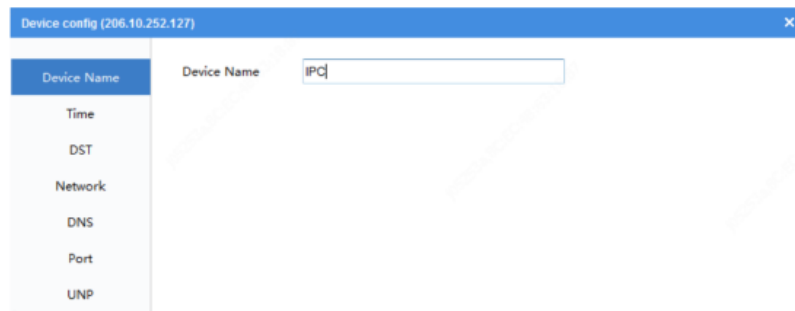

- Configure the time.

Synchronize the time of the computer or NTP server to the device.

- Turn off Auto Update: Click Sync with Computer Time to synchronize the computer's time to the device.
- Turn on Auto Update: Set the NTP server address, NTP port and update interval, then the device will synchronize time with the NTP server at set intervals.

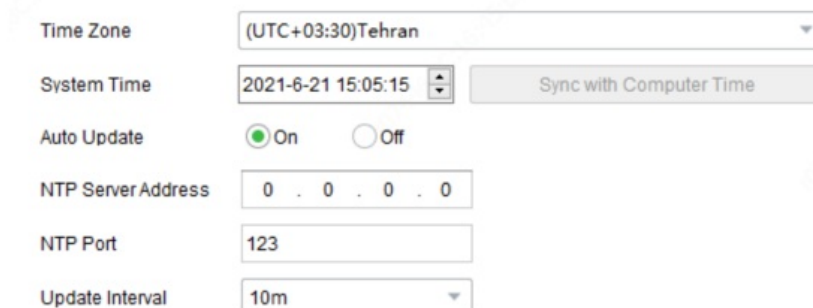

- Configure Daylight Saving Time (DST).

DST ☐ On ☒ Off

Start Time Feb First Mon 00 o'clock

End Time Mar Second Mon 00 o'clock

Bias 90 min

- Configure network settings.

IP Obtain Mode Static IP Address Port Type Copper Port

IP Address 206 . 10 . 252 . 127 Operating Mode Auto-Negotiation

Subnet Mask 255 . 255 . 0 . 0

Gateway 206 . 10 . 0 . 1

- Configure the DNS.

Preferred DNS Server 8 . 8 . 8 . 8

Alternate DNS Server 8 . 8 . 4 . 4

- Configure ports.

HTTPS Port 443

HTTP Port 80

- Configure UNP. For a network with firewalls or NAT devices, you may use Universal Network Passport (UNP) to interconnect the network. To use this service, you need to configure on a UNP server first.

UNP Service ☐ On ☒ Off

Server Address 0 . 0 . 0 . 0


Authenticate ☒ Yes ☐ No

Username

Password

## Configure Channel

Configure channel settings including image, encoding, OSD, audio and motion detection. The parameters displayed may vary with device model.

1. Click **Channel Cfg.** on the main menu.
2. Click  in the **Operation** column.





### NOTE!


You may select multiple IPCs of the same model and then click Channel Config on the top toolbar. NVR cannot be configured in batches.

3. Configure image, encoding, OSD, audio and motion detection as needed.

- Configure image settings, including image enhancement, scenes, exposure, smart illumination, and white balance.

 **NOTE!**

- A double-click on the image will display it in full screen; another double-click will restore the image.
- Clicking Restore Default will restore all the default image settings. After restoration, click Get Parameters to obtain the default settings.
- To enable multiple scene schedules, select Multiple Scenes from the Mode drop-down list, select scenes and set the corresponding schedules, illumination ranges, and elevation ranges. Select the check box for the scenes that you have set, and then select the Enable Scene Schedule check box at the bottom to make the schedules effective. When conditions are met for a scene, the camera will switch to this scene; otherwise, the camera uses the default scene (shows  in the Operation column). You can click  to specify the default scene.
- You may copy image, encoding, OSD and motion detection configurations of an NVR channel and apply them to other channel(s) of the same NVR. See Copy NVR Channel Configurations for details.

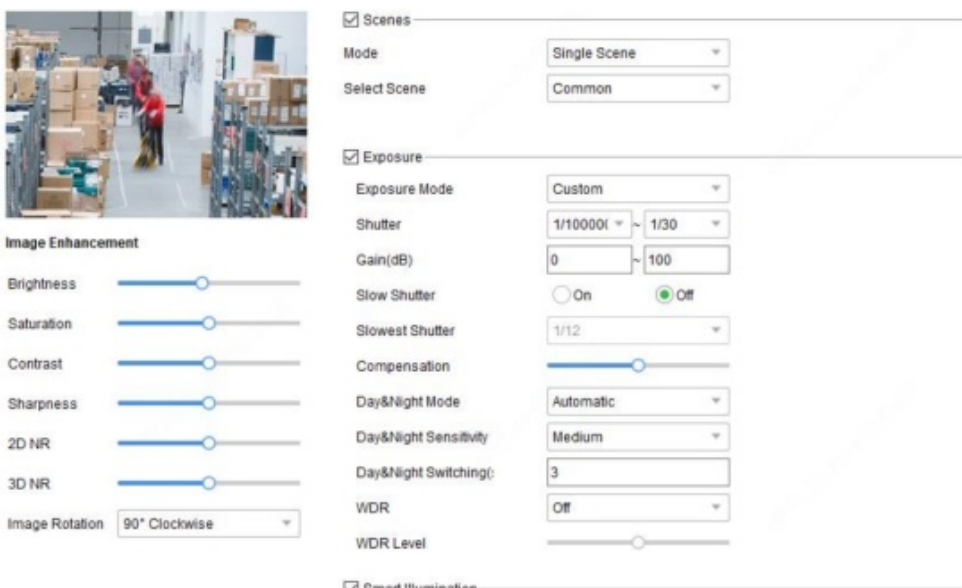

The screenshot displays the camera configuration interface. On the left, there is a live video feed of a warehouse aisle. Below the feed, the 'Image Enhancement' section includes sliders for Brightness, Saturation, Contrast, Sharpness, 2D NR, and 3D NR, along with an 'Image Rotation' dropdown set to '90° Clockwise'. The main configuration area on the right is divided into two sections: 'Scenes' and 'Exposure'. The 'Scenes' section has a 'Mode' dropdown set to 'Single Scene' and a 'Select Scene' dropdown set to 'Common'. The 'Exposure' section includes 'Exposure Mode' (Custom), 'Shutter' (1/100000), 'Gain(dB)' (0), 'Slow Shutter' (Off), 'Slowest Shutter' (1/12), 'Compensation' (slider), 'Day&Night Mode' (Automatic), 'Day&Night Sensitivity' (Medium), 'Day&Night Switching()' (3), 'WDR' (Off), and 'WDR Level' (slider). At the bottom, there is a checkbox for 'Smart Illumination'.

- Configure encoding parameters.

Current Channel

Channel 001

Capture Mode

1920×1080@25

Main

Compression

H.264

Resolution

1920×1080(1080P)

Frame Rate(fps)

25

Bit Rate(Kbps)

4096

[128 ~ 16384]

Bit Rate Type

CBR

Image Quality

Bit Rate

Quality

5

I Frame Interval

50

[5 ~ 250]

GOP

IP

Smoothing

Clear

Smooth

U-Code

Off

Copy To

Enable Sub

Compression

H.264

Resolution

720×576(D1)

Frame Rate(fps)

25

Bit Rate(Kbps)

1024

[128 ~ 16384]

Bit Rate Type

CBR

Image Quality

Bit Rate

Quality

5

I Frame Interval

50

[5 ~ 250]

GOP

IP

Smoothing

Clear

Smooth

U-Code

Off

- Configure OSD.



Display Style

Effect

Background

Font Size

X-large

Font Color

#000000

Min.Margin

None

Date Format

yyyy-MM-dd

Time Format

HH:mm:ss

✓	No.	Position	Overlay OSD Content
<input checked="" type="checkbox"/>	1	Area1	<PTZ Coordinates>
<input checked="" type="checkbox"/>	2	Area2	<Date & Time>
<input type="checkbox"/>	3	Area3	
<input type="checkbox"/>	4	Area4	
<input type="checkbox"/>	5	Area5	
<input type="checkbox"/>	6	Area6	
<input type="checkbox"/>	7	Area7	
<input type="checkbox"/>	8	Area8	

Overlay Area1

X

24

Y

28

Aligning

Left

Export

Import

## NOTE!

You can export and import OSD configurations of IPC channel(s). See Export and Import OSD Configurations of an IPC for details.

- Configure audio.

Currently this function is not available for NVR channels.

Audio Input

☒ On
☐ Off

Audio Input Gain

128

[0 ~ 255]

Encoding Format


G.711U

Sampling Rate(KHz)

8

- Configure motion detection.


Motion detection detects object motion in the detection area during the set period. The motion detection settings may vary with device. The following takes NVR channel as an example:

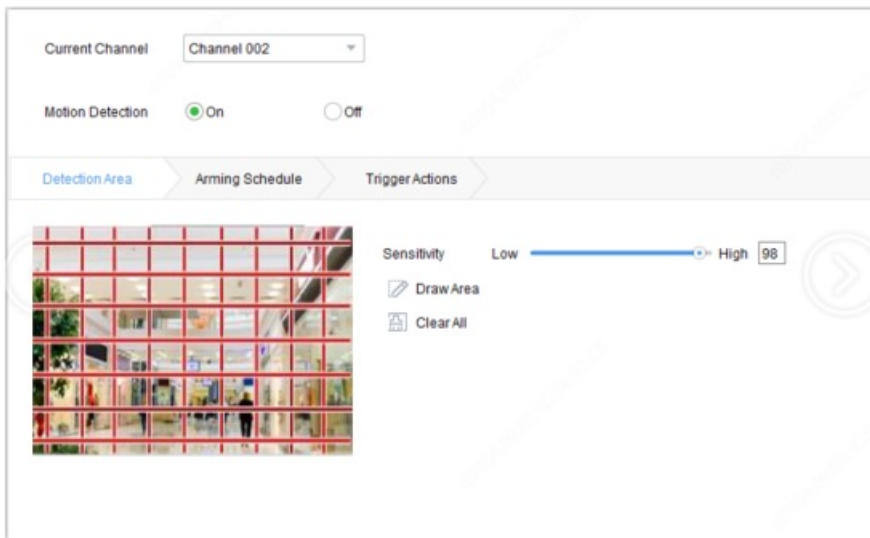

Item	Description
Detection Area	Click <b>Draw Area</b> to draw detection area in the left live view window.
Sensitivity	The higher the value, the easier a moving object will be detected.
Trigger Actions	Set the actions to trigger after a motion detection alarm occurs.
Arming Schedule	<p>Set the start and end time during which motion detection takes effect.</p> <ul style="list-style-type: none"> <li>Click or drag on the green area to set arming periods.</li> <li>Click <b>Edit</b> to enter time periods manually. After you complete the settings for a day, you may copy the settings to other days.</li> </ul>

## View Device Info

View device information, including device name, model, IP, port, serial number, version info, etc.

1. Click Device Cfg. or Channel Cfg. or Maintenance on the main menu.
2. Click  in the Operation column.




### NOTE!

Device info is also displayed for devices not logged in, but subnet mask and gateway will not be displayed.

## Export Device Info


Export information including name, IP, model, version, MAC address and serial number of device(s) to a CSV file.

1. Click Device Cfg. or Channel Cfg. on the main menu.
2. Select the device(s) in the list, and then click the Export button in the upper right corner.

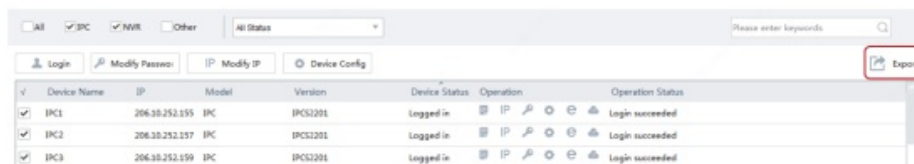

## Export Diagnosis Info

Diagnosis information includes logs and system configurations. You can export diagnosis info of device(s) to PC.

1. Click Maintenance on the main menu.
2. Click  in the Operation column.
3. Select the destination folder, and then click Export.




## Configuration Import/Export

Configuration import allows you to import a configuration file from your computer to a device and change the current settings of the device.

Configuration export allows you to export current configurations of the device and save them as a file for backup.


1. Click Maintenance on the main menu.
2. Choose the following methods as needed:
  - For a single device: Click in the Operation column.
  - For multiple devices: Select the devices, and then click Maintenance on the top toolbar.

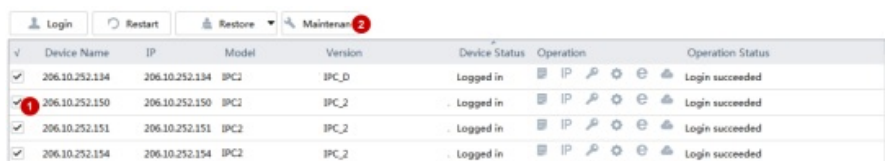

## Restore Default Settings

Restoring default settings includes restore defaults and restore factory defaults. Restore defaults: Restore factory default settings except network, user and time settings. Restore factory defaults: Restore all factory default settings.

1. Click Maintenance on the main menu.
2. Select the device(s).
3. Click Restore on the top toolbar and then choose Restore Defaults or Restore Factory Defaults.

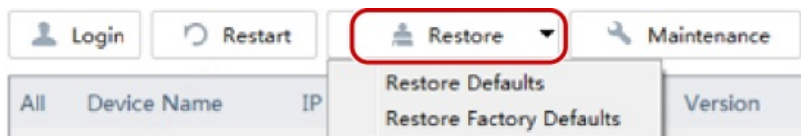


## Restart Device

1. Click Maintenance on the main menu.
2. Choose the following methods as needed:
  - For a single device: Click in the Operation column.
  - For multiple devices: Select the devices, and then click Restart on the top toolbar.

✓	Device Name	IP	Model	Version	Device Status	Operation	Operation Status
✓	206.10.252.134	206.10.252.134	IPC2	IPC_D	Logged in	[Icons]	Login succeeded
✓	206.10.252.150	206.10.252.150	IPC2	IPC_2	Logged in	[Icons]	Login succeeded
✓	206.10.252.151	206.10.252.151	IPC2	IPC_2	Logged in	[Icons]	Login succeeded
✓	206.10.252.154	206.10.252.154	IPC2	IPC_2	Logged in	[Icons]	Login succeeded

## Log in to the Web of a Device

1. Click Device Cfg. or Channel Cfg. on the main menu.
2. Click  in the Operation column.

## Upgrade Device

Device upgrade includes local upgrade and online upgrade. Upgrade progress is displayed in real time during the upgrade.

Local upgrade: Upgrade device(s) using an upgrade file on your computer.

Online upgrade: With Internet connection, online upgrade will check the device firmware version, download upgrade files and upgrade the device. You need to log in first.


Local Upgrade		Online Upgrade				
All	IP	Model	Version	Device Status	Upgrade Progress	Operation Status
✓	206.10.252.150	IPC22	IPC_220	Online	--	Logged in
✓	206.10.252.155	IPC22	IPC_220	Online	--	Logged in
✓	206.10.252.159	IPC22	IPC_220	Online	--	Logged in
✓	206.10.252.162	IPC22	IPC_220	Online	--	Logged in
✓	206.10.252.166	IPC32	IPC_220	Online	--	Logged in
✓	206.10.252.167	IPC22	IPC_220	Online	--	Logged in

[Upgrade](#)

- The upgrade version must be correct for the device. Otherwise, exceptions may occur.
- For an IPC, the upgrade package (ZIP file) must contain the complete upgrade files.
- For an NVR, the upgrade file is in .BIN format.
- You can upgrade NVR channels in batches.
- Please maintain a proper power supply during upgrade. The device will restart after the upgrade is completed.

### Upgrade a device using a local upgrade version file


1. Click Upgrade on the main menu.
2. Under Local Upgrade, select the device(s) and then click Upgrade. A dialog box is displayed (take NVR as an example).

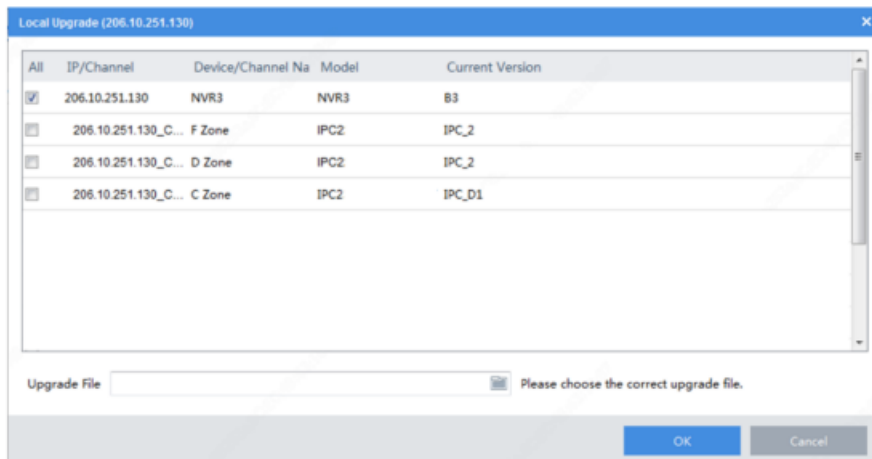

3. Select the upgrade version file. Click OK.

### Online Upgrade

1. Click Upgrade on the main menu.
2. Under Online Upgrade, select the device(s) and then click Upgrade.

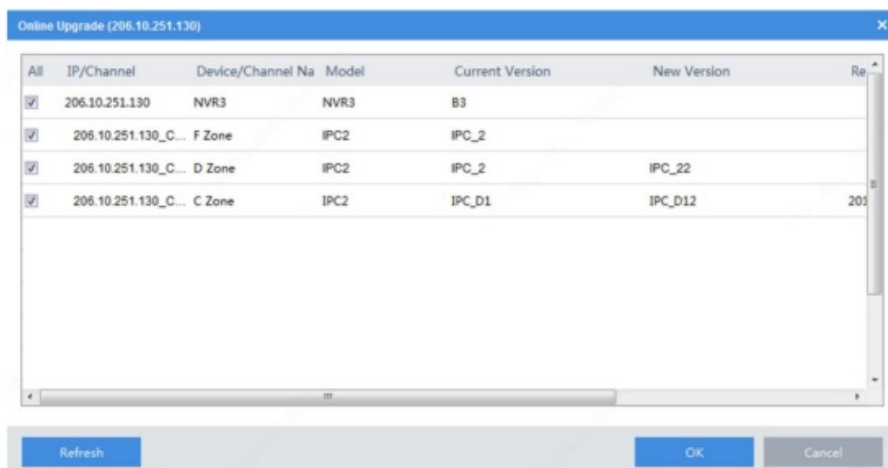


3. Click Refresh to check for available upgrades.
4. Click OK.

### NVR Channel Management

NVR channel management includes adding NVR channel and deleting NVR channel.

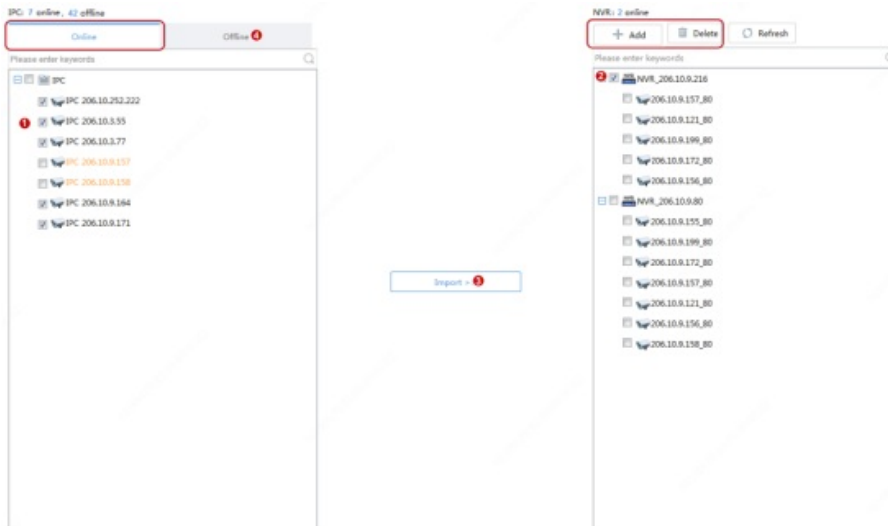

1. Click NVR on the main menu.
2. On the Online tab, select the IPC(s) to import, select the target NVR, and then click Import.



### NOTE!

- In the IPC list, orange means the IPC has been added to an NVR.
- In the NVR list, blue means the newly added channel.
- To add an offline IPC, click the Offline tab (4 in the figure). The IPC's username and password are required.

### NOTE!

- Use the Add button on the top if the IPC you want to add is not in the IPC list.
- To delete an IPC from the NVR list, place the mouse cursor on the IPC and click . To delete multiple IPCs in batches, select the IPCs and then click  Delete on the top.

## Cloud Service

Enable or disable the cloud service and the Add Without Signup feature on the device; delete a cloud device from the current cloud account.

1. Log in to the device.
2. Click Device Cfg. or Maintenance on the main menu.
3. Click in the Operation column. A dialog box is displayed.

Cloud Service (192.168.2.10)

×

EZCloud:

☒ On ☐ Off

Add Without Signup:

☒ On ☐ Off

Server Address:

[ezcloud.uniview.com](http://ezcloud.uniview.com)

Register Code:

XXXXXXXXXXXXXXX

Username:

zhao

Device Status:

Online

Service Agreement:

<http://ezcloud.uniview.com/doc/terms of service.html>

Scan QR Code:



Refresh

4. Enable or disable the cloud service (EZCloud) as needed. When the cloud service is enabled, you can use the APP to scan the QR code below to add the device.

**Note:** Please click Refresh to update device status after you enable or disable the cloud service.

5. Enable or disable the Add Without Signup feature, which, when enabled, allows you to add the device by scanning the QR code using the APP without signing up for a cloud account.

**Note:** The Add Without Signup feature requires the cloud service be enabled on the device and a strong password be set on the device.

6. For a cloud device, you can remove it from the current cloud account by clicking **Delete**.

### Calculation

Calculate recording time allowed or disks needed.

1. Click Calculation on the main menu.
2. Click Add on the top toolbar.

Add

Channel Number

1

Compression

H.264

Resolution

1920×1080(1080P)

Frame Rate

25

U-Code

Off

Environmental Complexity

Medium

Bit Rate(Kbps)

4096

Best Bit Rate(Kbps)

4096

OK

Cancel

**Note:** You may also click Search to Add and select discovered devices for space calculation based on their actual video settings.

- Complete the settings. Click OK.
- Repeat the above steps as needed.

Total
51
device(s)
Refresh
Search Setup

Add
Edit
Delete
Search to Add

✓	Compression	Channels	Resolution	Frame Rate(fps)	Bit Rate(Kbps)	Total Bandwidth(Kbps)
<input checked="" type="checkbox"/>	H.264	10	1920×1080(1080P)	25	4096	40960
<input checked="" type="checkbox"/>	H.264	6	1280×720(720P)	25	2048	12288

- Select devices in the device list.

## Calculate days in disk mode

Calculate how many days recordings can be saved based on the daily recording time (hours) and disk capacity available.

Calculate Days      Calculate Disks

Daily Recording: 24 <sup>1</sup> Hour(s)

Space Needed: 548.4 GB <sup>2</sup>

☒ Disk Mode      ☐ RAID Mode

Disk Capacity: 10 TB

Usable Space: 9094.9 GB

Recording Time:

16 Days

### Calculate days in RAID mode

Calculate how many days recordings can be saved based on the daily recording time (hours), configured RAID type (0/1/5/6), RAID disk capacity, and the number of disks available.

Calculate Days      Calculate Disks

Daily Recording: 24 <sup>1</sup> Hour(s)

Space Needed: 548.4 GB <sup>2</sup>

☐ Disk Mode      ☒ RAID Mode

Disk Capacity: 10 TB

RAID Type: RAID 5

RAID Disks: 5

Usable Space: 36379.7 GB

Recording Time:

66 Days

### Calculate disks in disk mode

Calculate how many disks are needed based on the daily recording time (hours), recording retention period (days), and disk capacity available.

Calculate Days

Calculate Disks

1

Retention Tim

30

Day(s)

Daily Recordir

24

Hour(s)

Space Needed:16453.1 GB

2

☒ Disk Mode


☐ RAID Mode

Disk Capacity:

10

TB

Disks Needed:

 X 2

Usable Space: 18189.9 GB

### Calculate disks in RAID mode

Calculate how many RAID disks are needed based on the daily recording period (hours), recording retention period (days), RAID disk capacity available, and configured RAID type.

Calculate Days

Calculate Disks

1

Retention Tim 30 Day(s)

Daily Recordir 24 Hour(s)

Space Needed:16453.1 GB

2


☐ Disk Mode

☒ RAID Mode

Disk Capacity: 10 TB

RAID Type: RAID 5

RAID Disks:

 X 3

Usable Space: 18189.8 GB

## Tips for Usage


### Select Devices

Select a device by selecting the check box in the first column of the list. To select multiple devices:

- Select devices one by one.
- Click All to select all.
- Click to select devices while holding down **<Ctrl>**.
- Click to select devices while holding down **<Shift>**.
- Drag the mouse while holding down the left button.

### Filter Device List

Filter the list by entering a keyword contained in the IP, model, version, and name of the desired devices.

Click  to clear entered keywords.

### Sort Device List

In the device list, click a column title, for example, device name, IP, or status, to sort the listed devices in ascending or descending order.

### Customize Device List

Click Search Setup on the top, then select titles to display on the device list.

Search Setup

Search Mode

☒ Automatic Search

☐ Specified Search

From

192 . 168 . 0 . 1

To

192 . 168 . 0 . 255

List Items

☒ Version

☐ MAC

☐ Serial No.

☐ Subnet Mask

☐ Gateway

☒ Device Status

OK

Cancel

## Copy NVR Channel Configurations

You can copy image, encoding, OSD and motion detection configurations of an NVR channel to other channels of the NVR.


### NOTE!

This feature only supports NVR channels that are connected via Uniview private protocol.

- Image parameters: Include settings of image enhancement, exposure, smart illumination and white balance.
- Encoding parameters: Depending on the stream type that the device supports, you can choose to copy encoding parameters of the main and/or sub streams.
- OSD parameters: OSD style.
- Motion detection parameters: Detection area, arming schedule.


The following describes how to copy encoding configurations. Copying image, OSD and motion detection configurations are similar.

First, complete the configuration of the channel to copy from (e.g., Channel 001) and save the settings. And then follow the steps as illustrated:

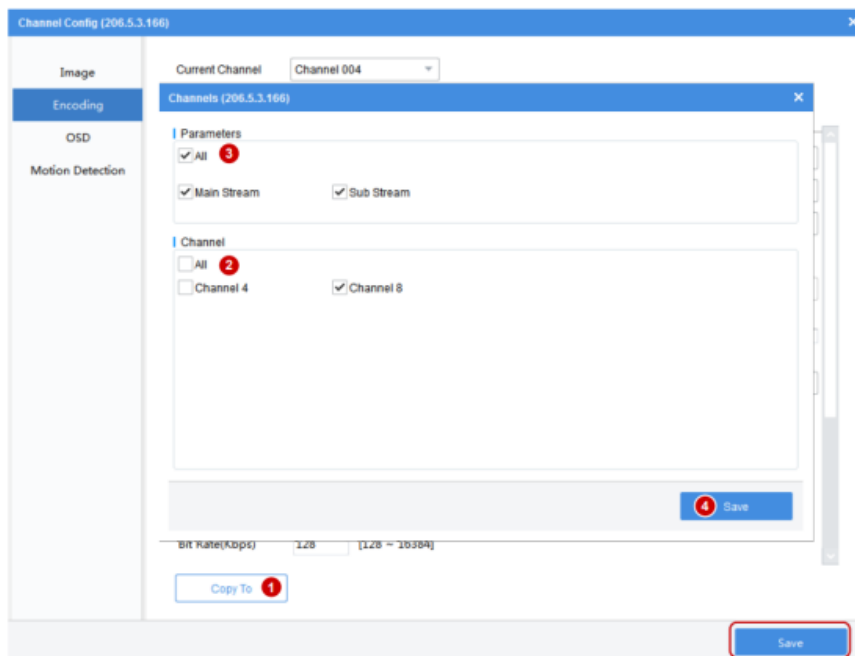

## Export and Import OSD Configurations of an IPC

You can export OSD configurations of an IPC to a CSV file for backup, and apply the same configurations to other IPCs by importing the CSV file. The OSD configurations include effect, font size, font color, minimum margin, date & time format, OSD area settings, types and OSD contents.

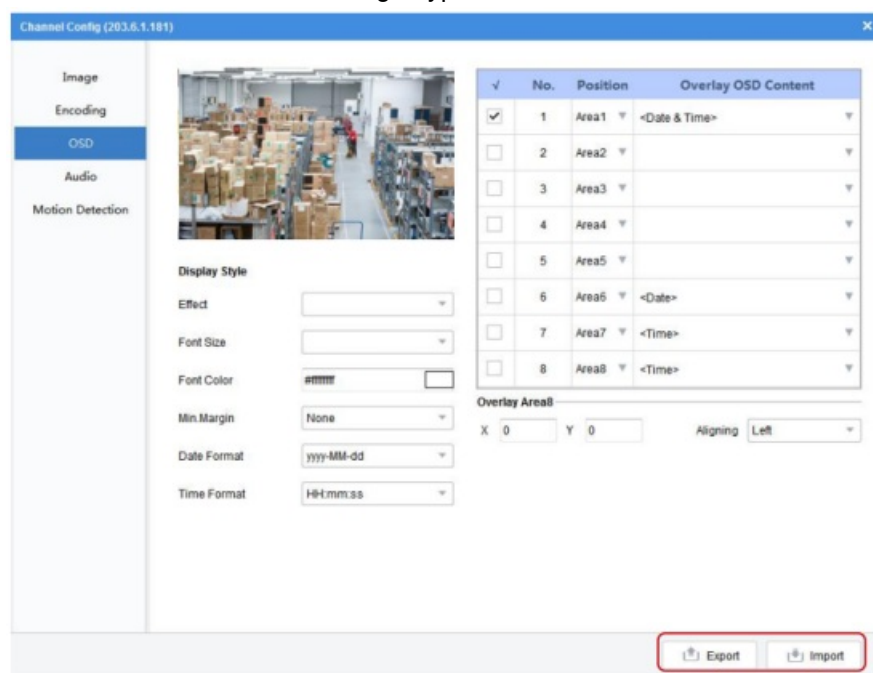

### NOTE!

When importing a CSV file, make sure the IP addresses and serial numbers in the file match that of the target IPCs; otherwise, import will fail.

## Documents / Resources

[uniview EZTools Software](#) [pdf] User Manual  
EZTools Software, EZTools, Software