

wenglor I08H051 Inductive Sensors With Increased Switching Distances Instruction Manual

[Home](#) » [wenglor](#) » wenglor I08H051 Inductive Sensors With Increased Switching Distances Instruction Manual




Contents

- 1 wenglor I08H051 Inductive Sensors With Increased Switching Distances
- 2 Product Information
- 3 Product Usage Instructions
- 4 General
- 5 For Your Safety
- 6 Technical Data
- 7 Transport and Storage
- 8 Installation and Electrical Connection
 - 8.1 Installation Instructions
 - 8.2 Diagnosis
- 9 Maintenance Instructions
- 10 Proper Disposal
- 11 Appendix
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts



wenglor I08H051 Inductive Sensors With Increased Switching Distances

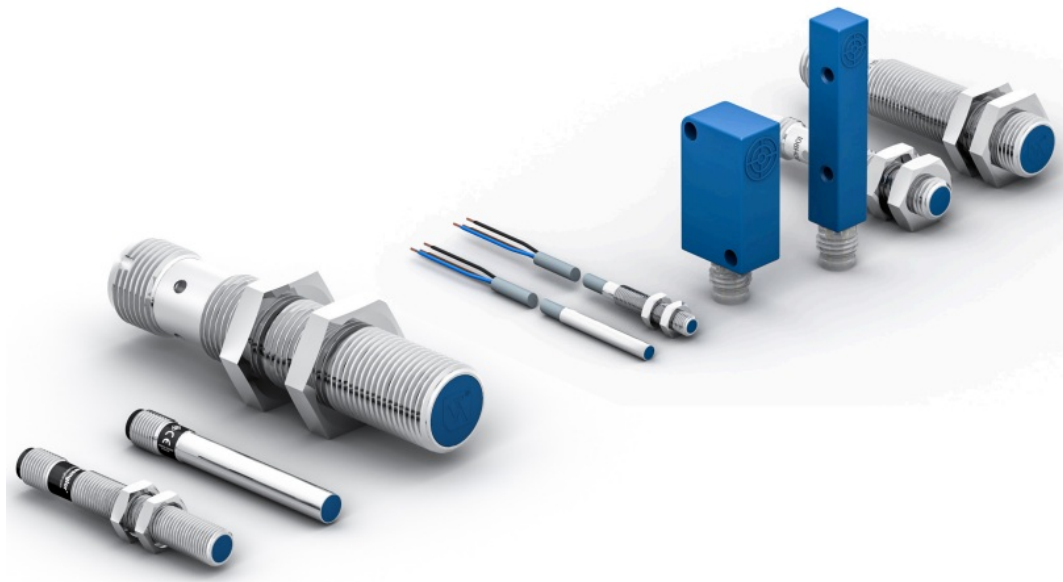

Product Information

The product is an inductive sensor with two variants: one with a standard switching distance and another with an increased switching distance. It is designed to detect the position of metallic objects by generating a magnetic field using a coil located underneath the sensing face. When metal objects, such as steel, aluminum, or brass, approach the sensor, eddy currents are generated within the magnetic field and measured by the sensor. Once the approaching metal object reaches the selected switching distance, the output of the sensor is switched.

Product Usage Instructions

1. Before using the product, read the operating instructions carefully and keep them on hand for future reference.
2. Ensure that the product is used for its intended purpose, which is to detect the position of metallic objects using the inductive sensing principle.
3. Refer to the technical data provided in the manual for detailed specifications and scope of delivery.
4. During transportation, handle the product with care to avoid any damage. Follow the recommended storage instructions when not in use.
5. Regularly perform maintenance tasks as described in the maintenance instructions section of the manual.
6. Properly dispose of the product according to the guidelines provided in the manual.

General

Information Concerning these Instructions

- These instructions apply to the products:
 - Inductive sensors with standard switching distances (I12Nxxx, I18Nxxx, I30Nxxx, IJ008, IL008)
 - Inductive sensors with increased switching distances (I03Hxxx, I04Hxxx, I08Hxxx, I12Hxxx, I18Hxxx, I30Hxxx, I1AHxxx, I1BHxxx, I1CHxxx, I1DHxxx, I1QHxxx)
- They make it possible to use the product safely and efficiently.
- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
- Local accident prevention regulations and national work safety regulations must be complied with as well.
- The product is subject to further technical development, and thus the information contained in these operating instructions may also be subject to change. The current version can be found at www.wenglor.com in the

product's separate download area.

NOTE!

The operating instructions must be read carefully before using the product and must be kept on hand for later reference!

Explanations of Symbols

- Safety precautions and warnings are emphasized by means of symbols and attention-getting words.
- Safe use of the product is only possible if these safety precautions and warnings are adhered to.
- The safety precautions and warnings are laid out in accordance with the following principle:



SIGNAL WORD

Type and source of danger!

Possible consequences in the event that the hazard is disregarded.

- Measures for averting the hazard.
-

The meanings of the signal words, as well as the scope of the associated hazards, are listed below:



DANGER!

This signal word indicates a hazard with a high degree of risk which, if not avoided, results in death or severe injury.



WARNING!

This signal word indicates a hazard with a medium degree of risk which, if not avoided, may result in death or severe injury.



CAUTION!

This signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



ATTENTION!

This word draws attention to a potentially hazardous situation which, if not avoided, may result in property damage.



NOTE!

A note draws attention to useful tips and suggestions, as well as information regarding efficient, error-free use.

Limitation of Liability

- The product has been developed in consideration of the current state-of-the-art technology, as well as applicable standards and guidelines. Subject to change without notice. A valid declaration of conformity can be found at www.wenglor.com in the product's separate download area.
- wenglor sensoric elektronische Geräte GmbH (hereinafter referred to as "wenglor") excludes all liability in the event of:
 - Non-compliance with the instructions
 - Use of the product for purposes other than those intended
 - Use by untrained personnel
 - Use of unapproved replacement parts

- Unapproved modification of products
- These operating instructions do not include any guarantees from wenglor with regard to the described procedures or specific product characteristics.
- wenglor assumes no liability for printing errors or other inaccuracies contained in these operating instructions unless wenglor was verifiably aware of such errors at the point in time at which the operating instructions were prepared.

Copyrights

- The contents of these instructions are protected by copyright law.
- All rights are reserved by wenglor.
- Commercial reproduction or any other commercial use of the provided content and information, in particular graphics and images, is not permitted without previous written consent from wenglor.

For Your Safety

Use for Intended Purpose

- This wenglor product is intended for use in accordance with the following functional principle
- Inductive Sensors with Standard Switching Distance
- Inductive Sensors with Increased Switching Distance
- Inductive sensors are used to detect the position of metallic objects. A coil is located underneath the sensing face of inductive sensors which generates a magnetic field. Approaching metal objects (e.g. steel, aluminum or brass) generate eddy currents within this magnetic field which are measured by the sensor. When the approaching metal object reaches the selected switching distance, the output is switched.
- This product can be used in the following industry sectors:
 - Special-purpose mechanical engineering
 - Heavy mechanical engineering
 - Logistics
 - Automotive industry
 - Food industry
 - Packaging industry
 - Pharmaceuticals industry
 - Clothing industry
 - Plastics industry
 - Woodworking industry
 - Consumer goods industry
 - Paper industry
 - Electronics industry
 - Glass industry
 - Steel industry
 - Printing industry
 - Aviation industry
 - Construction industry

- Chemicals industry
- Agriculture industry
- Alternative energies
- Raw materials extraction

Use for Other than the Intended Purpose

- No safety components in accordance with 2006/42/EC (Machinery Directive).
- The product is not suitable for use in potentially explosive atmospheres.
- The product may be used only with accessories supplied or approved by wenglor, or in combination with approved products. A list of approved accessories and combination products can be found at www.wenglor.com on the product detail page.

DANGER!

- Risk of personal injury or property damage in case of use for other than the intended purpose!
- Use for other than the intended purpose may lead to hazardous situations.
- Observe instructions regarding use for intended purpose.

Personnel Qualifications

- Suitable technical training is a prerequisite.
- In-house electronics training is required.
- Trained personnel must have (permanent) access to the operating instructions.

DANGER!

- Risk of personal injury or property damage in case of incorrect initial start-up and maintenance!
- Personal injury and damage to equipment may occur.

Adequate training and qualification of personnel

Modification of Products

DANGER!

- Risk of personal injury or property damage if the product is modified.
- Personal injury and damage to equipment may occur. Non-observance may result in loss of the CE mark, and the guarantee may be rendered null and void.

Modification of the product is not permitted.

General Safety Precautions


NOTE!

- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
- In the event of possible changes, the respectively current version of the operating instructions can be found at www.wenglor.com in the product's separate download area.
- Read the operating instructions carefully before using the product.
- Protect sensor against contamination and mechanical influences.

Approvals and Protection Class



- I03Hxxx, I04Hxx:



- IJ008, IL008, I08xxxx, I12xxxx, I18xxxx, I30xxxx, I1AHxxx, I1BHxxx, I1CHxxx, I1DHxxx, I1QHxxx:



Technical Data

The specific technical data for the respective product can be found on the product detail page at www.wenglor.com.

Scope of Delivery

- Sensor
- Packaging bag incl. quick start printing
- Nut set (with I04, I08, I12, I18, I30)

Transport and Storage

Transport

Upon receipt of shipment, inspect the goods for damage in transit. In the case of damage, conditionally accept the package and notify the manufacturer of the damage. Then return the device, making reference to damage in transit.

Storage

The following points must be taken into consideration with regard to storage:

- Do not store the product outdoors.
- Store the product in a dry, dust-free place.
- Protect the product against mechanical impacts.
- Protect the product against exposure to direct sunlight.

ATTENTION!

- Risk of property damage in case of improper storage!
 - The product may be damaged.
- Follow storage instructions.

Installation and Electrical Connection

Installation

- Protect the product from contamination during installation.
- Observe all applicable electrical and mechanical regulations, standards, and safety rules.
- Protect the product against mechanical influences.
- Make sure that the sensor is mounted in a mechanically secure fashion.
- The sensing face of the sensor may not contact any other machine parts.
- Installation instructions must be observed (see product detail page at www.wenglor.com)
- Specified torque values must be complied with (see product detail page at www.wenglor.com)

- **ATTENTION!**

- Risk of property damage in case of improper installation!
- The product may be damaged.

Comply with installation instructions.


- **CAUTION!**

- Risk of personal injury or property damage during installation!
- Personal injury and damage to the product may occur.

Ensure a safe installation environment.




Installation for Format 40×40 (I1QHxxx)

The sensing surface of the sensor can be mounted in 5 different directions.

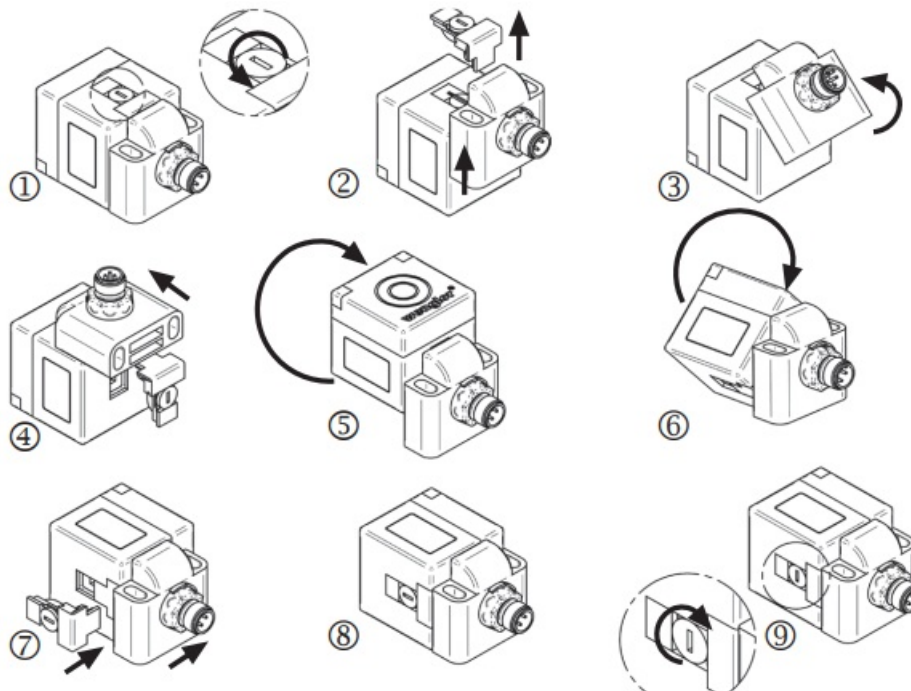

Installation Instructions

1. Installation Instructions in Accordance with Standard

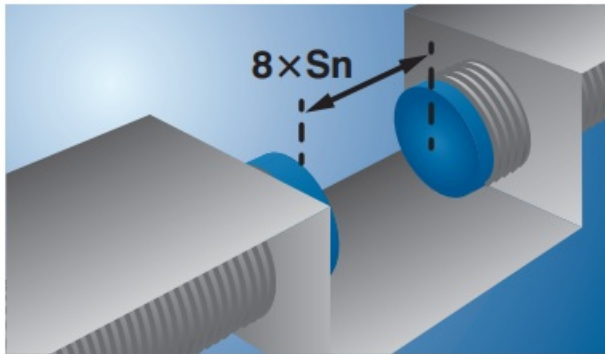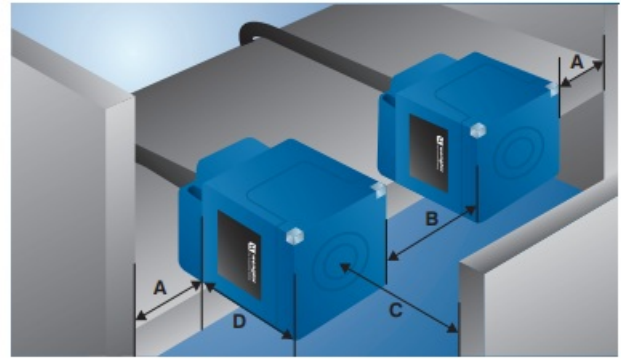
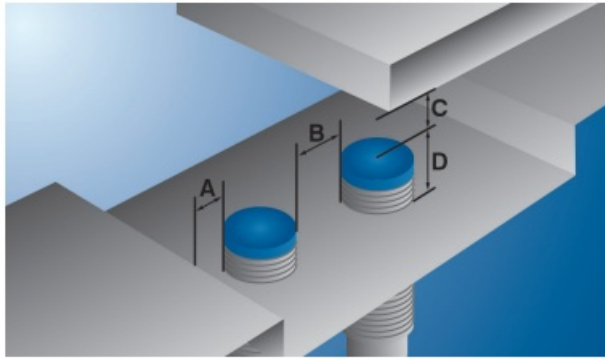


Installation dimension	Description
A	Minimum distance from sensor to damping material (e.g. steel).
B	Minimum distance between two inductive sensors. This clearance applies to installation in air. If the sensors are installed within an attenuating material (e.g. steel), this distance is reduced. Testing in the application is required in order to determine the exact distance.
C	Minimum distance from the sensing face of the inductive sensor to the damping material (e.g. steel). Distance C does not make reference to the object to be detected, but rather to the background. The object to be detected is detected within the switching distance.
D	Minimum dimension by which the sensor (sensing face) must protrude from the damping material (e.g. steel).
$8 \times S_n$	Installation opposite each other Two identical sensors must be mounted at this minimum distance.







2. Installation instructions for sensors with weproTec

- weproTec is the abbreviation for wenglor proximity switch technology, an innovative, patented wenglor technology for inductive sensors.
- Inductive sensors with weproTec can be mounted very close to each other (installation dimension B1) or opposite one another ($1.5 \times S_n$). No reciprocal influence occurs among the sensors within the specified zones.

- The installation instructions in accordance with the standard (section “5.3.1 Installation Instructions in Accordance with Standard” on page 11) are also valid.
- weproTec has the following sensors: I08xxxx, I12xxxx, I18xxxx, I30xxxx, I1AHxxx, I1BHxxx, I1CHxxx, I1DHxxx, I1QHxxx

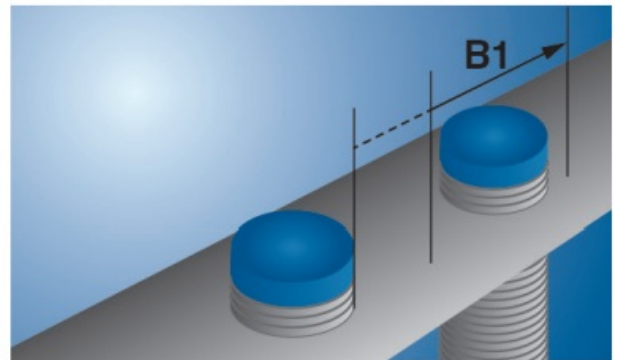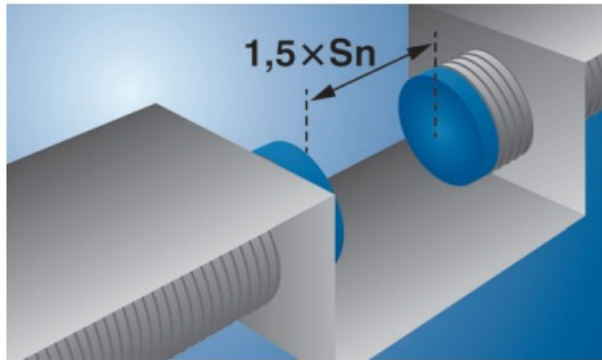


Installation dimension	Description
A	Minimum distance from sensor to damping material (e.g. steel).
B	Minimum distance between two inductive sensors. This clearance applies to installation in air. If the sensors are installed within an attenuating material (e.g. steel), this distance is reduced. Testing in the application is required in order to determine the exact distance.
B1	Additional minimum distance between two inductive sensors. This clearance applies to installation in air. If the sensors are installed within an attenuating material (e.g. steel), this distance is reduced. Testing in the application is required in order to determine the exact distance.
C	Minimum distance from the sensing face of the inductive sensor to the damping material (e.g. steel). Distance C does not make reference to the object to be detected, but rather to the background. The object to be detected is detected within the switching distance.
D	Minimum dimension by which the sensor (sensing face) must protrude from the damping material (e.g. steel).
$1.5 \times S_n$	Installation opposite each other Two identical sensors must be mounted at this minimum distance.

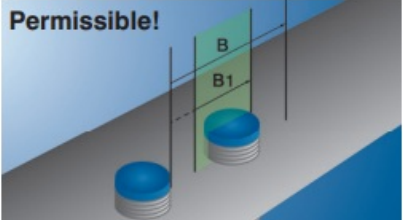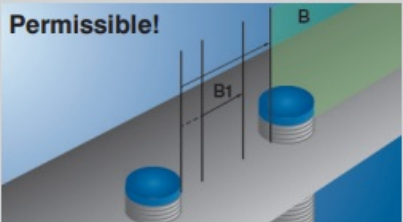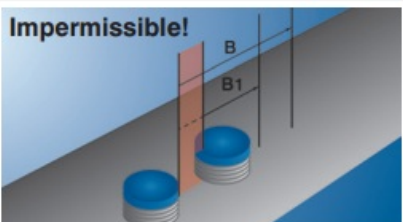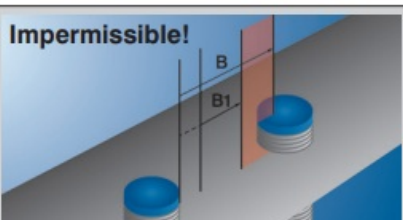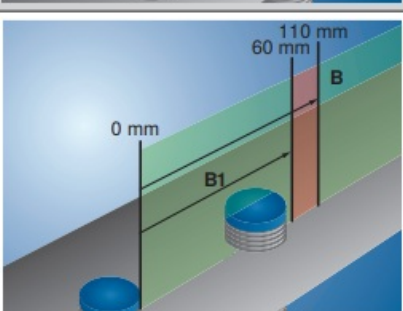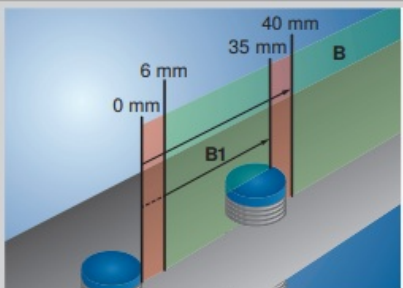Installation variant	Description
Permissible! 	Two sensors can be mounted next to each other in area B1.
Permissible! 	Two sensors can be mounted next to each other from installation dimension B.
Impermissible! 	Two sensors must not be mounted next to each other in front of area B1.
Impermissible! 	Two sensors must not be mounted in the area between B1 and B.
	<p>Example: B1 starts at 0 mm</p> <p>Installation B1 in mm: 0...60</p> <ul style="list-style-type: none"> • Installation A/B/C/D in mm: $x/110/x/x$ • Non-permissible range: 60...110 mm
	<p>Example: B1 does not start at 0 mm</p> <ul style="list-style-type: none"> • Installation B1 in mm: 6...35 • Installation A/B/C/D in mm: $x/40/x/x$

Switching distance

- The switching distance described in the data sheet is the nominal switching distance S_n according to the standard.
- The switching distance refers to a standard measuring plate (material: steel, thickness: 1 mm, side lengths: $3 \times S_n$ or outside diameter sensor).
- The switching distance according to the standard is further differentiated into:
 - Effective switching distance S_r

- Useable switching distance S_u
- Working distance S_a

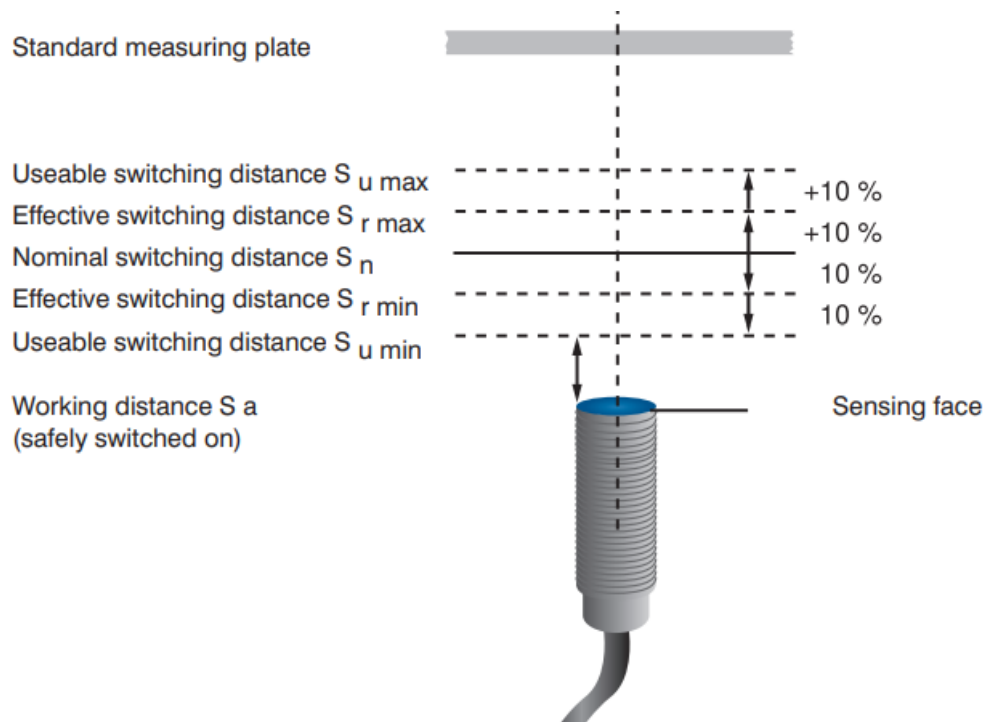

NOTE!

- If the objects in the application are smaller than the standard measuring plate, the switching distance is also reduced.
- The correction factor of the sensor for certain materials also influences the switching distance and must be observed.
- The sensor should be mounted at a working distance S_a or less to the object.

Electrical Connection

- Wire the sensor according to the connection diagram (for the connection diagram see packaging or product detail page at www.wenglor.com)
- Connect the sensor to 10...30 V DC

DANGER!







- Risk of personal injury or property damage due to electric current.
- Live parts may cause personal injury or damage to equipment.




The electric device may be connected by suitably qualified personnel only

Diagnosis

LED Indicators

IJ008, IL008, IO8Hxxx, I12Nxxx, I12Hxxx, I18Nxxx, I18Hxxx, I30Nxxx, I30Hxxx, I1AHxxx, I1BHxxx, I1CHxxx, I1DHxxx, I1QHxxx

Indicator	Status	Meaning
Switching status indicator		Switching output active
	 5 Hz	Error
		Switching output inactive
Indicator	Status	Meaning
Switching status indicator		Switching output active
	 5 Hz	Warning
		Switching output inactive

-  Not lit up
-  Flashing
-  Permanently lit up

Troubleshooting

Error	Possible Cause	Elimination
Warning	Adjustment aid for displaying the unsafe range Active at: $0.8 \times S_{r \min} < S \leq S_{r \min}$ Example $S_n = 1 \text{ mm}$, i.e. $S_{r \min} = 0.9 \text{ mm}$ Adjustment aid active: 0.72...0.9 mm	Reduce the distance between the sensor and the object • Distance must be $< 0.8 \times S_{r \min}$ Example Object distance $< 0.71 \text{ mm}$
Error	Short circuit	Check the electrical wiring and eliminate the short circuit
	Mechanical damage to the coil	Replace the sensor

NOTE!

- Shut down the machine.
- Analyze and eliminate the cause of error with the aid of the diagnostics information.
- If the error cannot be eliminated, please contact wenglor's support department
- Do not operate in case of indeterminate malfunctioning.
- The machine must be shut down if the error cannot be definitively explained or properly eliminated.

DANGER!

- Risk of personal injury or property damage in case of non-compliance!
- The system's safety function is disabled. Personal injury and damage to equipment may occur.
Required action as specified in case of fault.

Maintenance Instructions

NOTE!

- This wenglor sensor is maintenance-free.
- We recommend cleaning the lens and the display, and to check the plug connections at regular intervals.
- Do not clean the sensor with solvents or cleaning agents that could damage the product.
- The product must be protected against contamination during initial start-up.

Proper Disposal

wenglor sensoric GmbH does not accept the return of unusable or irreparable products. Respectively valid national waste disposal regulations apply to product disposal.

Appendix

List of Abbreviations

Abbreviation	Meaning
Sr	Effective switching distance
Sn	Nominal switching distance
Su	Useable switching distance
Sa	Working distance


Index of Changes

Version	Date	Description/Changes
1.0.0	10/21/2021	Initial version of the operating instructions

EU Declaration of Conformity

The EU declaration of conformity can be found on our website at www.wenglor.com in the product's separate download area.

Documents / Resources

	wenglor I08H051 Inductive Sensors With Increased Switching Distances [pdf] Instruction Manual I08H051 Inductive Sensors With Increased Switching Distances, I08H051, Inductive Sensors With Increased Switching Distances, Sensors With Increased Switching Distances, Increased Switching Distances, Switching Distances
---	--

References

-  [wenglor | the innovative family](#)

Manuals+.