



Home » XP Power » XP Power Special Solutions and Modifications User Guide 12





# Special solutions & modifications User Guide

### Contents [ hide ]

- 1 Special Solutions and Modifications
- 2 Lower output ripple
- 3 Higher stability
- 4 Polarity reversal
- 5 Higher adjustment resolution
- 6 Current measuring range
- 7 Interlock loop
- 8 Arc detection
- 9 Arc mode & arc counter
- 10 Power regulation
- 11 Adjustable overcurrent trip
- 12 Message/Detection
- 13 Mains options
- 14 Lockable mains plug
- 15 Alternative output sockets
- 16 Documents / Resources
  - 16.1 References

# **Special Solutions and Modifications**



For quick access, click on the links below:

Lower output ripple	→ Click here	Arc mode & arc cou	→ Click here
Higher stability	→ Click here	Power regulation	→ Click here
Polarity reversal	→ Click here	Adjustable overcurr ent trip	→ Click here
Higher adjustment resolution	→ Click here	Message/Detection	→ Click here
Digital meters with higher resolution	→ Click here	Slew rate	→ Click here
Current measuring range	→ Click here	Mains options	→ Click here
Interlock loop	→ Click here	Lockable mains plu	→ Click here
Arc detection	→ Click here	Alternative output s ockets	→ Click here

More details or resources on request. Please consult XP Power Sales directly.

# Lower output ripple

Lower ripple can be achieved with improved smoothing.

Device	Power	Ripple
	≤ 35W	<1 x 10 <sup>-5</sup> + 10mVpp
НСР	140W to 700W	<1 x 10 <sup>-5</sup> + 20mVpp

	≥ 1.4kW	<1 x 10 <sup>-5</sup> + 100mVpp
	≤ 35W	<1 x 10 <sup>-5</sup> + 20mVpp
MCP	140W to 700W	<1 x 10 <sup>-5</sup> + 30mVpp
	≥ 1.4kW	<1 x 10 <sup>-5</sup> + 100mVpp

- **▶** HCP
- ► MCP

### Notes:

Factory fit option only. Post-production modification is not possible.

### **Higher stability**

Voltage and/or current regulation with improved long-term stability and lower temperature coefficient.

- ► Stability over 8 hours under constant conditions: <±1 x 10<sup>-5</sup>
- ► Temperature coefficient <±1 x 10<sup>-5</sup>/K within the specified temperature range

#### **Available for series:**

- **▶** HCP
- **►** MCP
- ► MCA
- ► NTN
- ► HCK


#### Notes:

Factory fit option only. Post-production modification is not possible.

# **Polarity reversal**

### Up to 65kV

The POLARITY option allows the user to switch the high voltage output polarity between positive or negative.

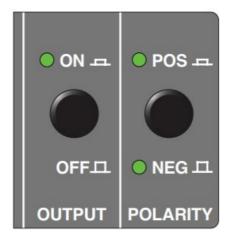

It is possible to remote control the polarity change of HCP models that are equipped with an analog programming or digital interface.

#### Available for series:


- **▶** HCP
- ► HCK
- ► NTN

#### Notes:

A polarity reversal switch can be retrofitted at the factory on most models. Please contact sales.

### Above 65kV

Manual switch for changing polarity.

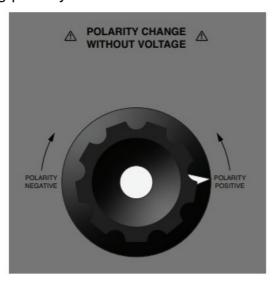

### Available for series:

► HCP

► HCK

### Notes:


Factory fit option only. Post-production modification is not possible.

# Higher adjustment resolution


By the addition of a ten-turn fine potentimeter, set point resolution will be increased by a factor of 100 by fine adjustment of the current and/or voltage. The adjustment range is 0-99% with a 1% tolerance.

► Set point resolution  $<\pm 1 \times 10^{-5}$  of rated value with fine potentiometer.

### For voltage

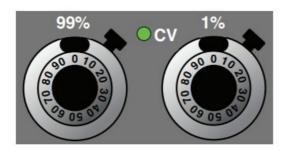

### For current

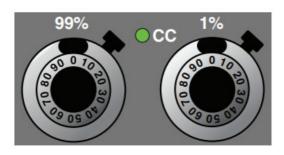

### **Available for series:**

- **►** HCP
- ► HCK
- ► MCA
- **►**MCP
- ► NTN
- **►** NLN

Digital meters with higher resolution

Digital meters with higher resolution >4 1/2 digit

Higher resolution 4¾ or 5/2 digit meters for voltage and current available as a factory fit option.

### Available for series:

- **▶** HCP
- **►** MCP
- ► MCA
- ► HCK
- ► NTN

### **Notes:**

Applicable only to new units with >4 1/2 digit resolution digital meters in combination with a higher stability

### .High precision current measurement

This option uses a picoampere meter with circuit protection.

### Available for series:

- **►** MCP
- ► HCP

#### Notes:


On request, please contact sales.

### **Current measuring range**

### **Current measuring range switch**

The range switch can be used to alter the current measuring range. For example, to resolve smaller currents more accurately.

The values shown are for example and can vary depending on the model.

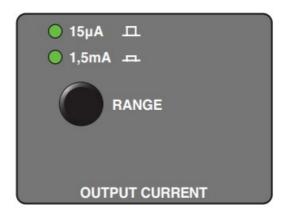

▶HCP

### Interlock loop

Interlock loop for supervising the connected load (e.g. door contacts):

The Interlock loop is connected via a 3-pin Minicon connector on the rear panel. The interlock loop must be completed through a potential free wire link/contacts.

If the interlock loop is closed, the output voltage is switchable via the ON/OFF switch with output status indicated by the green LED.

On interruption of the interlock loop, the output will shutdown via mains disconnect and the INTERLOCK EXTERNAL LED will illuminate red indicating an open interlock loop. To resume operation it is then necessary to press the RESET button.

The RESET button and status LEDs are located on the front panel.





### Available for series:

► HCP

- ► HCK
- ► MCA
- **►**MCP
- ► NTN
- ► NLN
- ► HCB

### Notes:

Please note this is not suitable for personal safety protection.


Optional control via digital interface: The RESET command can be sent via the remote interface and used to switch the device ON again.

### **Interlock loop for Programmable Logic Controller (PLC):**

Interlock operation and reset are connected via the 9 pin D-sub connector on the rear panel.

A live output is indicated by the LED showing green.

An open interlock loop is indicated by the LED showing red and the HV output is switched off.

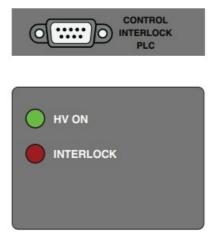

### **Available for series:**

- ► HCP
- ► HCK
- ► MCA
- ► MCP
- ► NTN
- ► NLN

### Notes:

Please note this is not suitable for personal safety protection.

### Arc detection

Sensitivity level setting optionally with shut down.

### Optimized arc (flashover) protection

Protection of the device in the event of a short circuit by adapting the dielectric strength of the output capacitors to a higher externally applied voltage.

### **Available for series:**

► HCP

### Arc sensor

Monitoring for over-current/high voltage arc with indication, shut down or arc counter. Different versions are available:

#### Version 1

The arc detection isolates the HV output, indicated by the red LED. The sensitivity level is adjusted by the potentiometer. The isolated HV output can be reactivated using the RESET button.




#### Available for series:

- ► HCP
- **►** MCP

#### Version 2

The arc detection isolates the HV output, indicated by the red LED, for an adjustable time range (0 to 10ms) controlled by the potentiometer. The function can be switched off

via the detection toggle switch.

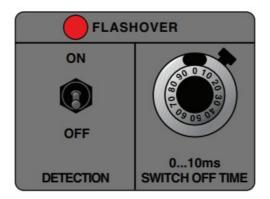

### Available for series:

- **►** HCP
- **►** MCP

### Arc mode & arc counter

Arcs are detected and counted. The HV output is isolated when the set counter value is reached.

The number of arcs are shown on the display for 1 minute. During this time, the device can output a message via an optional interface. The counter reading can be reset to 00 at any time using the RESET button. The arc counter can be switched off.

Arc mode has an adjustable delay and ramp function. Arc delay sets the time range (50ms to 500ms) after which the HV output is isolated following the flashover. The arc ramp potentiometer sets the time (0.4s to 4s) for the HV output to reach its full setpoint, following isolation triggered by a flashover event. Following the delay time, arc ramp increases the output from zero to the predefined voltage.




► HCP

### **Power regulation**

In addition to voltage and current control, the output power can be controlled. The control mode gives priority to the lowest value setting. The power output can be set between zero and the rated device power using the power regulation potentiometer. The digital meter indicates the output power delivered, reading accuracy is approximately 2% of final value. The green LED illuminates once the set power is reached.

Power regulation with display and adjustment

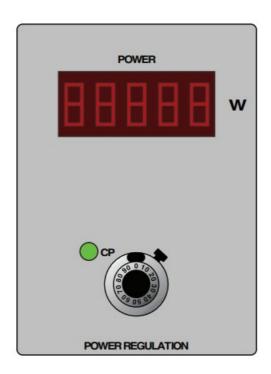


### **Available for series:**

- ► HCP
- ► MCP

# Adjustable overcurrent trip

### Overcurrent trip with RESET

The overcurrent trip isolates the output when the current limit is reached, indicated by the red LED, and is restored via the RESET button. The value of the current limit is set using the current setting potentiometer.

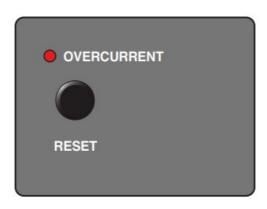

- **►** HCP
- **►**MCP

### Overcurrent trip switchable with RESET

The overcurrent trip isolates the output when the current limit is reached, indicated by the red LED, and is restored via the RESET button. The value of the current limit is set using the current setting potentiometer. This function is selectable via the ON/OFF switch.



#### Available for series:

- ► HCP
- **►** MCP
- ► MCA

#### Notes:

Optional control via interface:

The corresponding commands and the message also work via the interface.

### Overcurrent trip switchable

The overcurrent trip isolates the output when the current limit is reached, indicated by the red LED, and is restored via the ON/OFF switch. The value of the current limit is set

using the current setting potentiometer.



### Available for series:

- ► HCP
- **►** MCP

#### Notes:


Optional control via interface:

The corresponding commands and the message also work via the interface.

### Message/Detection

Message/Detection "Output voltage <50V" The yellow LED on the front panel illuminates when the output voltage is <50V.

The status is available remotely via a potential-free signal on the 4-pole minicon socket mounted on the rear panel.

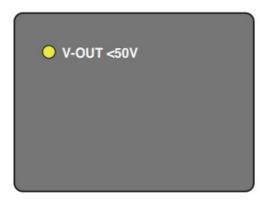

### Available for series:


- **▶** HCP
- ► MCP

## Message/Detection "Output voltage <50V"

The yellow LED on the front panel illuminates when the output voltage is <50V.

The status is available remotely via a potential-free signal on the 6-pole minicon socket

mounted on the rear panel.

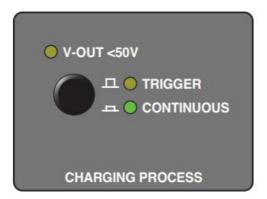

### Available for series:

► HCK

### Slew rate

The speed at which the voltage rises from zero to the maximum output voltage is limited by the hardware to a few seconds. Longer ramp-up times can be set via the potentiometers or via the Digital interface option.

### Available for series:

- ► HCP
- ► HCK
- ► MCP
- ► MCA
- ► NTN

### **Electronic slew rate control**

The slew rate control adjusts the time for the voltage or current to rise from zero to the setpoint and vice versa. The ramp time for a change in current can only be adjusted with a tool. Each setpoint change (on the front panel or via the interface) is determined by the slew rate setting.



- **►** MCP
- ► HCP

### Hardware slew rate control

The duration of the slew rate for a change in current can be set via the potentiometers or via the digital interface option.

#### Available for series:

- **►** MCP
- **▶** HCP

### **Mains options**

### Mains voltage & frequency options


As a standard, our units are designed for a 230V±10%, 50Hz or a three-phase 400V±10%, 47 to 63Hz mains supply. Most units can be modified in production for country specific mains values.

#### **Notes**

On request, please contact sales.

### Two mains input


Separate mains inputs for the power stage and the control electronics.

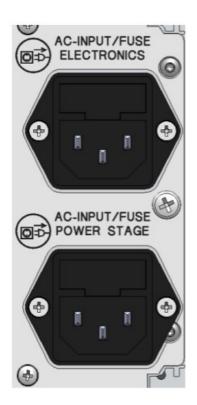

- **►** HCE
- **►** MCP
- ► HCP
- ► MCA
- ► NTN

### Switchable mains voltage

The mains voltage is switchable between two different values (e.g. 115V±10% and 230V±10%).

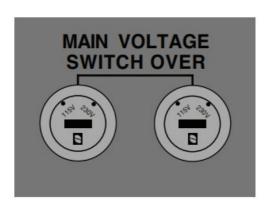

### **Available for series:**

- ► HCP
- ► MCP
- ► NTN
- ► NLN

#### Notes:

A switchable mains input between 115V and 230V is only possible for devices with an output power of up to 140W.

### 24VDC/48VDC input supply

The supply voltage with 24VDC±10%/ 48VDC±10%.

#### Available for series:

- ► MCP
- ► HCP

### **Notes**

On request, please contact sales.

### Mains input with higher isolation

For special applications (e.g. the operation at a high voltage platform), the standard isolation of the unit may be not sufficient. Units can be ordered with isolation up to >200kV.

### **Notes**

On request, please contact sales.

# Lockable mains plug

Some customers prefer a lockable mains plug.



#### **Notes**

On request, please contact sales.

### **Alternative output sockets**

Non-standard output sockets are available on customer request, provided they meet the

safety requirements.

#### **Notes**

On request, please contact sales.



More details or resources on request. Please consult <u>XP Power Sales</u> directly.

04 March 2025

# **Documents / Resources**



XP Power Special Solutions and Modifications [pdf] User Guide HCP, MCP, Special Solutions and Modifications, Solutions and Modifications, and Modifications

### References

	ш	000	N /	-	
•	U	lser	IV	ıaı	Iuai

■ XP ■ and Modifications, HCP, MCP, Solutions and Modifications, Special Solutions and Modifications, XP Power Power

# Leave a comment

Your email address will not be published. Required fields are marked\*

Comment *	

Name

Email
Website
Save my name, email, and website in this browser for the next time I comment.
Post Comment

### Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.